Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

cuarko DT-PT03

cuarko Remote Control Page Turner User Manual (Model DT-PT03)

Model: DT-PT03 | Brand: cuarko

Introduction Components Setup Operation Compatibility Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

The cuarko Remote Control Page Turner (Model DT-PT03) is designed to enhance your e-reading experience by allowing you to remotely turn pages on compatible devices. This device offers hands-free operation, quiet page turning, and extended battery life, making reading more comfortable and convenient. It also features remote photo and video capture capabilities for smartphones and tablets.

2. Package Contents

Please verify that all items are present in your package:

- Remote Control x 1
- Screen Sensor Clip x 1
- USB-C Charging Cable x 1
- Wrist Strap x 1
- Storage Bag x 1
- User Manual x 1

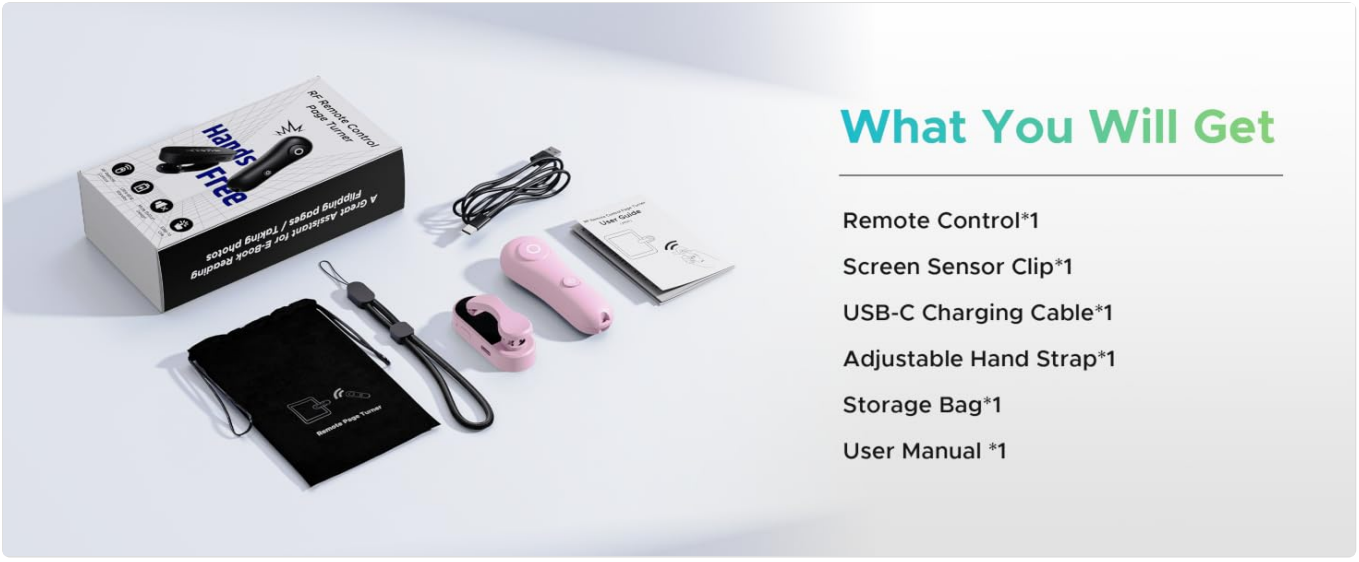


Image: Contents of the cuarko Remote Control Page Turner package.

3. Setup Guide

3.1 Charging the Device

Before initial use, ensure both the Remote Control and the Screen Sensor Clip are fully charged. Use the provided USB-C charging cable.

- **Remote Control:** Approximately 1.5 hours for a full charge.
- **Screen Sensor Clip:** Approximately 1.5 hours for a full charge.



Image: The remote control and screen sensor clip connected to a USB-C charging cable.

For optimal battery life, it is recommended to charge the clip weekly.

3.2 Pairing Instructions

1. **Step 1:** Press and hold the button on the remote control. The green light will illuminate and then turn off.

2. **Step 2:** Press the button on the screen sensor clip. The indicator light will flash green slowly. Then, press and hold it again until the green light flashes rapidly.
3. **Step 3:** Press and hold the button on the remote control again. The indicator light on the clip will stop flashing, indicating successful pairing.
4. **Step 4:** Clip the screen sensor onto your device's screen in a suitable position. Press the button on the remote control to test page turning.

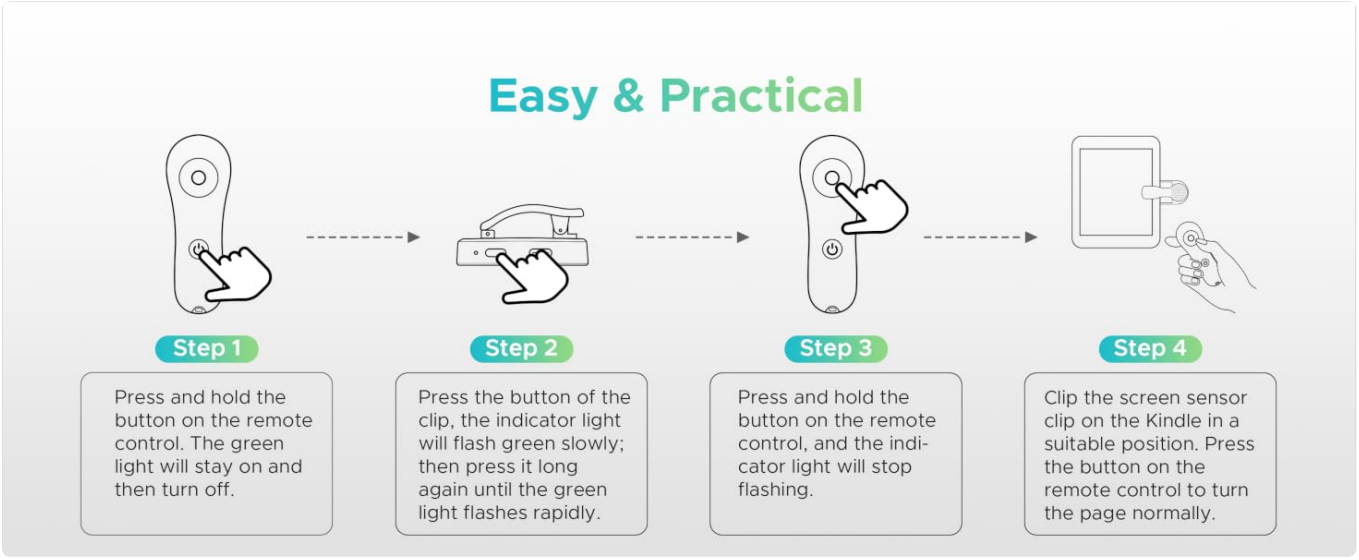


Image: Visual guide for the pairing process of the cuarko page turner.

3.3 Screen Sensor Clip Placement

Ensure the metal point of the screen sensor clip makes direct contact with the capacitive screen of your device. The clip is designed to be case-friendly and can accommodate devices up to 18.5mm (0.73 inches) thick, including most protective cases and stands.



Image: The page turner clip demonstrating its compatibility with thick device cases.

Note: The device can only turn pages in one direction at a time. Position the clip on the side of the screen corresponding to the desired page turn action (e.g., right side for next page, left side for previous page).

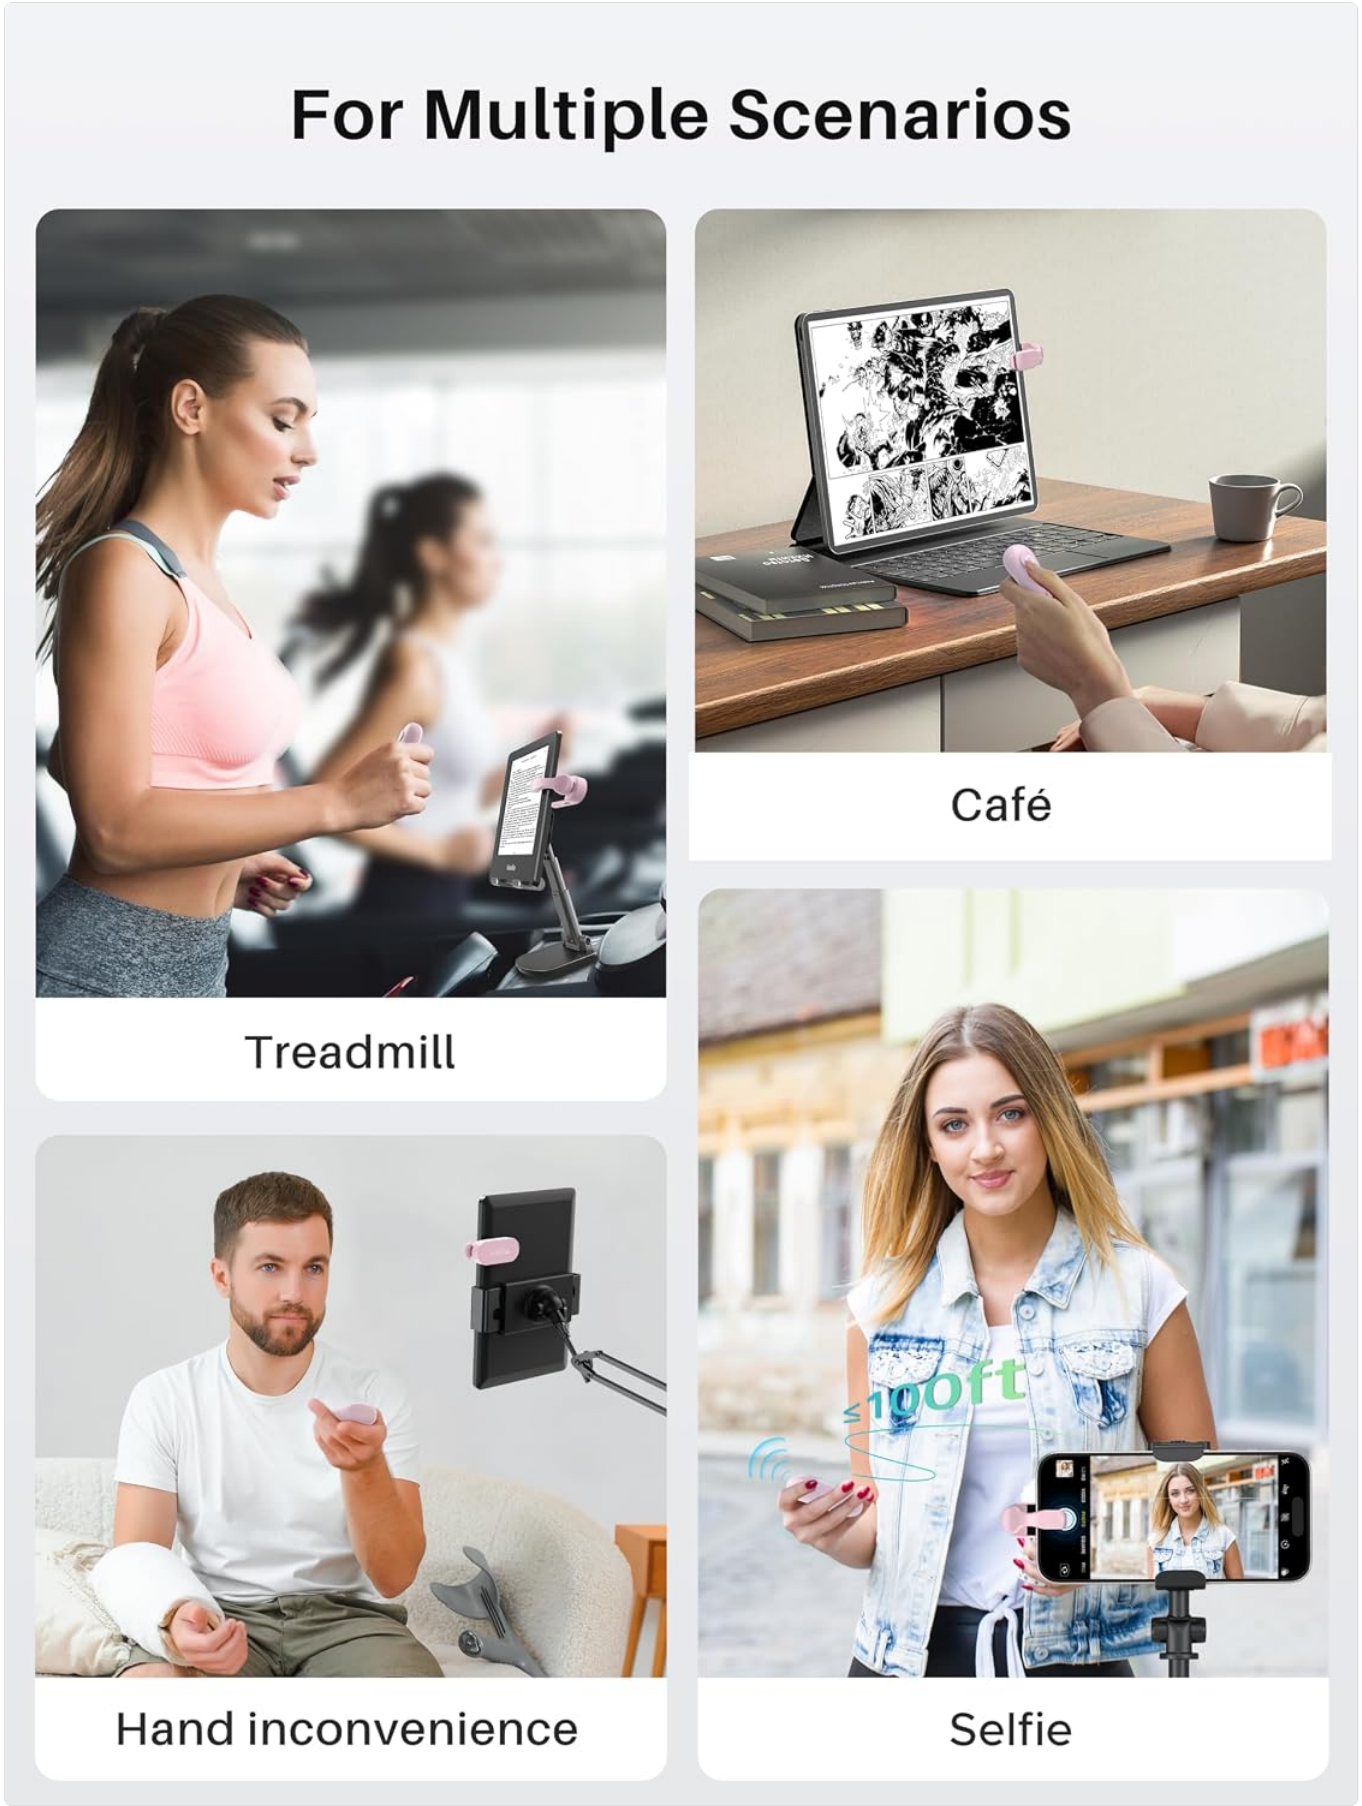


Image: Proper placement of the screen sensor clip for page turning.

4. Operating Instructions

4.1 Page Turning

Once paired and the screen sensor clip is correctly positioned, simply press the button on the remote control to turn pages on your e-reader or tablet. The quiet click design ensures minimal disturbance during use.

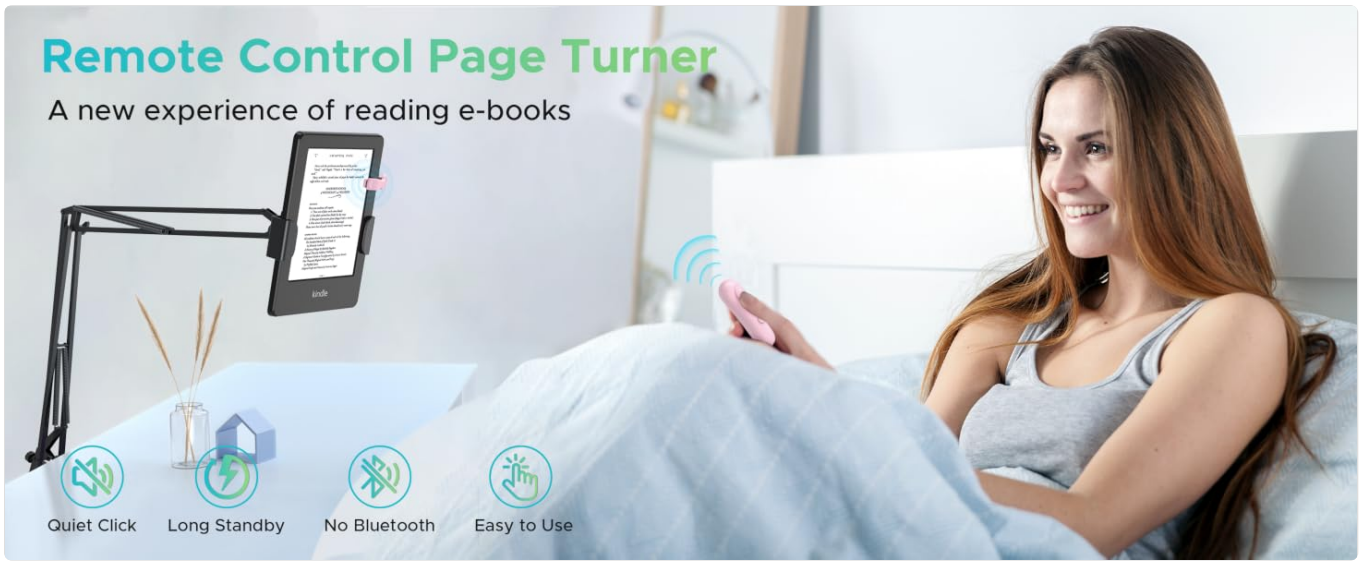


Image: User enjoying hands-free reading with the page turner.

▶ **Watch video online**

RF Remote Control Page Turner for Kindle Paperwhite Oasis

Video: Demonstration of the cuarko RF Remote Control Page Turner in action, showing sensitive page turning without delay.

4.2 Remote Photo & Video Capture

The page turner can also function as a remote shutter for your smartphone or tablet camera. To use this feature:

1. Open your device's camera application.
2. Clip the screen sensor onto the on-screen shutter button.
3. Press the button on the remote control to capture photos or start/stop video recording.

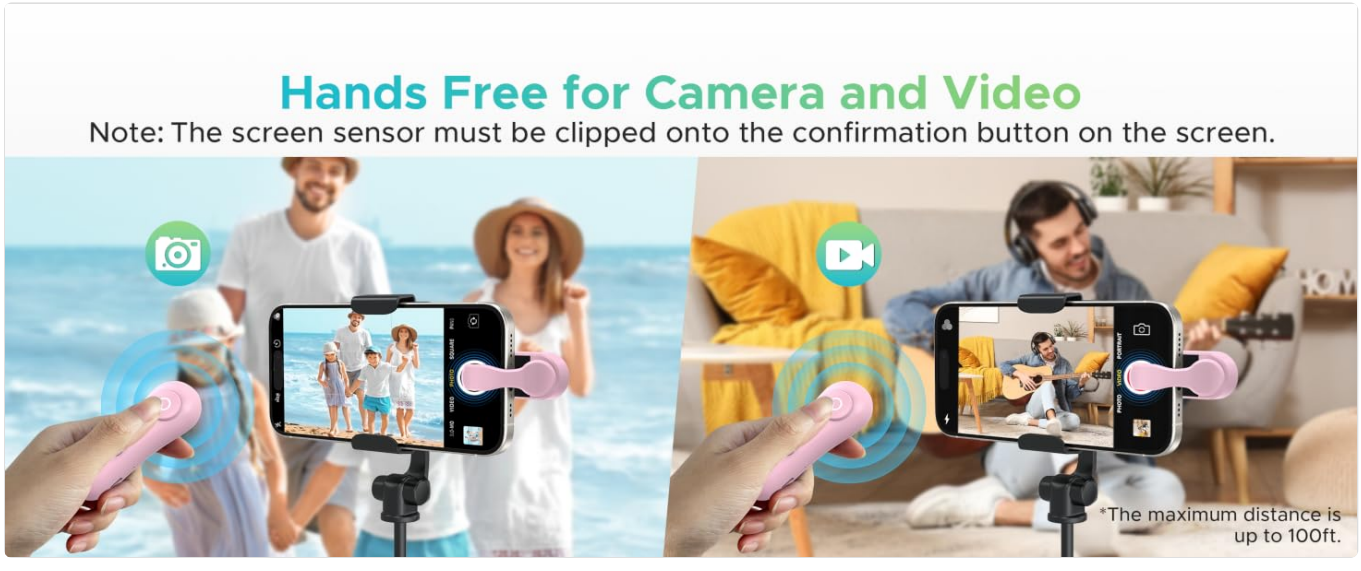


Image: Using the page turner for hands-free photo and video capture with a smartphone.

5. Device Compatibility

The cuarko Remote Control Page Turner is compatible with most capacitive touch screen devices.

Compatible Devices:

- Kindle (including Kindle 10/11, Paperwhite, Oasis, Kids Edition, Voyage, Scribe)
- Kobo eReaders
- iPhone
- iPad
- Android Tablets
- Microsoft Surface

Incompatible Devices:

- Kindle 7th Generation
- Kindle 8th Generation
- Amazon Fire HD 10 (10th/11th generation)

Important: Please check your Kindle model before purchase or use to ensure compatibility.

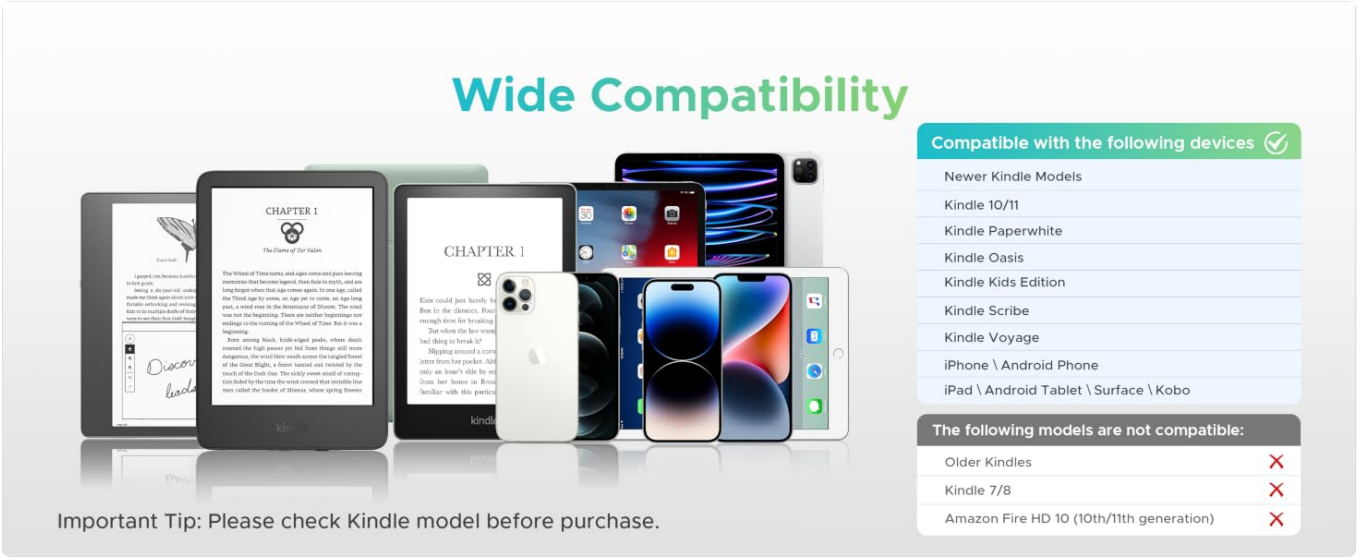


Image: Overview of compatible and incompatible devices for the page turner.

6. Maintenance

6.1 Battery Life and Charging

The device features an ultra-long battery life:

- **Remote Control:** A full charge (1.5 hours) provides approximately 150 days of use, based on 2 hours of daily reading.
- **Screen Sensor Clip:** A full charge (1.5 hours) provides approximately 15 days of use, based on 2 hours of daily reading.

To prolong battery life, it is recommended to charge the screen sensor clip weekly.

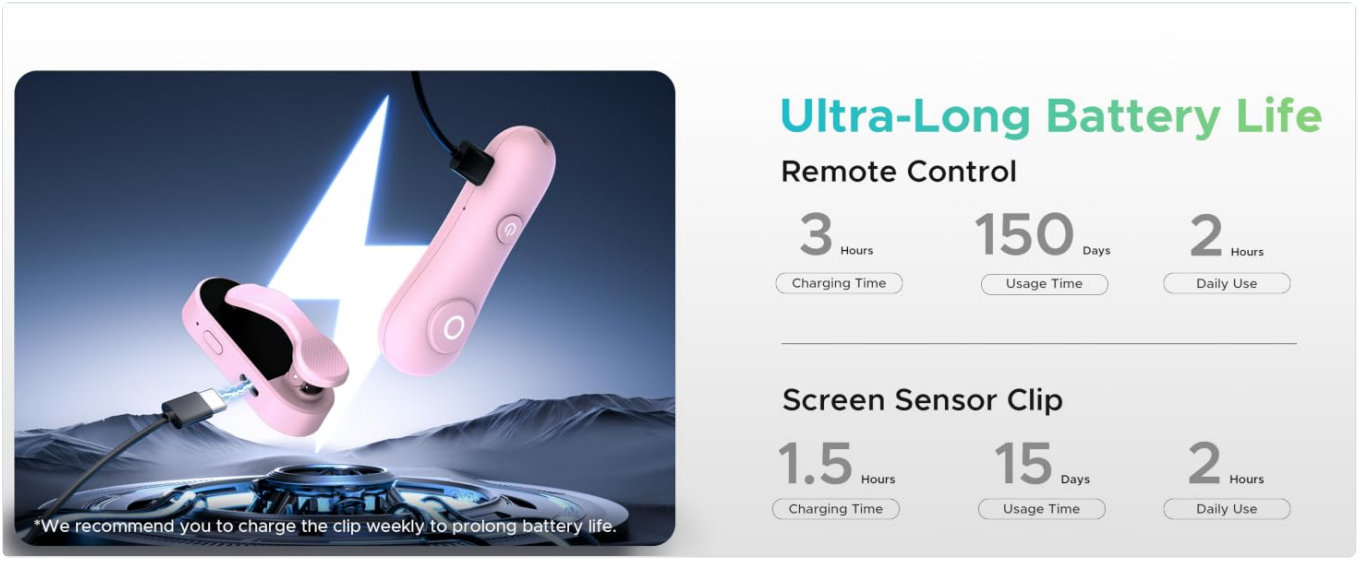


Image: Detailed battery life and charging information for the page turner components.

6.2 Cleaning and Storage

- Wipe the devices with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- When not in use, store the remote control and screen sensor clip in the provided storage bag to prevent loss and protect them from dust and damage.



Image: The page turner components, wrist strap, and storage bag for convenient portability and storage.

7. Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Device not turning pages.	Not paired, low battery, incorrect clip placement, incompatible device.	• Ensure both remote and clip are charged. • Re-attempt pairing as per Section 3.2. • Verify the metal point of the clip is touching the screen. • Check device compatibility in Section 5.
Remote control unresponsive.	Low battery, out of range.	• Charge the remote control. • Ensure the remote is within 160 feet (48 meters) of the clip.
Page turns are inconsistent or skip pages.	Clip not securely attached, screen protector interference, device sensitivity.	• Adjust the clip to ensure firm contact with the screen. • Try repositioning the clip slightly. • Ensure the screen is clean.

If you encounter any issues not listed here or if the suggested solutions do not resolve the problem, please contact customer support.

8. Product Specifications

Feature	Detail
Brand	cuarko
Model Name/Number	DT-PT03
Color	Pink
Special Features	Ergonomic, Wireless, Rechargeable, Quiet Click, Case-Friendly
Connectivity Technology	Radio Frequency
Maximum Range	160 feet (approx. 48 meters)
Battery Type	Lithium Metal, Lithium Polymer
Charging Time (Remote/Clip)	Approx. 1.5 hours each
Usage Time (Remote)	Approx. 150 days (2 hours/day)
Usage Time (Clip)	Approx. 15 days (2 hours/day)

Feature	Detail
Max Device Thickness for Clip	18.5mm (0.73 inches)
UPC	721295572811
Manufacturer Part Number	cuarko-DT-PT03

9. Warranty and Support

cuarko provides a 36-month service period for this product, ensuring customer satisfaction. Our product has undergone rigorous testing, including 1000+ drops and 5000+ button presses, and is certified by FCC, CE, and RoHS.
For any problems, compatibility issues, or inquiries, please contact our dedicated customer service team. We aim to respond within 18 hours.
You can typically find contact information through your purchase platform or the official cuarko website.



Image: Official certifications for product quality and safety.

© 2023 cuarko. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DQ56VDPK

More documents and user manuals: **https://manuals.plus/**