Enya INSPIRE-Ozeilzinho

Enya Electric Guitar Inspire User Manual

Model: INSPIRE-Ozeilzinho
Brand: Enya

1. Introduction

This manual provides essential information for the safe and effective use of your Enya Electric Guitar Inspire. Please read this manual thoroughly before operating the instrument to ensure proper setup, operation, and maintenance. Retain this manual for future reference.

2. Safety Guidelines

- **Power Source:** Use only the provided charging cable and a compatible power adapter. Ensure the voltage matches the product's requirements.
- **Water and Moisture:** Do not expose the guitar to water, rain, or excessive humidity. Avoid operating it with wet hands.
- **Temperature:** Avoid extreme temperatures. Store and operate the guitar within recommended temperature ranges to prevent damage to the carbon fiber and electronic components.
- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Servicing:** Do not attempt to disassemble or repair the guitar yourself. Refer all servicing to qualified personnel.
- **Battery Safety:** The guitar contains a rechargeable battery. Do not expose the battery to excessive heat, direct sunlight, or fire. Do not puncture or attempt to replace the battery.

3. Package Contents

Verify that all items listed below are included in your package:

- Enya Electric Guitar Inspire (Ozeilzinho Collaboration Model)

- Gig Bag
- Charging Cable (USB-C)
- Hex Wrenches (for truss rod and bridge adjustments)



Figure 3.1: Enya Electric Guitar Inspire and its accessories, including the gig bag, charging cable, and adjustment tools.

4. Product Overview

The Enya Electric Guitar Inspire is a full-size smart electric guitar featuring a carbon fiber body, an integrated 15W wireless speaker, and advanced digital sound processing (DSP) for 20 distinct tones and onboard presets. It is designed for portability and versatile playing experiences.

4.1 Key Components

- **Body:** Carbon fiber composite construction for durability and resonance.
- **Neck:** Super comfortable "C" shaped neck with patented string tension adjustment system.
- **Pickups:** SSH (Single-Single-Humbucker) configuration.
- **Bridge:** Double rocking spring design.
- **Onboard Speaker:** 15W wireless speaker for direct sound output.
- **Controls:** Volume knob, tone knob, preset button, input/output jacks.
- **USB-C Port:** For charging and connecting to computers for virtual amp software.



Figure 4.1: Detailed view of the guitar's front and back, highlighting key features such as the neck profile, pickup configuration, and integrated speaker.

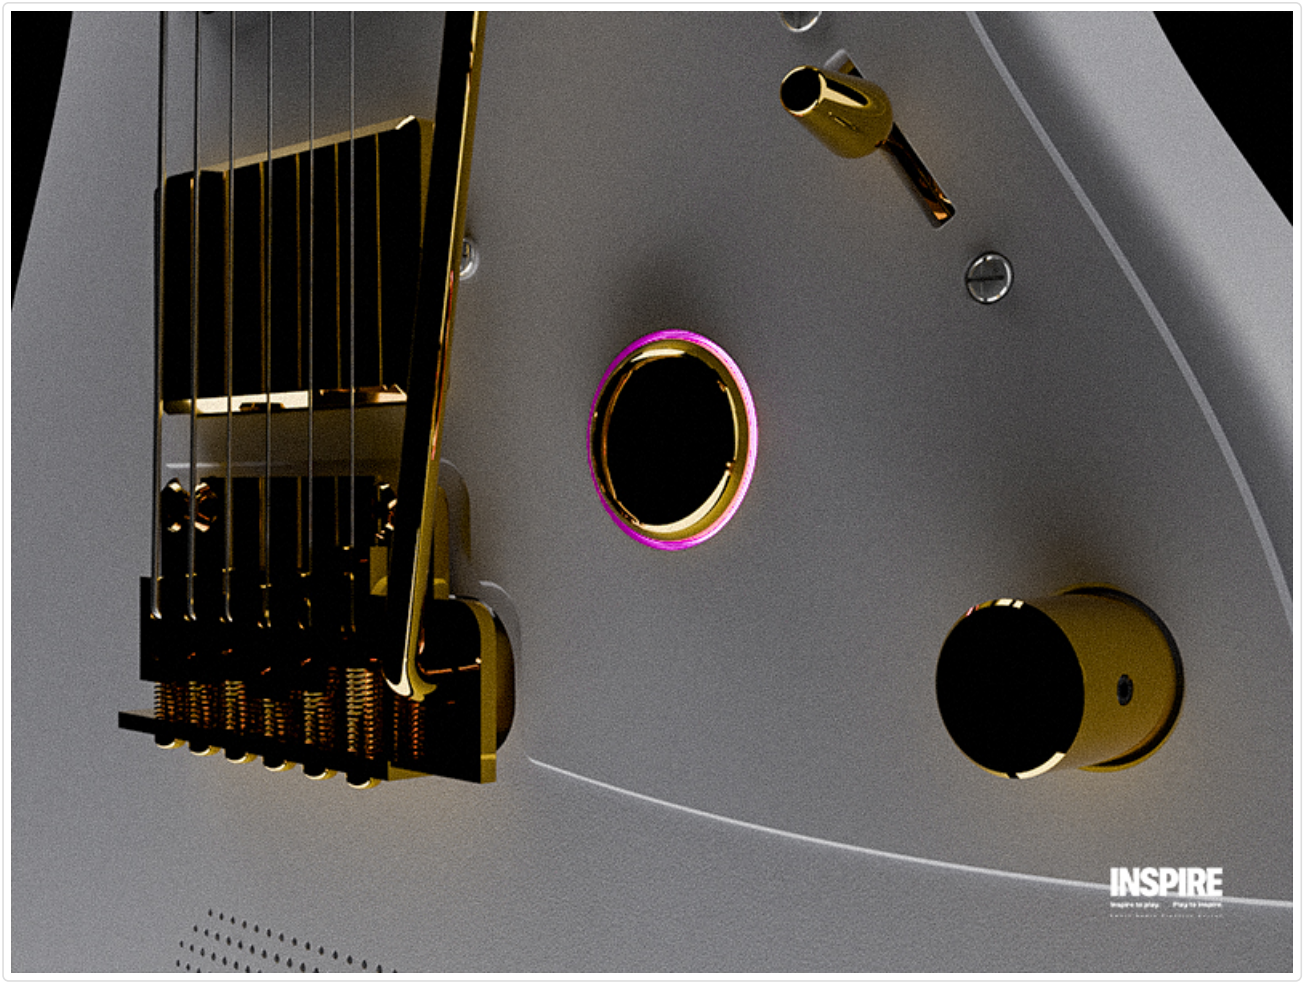

Figure 4.2: Close-up of the guitar's bridge, pickups, and control layout, including the speaker grille.



Figure 4.3: Detail of the zero nut, which contributes to stable tuning and playability.

5. Initial Setup

5.1 Charging the Guitar

Before first use, fully charge the guitar's internal battery. Connect the provided USB-C charging cable to the guitar's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

5.2 Powering On/Off

To power on the guitar, press and hold the power button located on the body until the indicator light illuminates. To power off, press and hold the power button again until the light turns off.

5.3 String Tension Adjustment

The guitar features a patented string tension adjustment system. Minor adjustments can be made using the provided hex wrench. For significant adjustments or truss rod adjustments, it is recommended to consult a qualified guitar technician.

6. Operation

6.1 Using the Onboard Speaker

The Enya Inspire features a powerful 15W onboard speaker, allowing you to play without an external amplifier. Simply power on the guitar, and the sound will be routed through the internal speaker. This provides unmatched convenience for practice and casual playing.

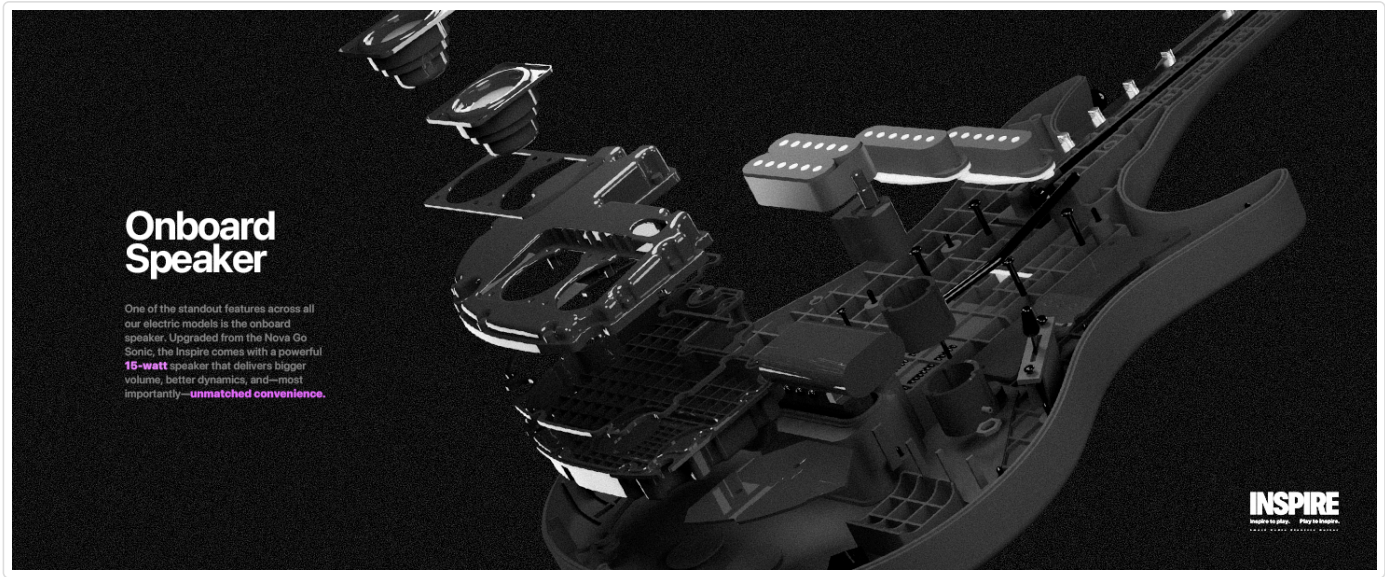

Figure 6.1: Internal view illustrating the integrated onboard speaker system.

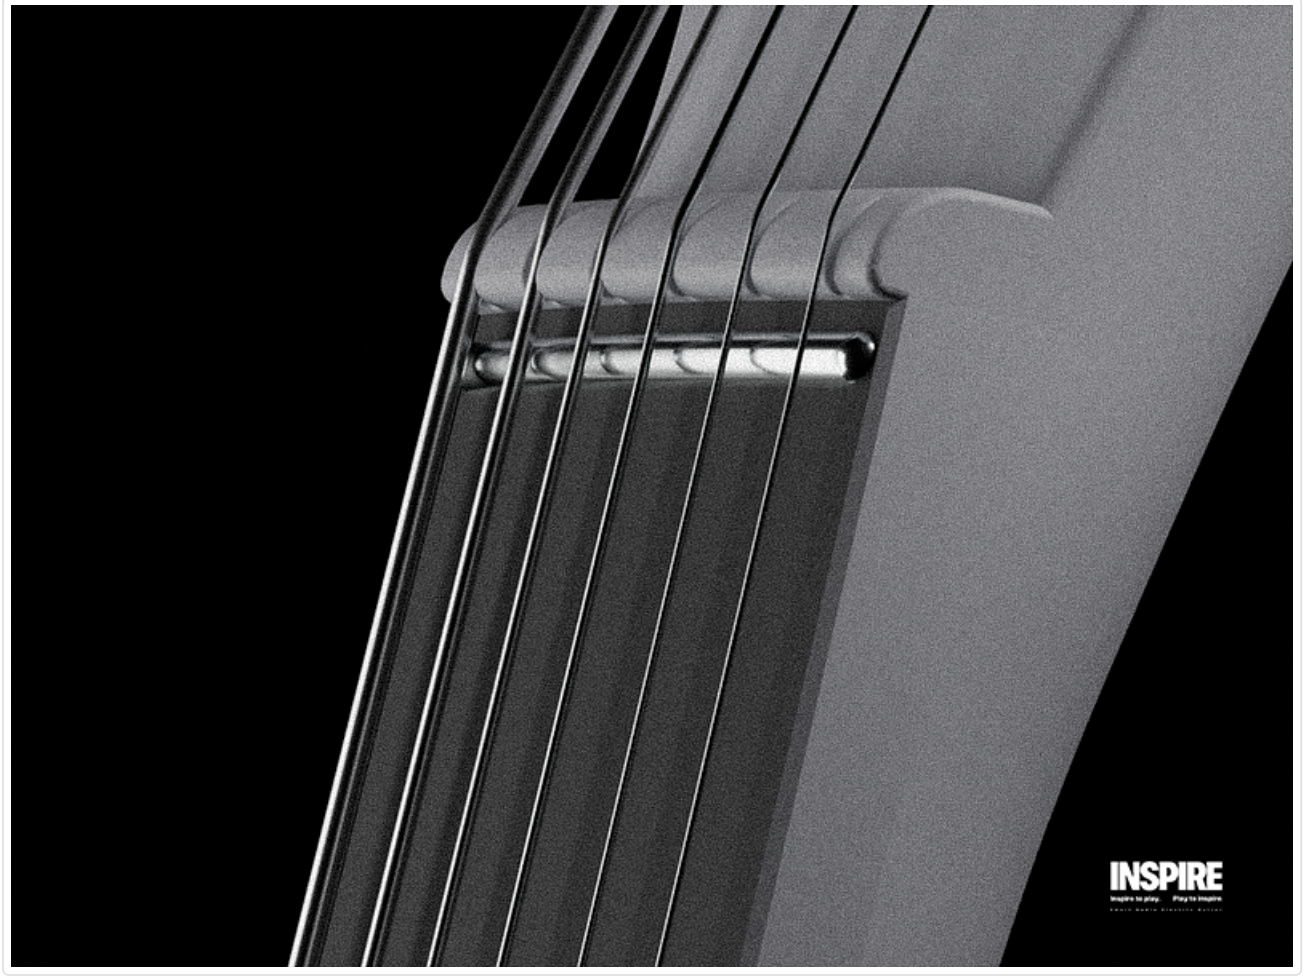

Figure 6.2: Detailed view of the onboard speaker grille.



Figure 6.3: The convenience of the 15W wireless speaker for untethered playing.

6.2 Exploring Tones and Presets

The guitar comes with 20 distinct tones and onboard presets, powered by an integrated DSP chip. These can be accessed and cycled through using the dedicated preset button on the guitar's body. Experiment with different presets to find the sound that suits your playing style.

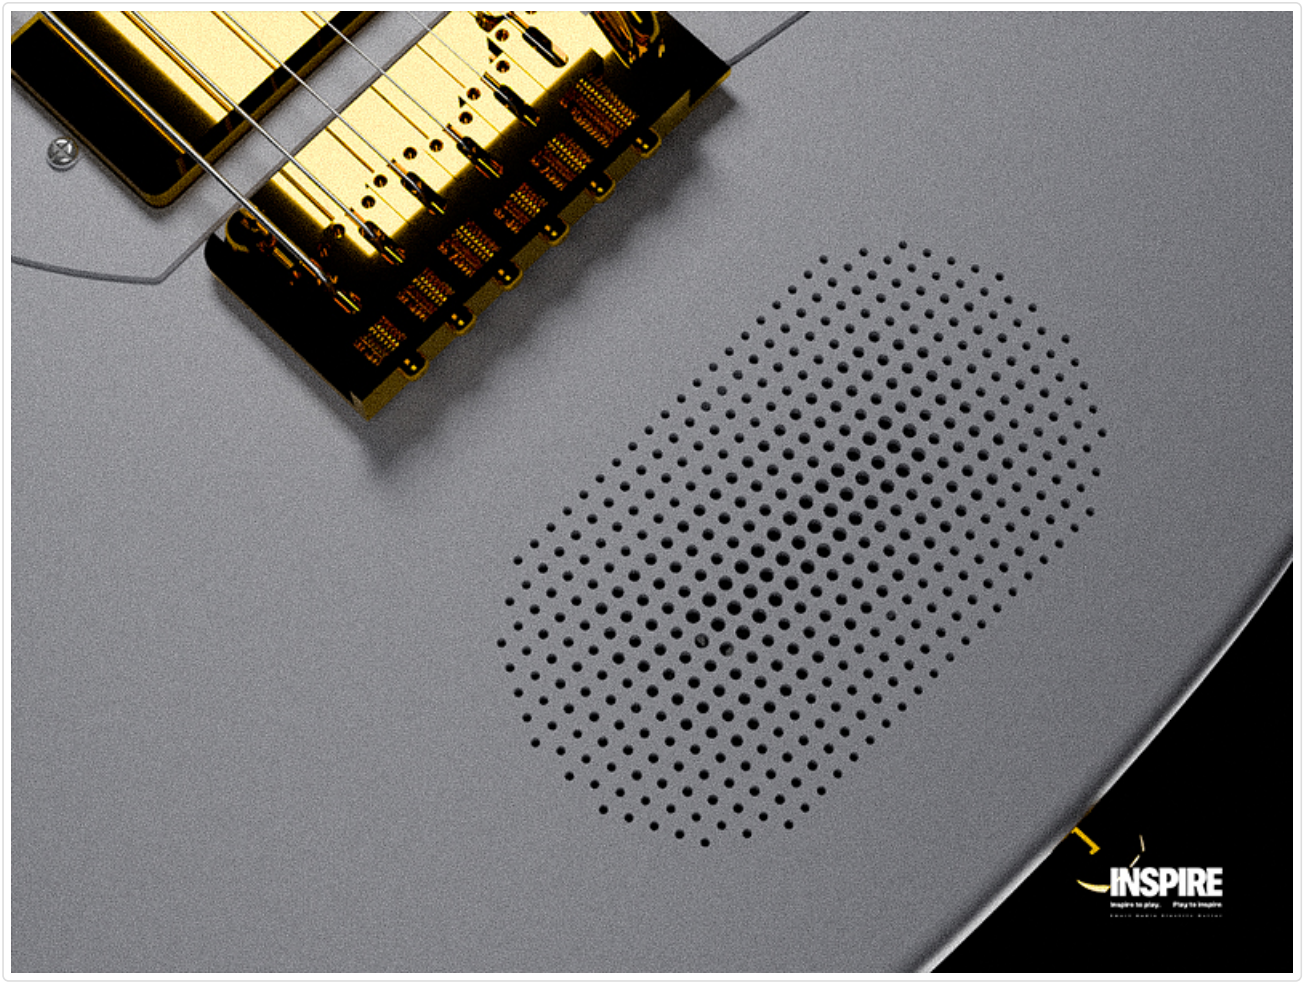

Figure 6.4: The DSP chip enables a wide range of tones and effects.

6.3 Using the Enya Music App

For deeper customization and access to more features, download the Enya Music App on your smartphone or tablet. The app allows you to:

- Adjust and fine-tune existing presets.
- Create and save custom tones.
- Access Bluetooth backing tracks for play-along sessions.
- Control various effects and parameters.

Connect the guitar to the app via Bluetooth. Refer to the app's in-app instructions for detailed usage.

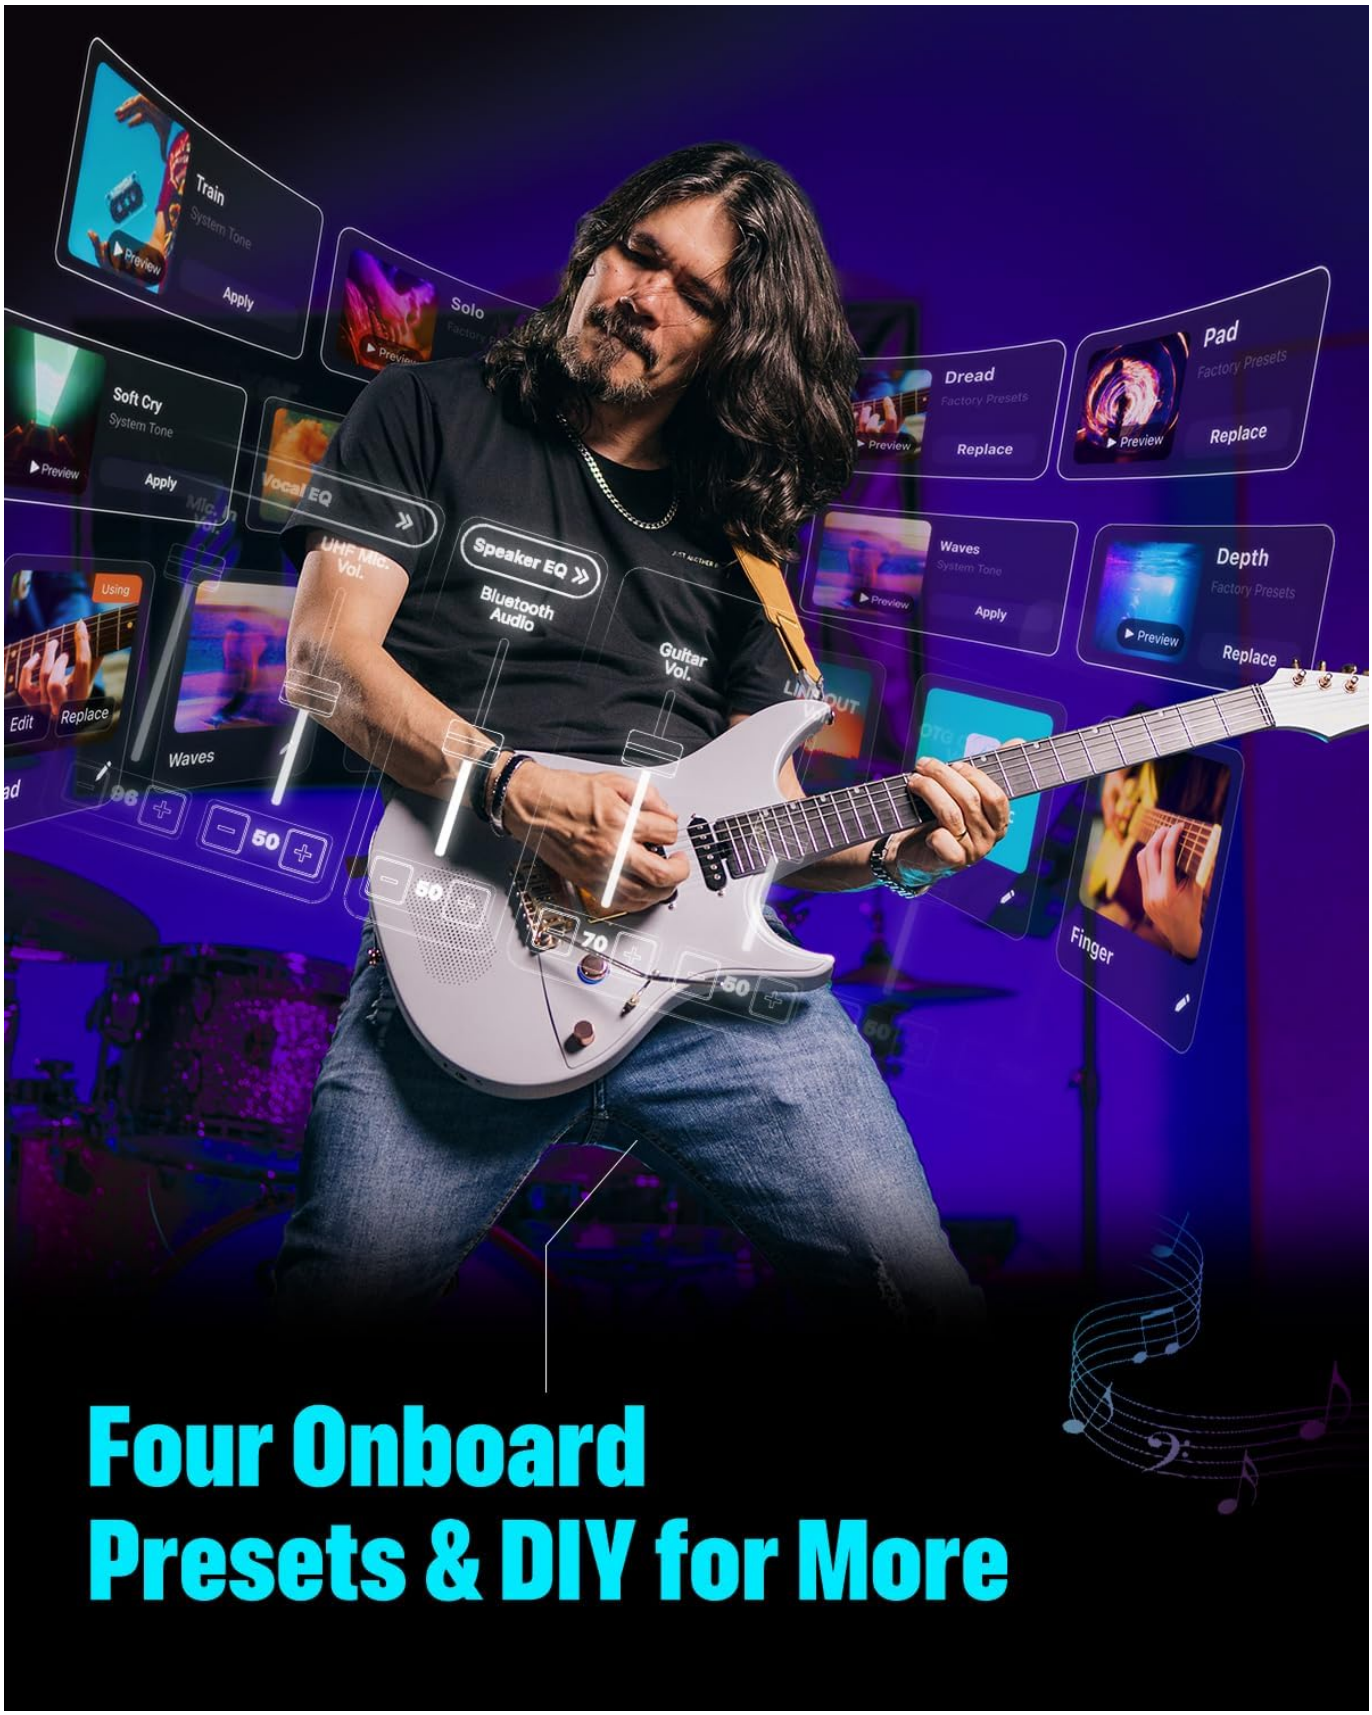

Figure 6.5: The Enya Music App provides extensive tone customization and control.

6.4 Connecting to External Devices

- **Headphones:** Connect standard 3.5mm headphones to the guitar's headphone jack for silent practice.
- **External Amplifier:** Use a standard 1/4-inch instrument cable to connect the guitar to an external amplifier for louder output or live performance.
- **Computer (USB-C):** The USB-C port allows you to connect the guitar to a computer for use with virtual amplifier

software or digital audio workstations (DAWs). This enables direct recording and access to a wider range of digital effects.

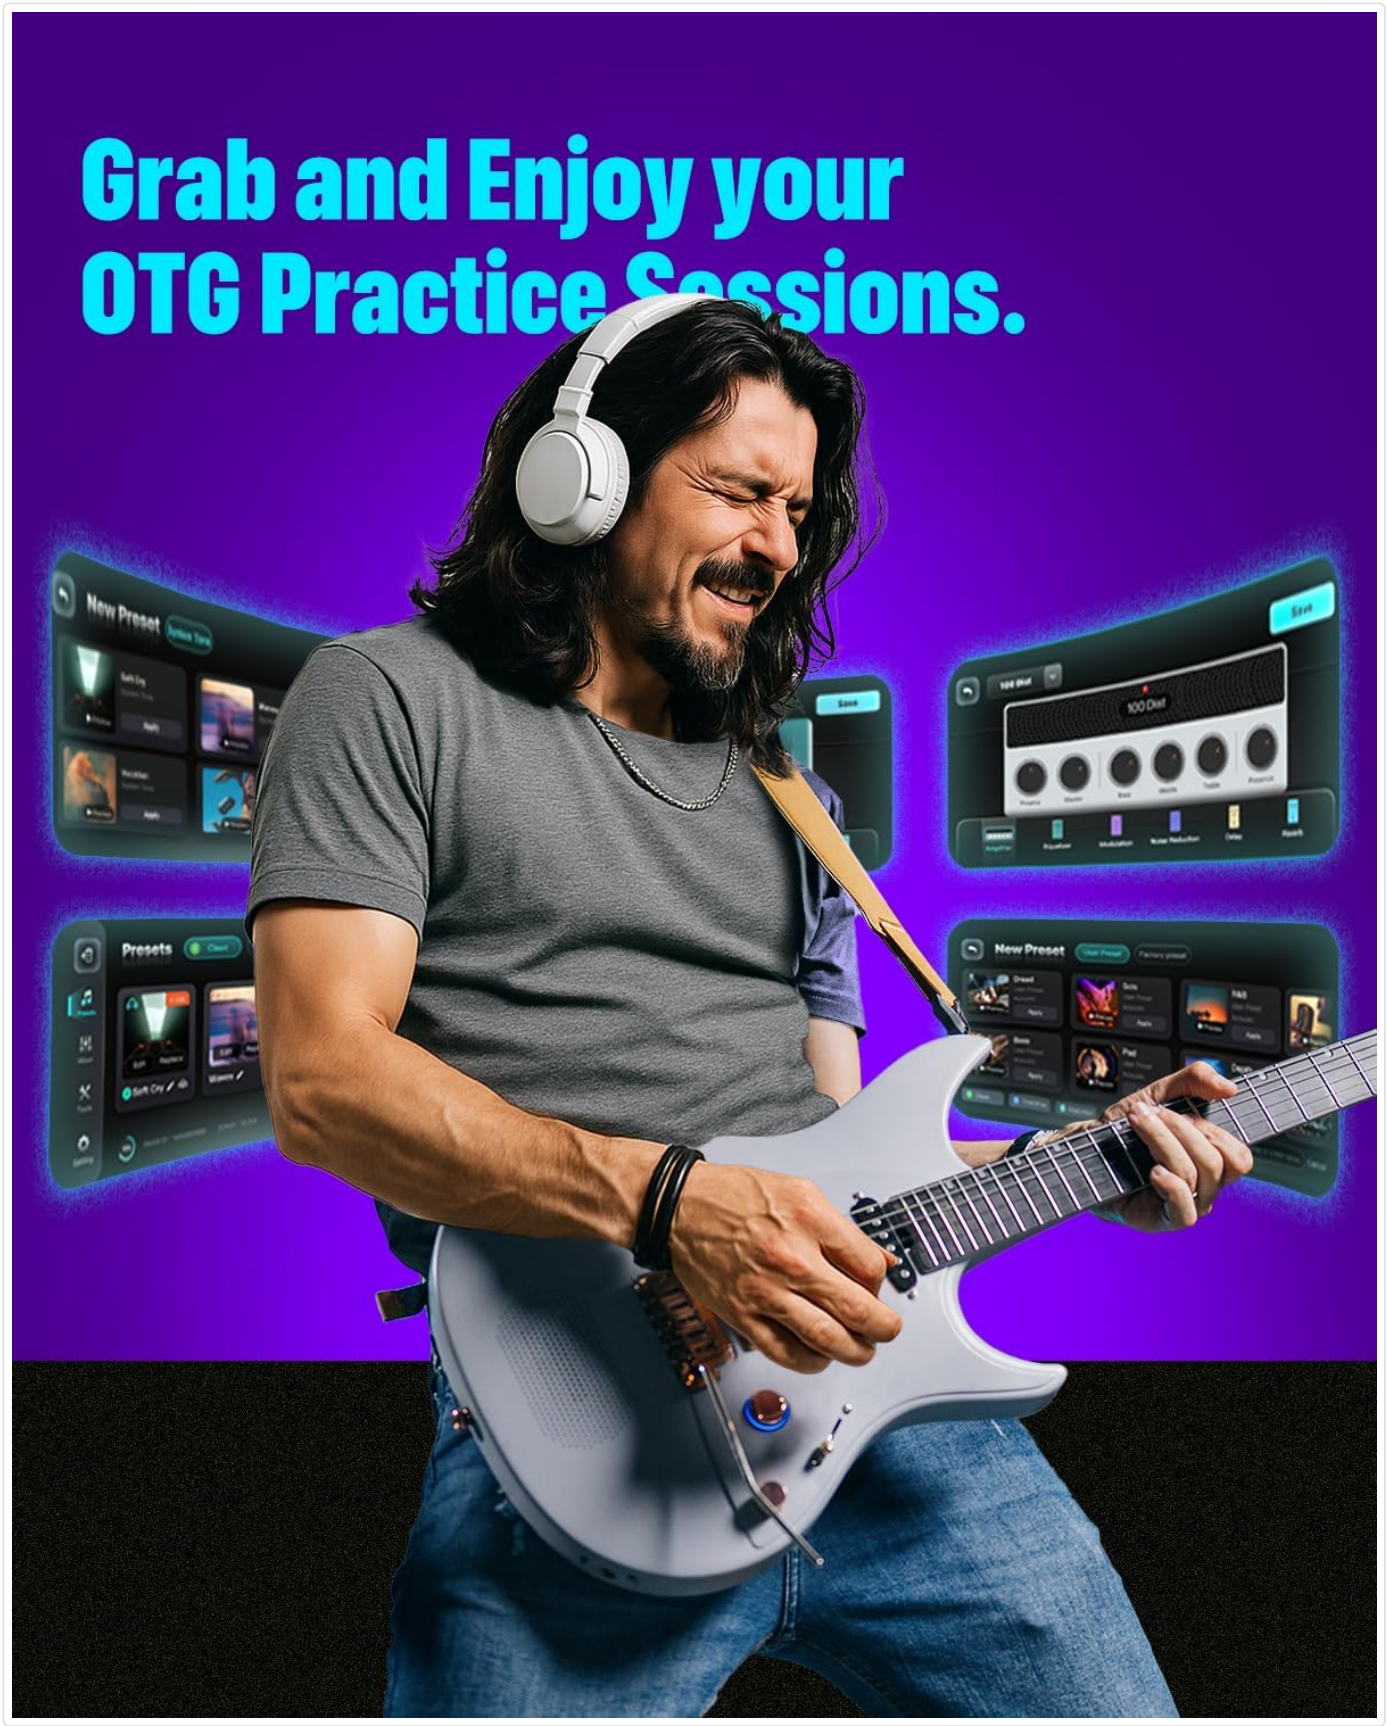

Figure 6.6: Practicing with headphones for a private playing experience.

7. Maintenance and Care

7.1 Cleaning

Regularly wipe down the guitar with a soft, dry, lint-free cloth to remove dust, fingerprints, and sweat. For stubborn grime, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid abrasive cleaners or solvents.

7.2 Storage

Store the guitar in its gig bag when not in use to protect it from dust, scratches, and minor impacts. Due to its carbon fiber construction, the guitar is less susceptible to humidity and temperature changes than traditional wood guitars, but extreme conditions should still be avoided.

7.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing the guitar for an extended period, charge the battery to approximately 50-70% before storage and recharge every few months.

7.4 String Replacement

Strings should be replaced periodically based on usage. When replacing strings, ensure you use the correct gauge for electric guitars. For optimal performance, consider professional setup after string changes, especially if you notice changes in playability or intonation.

8. Troubleshooting

Problem	Possible Cause	Solution
No sound from onboard speaker.	Guitar is off, volume is low, or battery is drained.	Ensure guitar is powered on, increase volume, charge battery.
Cannot connect to Enya Music App via Bluetooth.	Bluetooth is off on device, guitar is not in pairing mode, or interference.	Ensure Bluetooth is enabled, restart guitar and app, try pairing again. Move closer to the guitar.
Sound feedback from onboard speaker.	High gain/volume settings, proximity to reflective surfaces.	Reduce gain/volume, adjust EQ settings in the app, change playing position.
Guitar not charging.	Faulty cable/adapter, dirty USB-C port.	Try a different USB-C cable and power adapter. Gently clean the USB-C port.
String buzzing.	Low action, uneven frets, or neck relief issues.	Adjust string action at the bridge or consult a technician for neck relief adjustments.

9. Technical Specifications

Feature	Specification
Model Number	INSPIRE-Ozeilzinho
Size	39 Inch
Body Material	Carbon Fibre
Number of Strings	6
Speaker Count	1 (15W Wireless Speaker)
Battery Type	12V (included)

Feature	Specification
Item Weight	6.08 kg
Parcel Dimensions	109.22 x 40 x 15.24 cm
Manufacturer	Enya Musical

10. Warranty and Support

Enya Musical provides a limited warranty for the Enya Electric Guitar Inspire. Please refer to the warranty card included with your product for specific terms and conditions, including coverage duration and limitations. For technical support, troubleshooting assistance, or warranty claims, please contact Enya Musical customer service through their official website or the retailer where the product was purchased.

Note: As per the provided data, no specific video files with creator type information were available for embedding in this manual.

© 2024 Enya Musical. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question