Manuals+
Q & A | Deep Search | Upload

MAXGROOM ZC-T18

MAXGROOM ZC-T18 All-in-One Women's Electric Trimmer User Manual

Your guide to safe and effective use of the MAXGROOM ZC-T18 electric trimmer for comprehensive body and facial hair removal.

1. Introduction

Thank you for choosing the MAXGROOM ZC-T18 All-in-One Electric Trimmer. This device is designed for efficient and comfortable hair removal across various body areas, including the bikini line, underarms, legs, face, and eyebrows. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your trimmer to ensure optimal performance and user safety.

2. Product Overview and Components

The MAXGROOM ZC-T18 comes with multiple interchangeable heads and accessories to cater to different grooming needs.

Image 2.1: MAXGROOM ZC-T18 Electric Trimmer with its various attachments, including the main body, different shaving heads, and guard combs.

Image 2.2: The four distinct interchangeable heads for the MAXGROOM ZC-T18, designed for various hair removal tasks.

Key Components:

- **Main Trimmer Body:** The rechargeable handle with power button and battery indicator.
- **3D Foil Shaver Head:** For larger areas like legs and arms, and sensitive areas like the bikini line. Features a curved blade and 3D floating foil.
- **Precision Trimmer Head:** For underarms, bikini area, and general body hair trimming.
- **Facial Hair Remover Head:** Designed for delicate facial areas such as cheeks, upper lip, and chin.
- **Eyebrow Trimmer Head:** For precise shaping and trimming of eyebrows.
- **Guard Combs:** Various sizes for length control with the precision trimmer head.
- **Cleaning Brush:** For removing hair residue from the blades.
- **USB Type-C Charging Cable:** For recharging the device.
- **Carrying Bag:** For storage and travel.

3. Safety Information

Do not use the shaver underwater for extended periods or at great depths. Keep the charging port dry and do not charge the shaver while it is wet. Be cautious when using the sharp blades to avoid cuts. Clean the shaver after each use with the provided cleaning brush to prevent bacterial growth. Always follow the instructions provided with

the shaver to ensure safe and proper use.

Important: Actual product packaging and materials may contain more and different information than what is shown on our website. We recommend that you do not rely solely on the information presented and that you always read labels, warnings, and directions before using or consuming a product.

4. Charging Instructions

Before first use, fully charge the trimmer. Ensure the device is dry before connecting the charging cable.

1. Locate the Type-C charging port on the bottom of the trimmer body.
2. Insert the Type-C end of the charging cable into the trimmer's port.
3. Connect the USB-A end of the cable to a compatible power source (e.g., power bank, adapter, laptop, car charger).
4. The battery indicator on the trimmer will show charging progress. A full charge typically takes approximately 1.5 hours.
5. Once fully charged, the trimmer provides up to 120 minutes of cordless operation.

Image 4.1: The trimmer connected to a Type-C charging cable, illustrating the charging process and battery life.

5. Attachment Guide and Operation

To change an attachment head, gently twist and pull the current head off the main body. Align the new head with the body and twist until it clicks securely into place.

5.1. 3D Foil Shaver Head

Ideal for shaving larger areas like legs, arms, and for a close shave in sensitive areas such as the bikini line and underarms. The curved blade and 3D floating foil adapt to body contours for a smooth finish.

Image 5.1.1: A woman using the 3D Foil Shaver head on her leg, demonstrating its application for smooth hair removal on larger body areas.

Usage: Hold the shaver at a 90-degree angle to the skin and move it gently against the direction of hair growth. For best results, ensure skin is taut.

5.2. Precision Trimmer Head

Designed for trimming hair to a desired length in areas like the bikini line, underarms, and other body areas. Use with guard combs for length control.

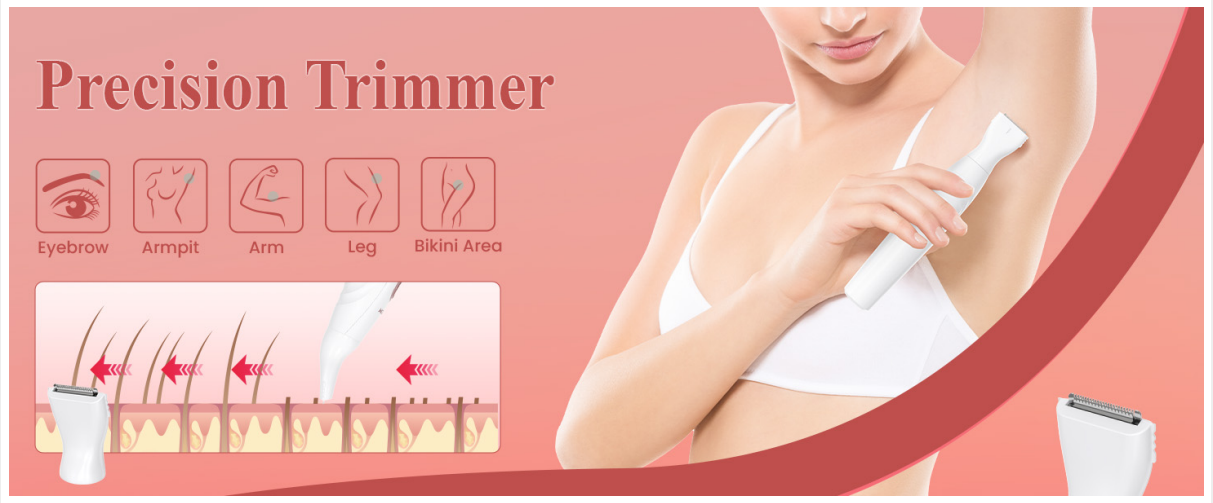

Image 5.2.1: A woman using the precision trimmer head on her underarm, illustrating its use for controlled trimming in sensitive areas.

Usage: Attach the desired guard comb. Place the trimmer flat against the skin and move it slowly against the direction of hair growth. Without a guard comb, it provides a very close trim.

5.3. Facial Hair Remover Head

Specifically designed for removing fine facial hair (peach fuzz) from cheeks, upper lip, and chin without irritation.

Image 5.3.1: A woman using the facial hair remover head on her cheek, illustrating its gentle action for removing fine facial hair.

Usage: Hold the head flat against the skin and move in small, circular motions or against the direction of hair growth. Ensure skin is clean and dry.

5.4. Eyebrow Trimmer Head

For precise shaping and trimming of eyebrows. Can also be used for other small, delicate areas.

Image 5.4.1: A woman using the eyebrow trimmer head to precisely shape her eyebrows, demonstrating its use for delicate areas.

Usage: Use without a guard for precise shaping. For uniform length, attach the appropriate guard comb and gently glide over the eyebrows.

6. Wet and Dry Operation

The MAXGROOM ZC-T18 is IPX6 waterproof, allowing for both wet and dry use. This feature provides flexibility for your grooming routine.

- **Dry Use:** For quick touch-ups, ensure skin is clean and dry.
- **Wet Use:** Can be used in the shower or with shaving cream/gel for a smoother, more comfortable experience, especially for sensitive skin.

Image 6.1: A woman using the trimmer on her legs in the shower, demonstrating its suitability for wet use and gentle hair removal.

Image 6.2: The trimmer being rinsed under running water, illustrating its IPX6 waterproof design for easy cleaning and wet use.

After wet use, it is recommended to apply a moisturizer or skincare lotion to protect sensitive skin.

7. Cleaning and Maintenance

Regular cleaning ensures hygiene and prolongs the life of your trimmer.

1. Turn off the trimmer and detach the head.
2. Use the provided cleaning brush to remove any trapped hairs from the blades and inside the head.
3. Rinse the detached head and blades under running water. The main body can also be rinsed, but ensure the charging port is dry before charging.
4. Allow all parts to air dry completely before reattaching the head or storing the device.
5. Store the trimmer in its carrying bag in a dry place, away from direct sunlight and extreme temperatures.

8. Troubleshooting

If you encounter issues with your MAXGROOM ZC-T18 trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or device is not charged.	Charge the trimmer for 1.5 hours. Ensure the charging cable is properly connected.
Reduced trimming performance or pulling hair.	Blades are clogged with hair or dull.	Clean the trimmer head and blades thoroughly. If performance does not improve, consider replacing the head if available.
Trimmer stops working during use.	Battery is depleted.	Recharge the trimmer.
Skin irritation after use.	Improper technique, dry shaving sensitive skin, or dirty blades.	Ensure blades are clean. Try wet shaving with shaving cream. Apply moisturizer after use. Use gentle pressure.

9. Specifications

Feature	Detail
Brand	MAXGROOM
Model Name	M-18-W (Item Model Number: ZC-T18)
Power Source	Battery Powered (Rechargeable)
Battery Type	1 CR5 battery (included)
Charging Time	Approx. 1.5 hours
Battery Life	Up to 120 minutes
Waterproof Rating	IPX6
Blade Material	Stainless Steel
Product Dimensions	5.33 x 4.32 x 17.53 cm
Item Weight	121 Grams
Included Components	Main body, various attachment heads, cleaning brush, USB Type-C charging cable, carrying bag.

10. Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact MAXGROOM customer service through the retailer where the product was purchased. Keep your proof of purchase for warranty claims.