Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEVOR QD-SSG03

VEVOR 18 ft 4000 PSI Telescoping Pressure Washer Wand (Model: QD-SSG03)

Instruction Manual

1. Introduction

Thank you for choosing the VEVOR 18 ft Telescoping Pressure Washer Wand. This manual provides essential information for the safe and effective assembly, operation, and maintenance of your new pressure washer accessory. This telescoping wand is designed to extend your reach for cleaning high surfaces such as gutters, walls, and roofs, reducing the need for ladders. It is compatible with most pressure washers up to 4000 PSI.

2. Safety Instructions

- **Always wear appropriate personal protective equipment (PPE)** including safety glasses, gloves, and sturdy footwear when operating the pressure washer and telescoping wand.
- **Never point the spray nozzle at people, pets, or electrical equipment.** High-pressure spray can cause serious injury.
- **Ensure all connections are secure** before operating to prevent leaks and accidental disconnections.
- **Maintain a firm grip on the wand** at all times. The recoil force from the high-pressure spray can be significant, especially at extended lengths.
- **Use the included support harness** to distribute the weight and reduce fatigue, particularly when working at full extension.
- **Do not exceed the maximum rated pressure of 4000 PSI** for this wand.
- **Be aware of your surroundings** and overhead power lines when operating the wand at extended heights.
- **Always turn off the pressure washer and release residual pressure** before changing nozzles or performing any maintenance.

3. Package Contents

Verify that all items are present and undamaged upon unpacking:

- Telescoping Wand (18 ft)
- Spray Gun
- High-Pressure Hose

- Support Harness
- Brush Head
- Extension Wands (15° and Gutter Cleaner)
- 5 Spray Nozzles (0°, 15°, 25°, 40°, Foam Nozzle)
- Adapter (M22 Female to M22-15 Male)
- 3/8" QC x M22-14 Male Adapter

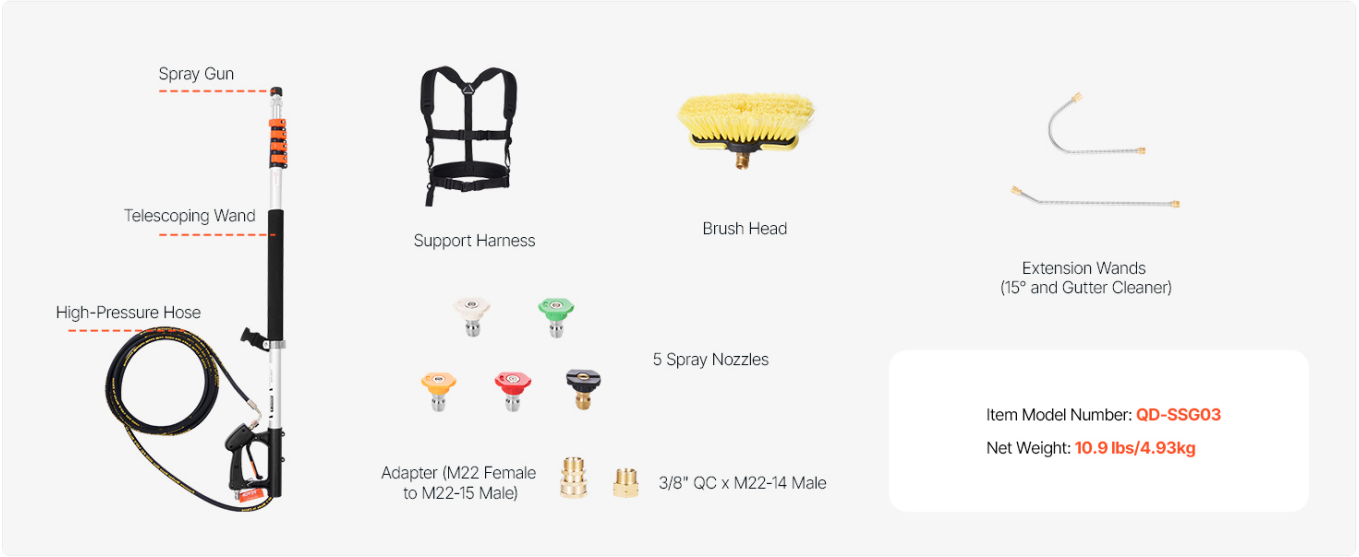

Figure 3.1: Overview of included components for the VEVOR telescoping pressure washer wand.

4. Assembly

1. **Attach the Spray Gun:** Connect the high-pressure hose to the spray gun handle. Ensure a tight and secure connection.
2. **Connect to Telescoping Wand:** Attach the spray gun assembly to the base of the telescoping wand.
3. **Install Desired Nozzle/Accessory:** Select the appropriate spray nozzle, brush head, or extension wand for your task. Insert it into the quick-connect fitting at the end of the telescoping wand until it clicks securely into place.
4. **Attach Support Harness:** Secure the adjustable support harness to the designated attachment points on the telescoping wand. Adjust the shoulder and chest straps for a comfortable and balanced fit.

5. Setup

1. **Connect to Pressure Washer:** Connect the other end of the high-pressure hose to your pressure washer's outlet. Use the appropriate adapter (M22 Female to M22-15 Male or 3/8" QC x M22-14 Male) if necessary to ensure compatibility.
2. **Water Supply:** Connect your pressure washer to a suitable water supply.
3. **Extend the Wand:** To extend the telescoping wand, unlock the adjustment clamps, pull out the sections to the desired length, and then securely relock the clamps. Ensure each section is fully extended and locked before use.



Figure 5.1: Flexible length adjustment of the telescoping wand.



Figure 5.2: Compatibility with various pressure washer models.

6. Operating Instructions

6.1 Nozzle Selection

The kit includes 5 color-coded spray nozzles for different applications:

- **0° (Red):** Pin-point jet for intense cleaning of small, stubborn areas. Use with extreme caution.

- **15° (Yellow):** Narrow spray for concentrated cleaning of tough dirt and stains.
- **25° (Green):** Medium spray for general cleaning of most surfaces.
- **40° (White):** Wide spray for gentle cleaning of delicate surfaces or large areas.
- **Foam Nozzle (Black):** For applying detergents or soap.



Figure 6.1: Included spray nozzles and their patterns.

6.2 Using the Wand

1. **Start Pressure Washer:** Turn on your pressure washer according to its manufacturer's instructions.
2. **Engage Spray Gun:** Squeeze the trigger on the spray gun handle to begin spraying. The spray gun features a safety lock to prevent accidental operation.
3. **Adjust Length:** Extend or retract the wand sections as needed for the cleaning task. Always ensure clamps are securely locked after adjustment.
4. **Utilize Accessories:** For specific tasks like gutter cleaning, attach the curved gutter cleaner extension wand. For scrubbing, attach the brush head.

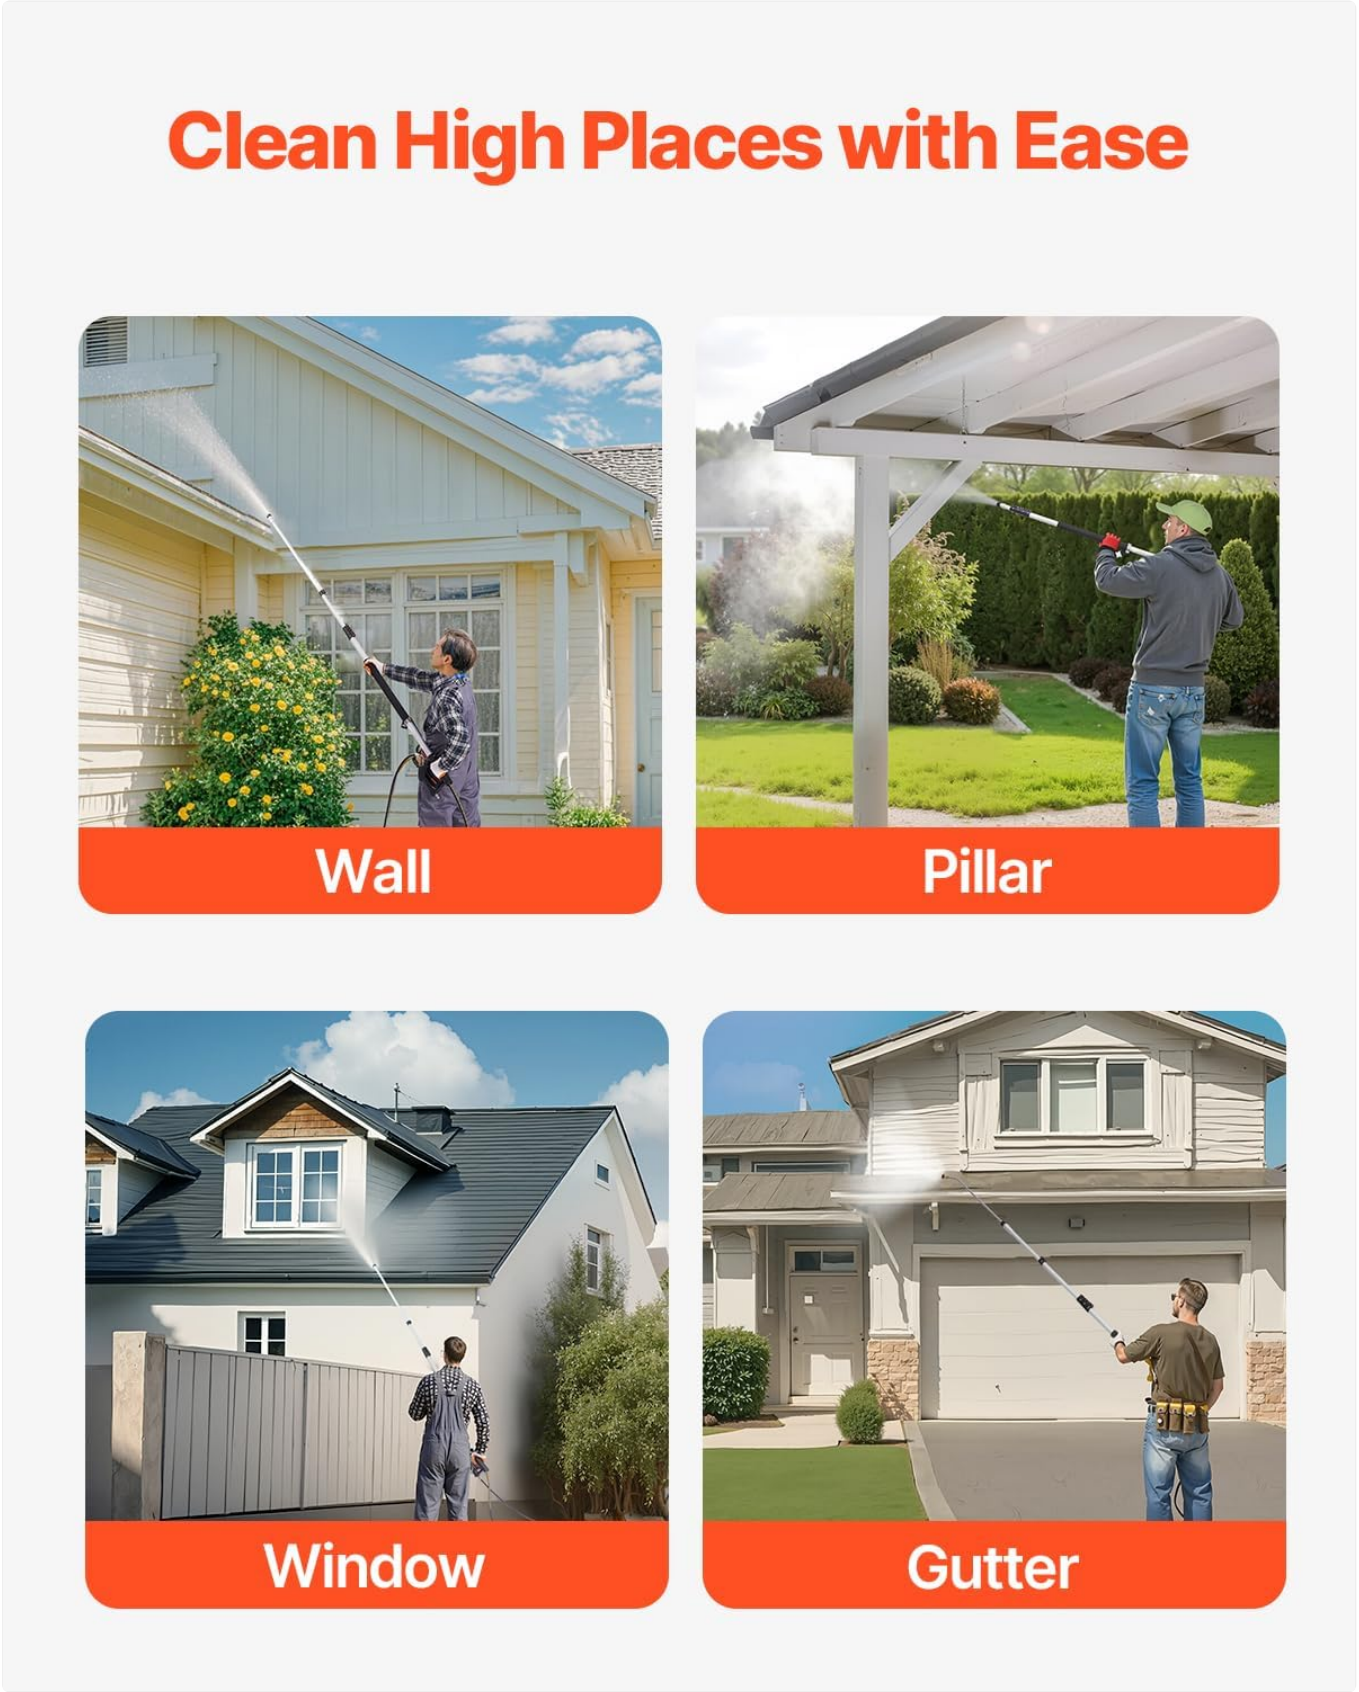

Figure 6.2: Examples of high-reach cleaning applications.

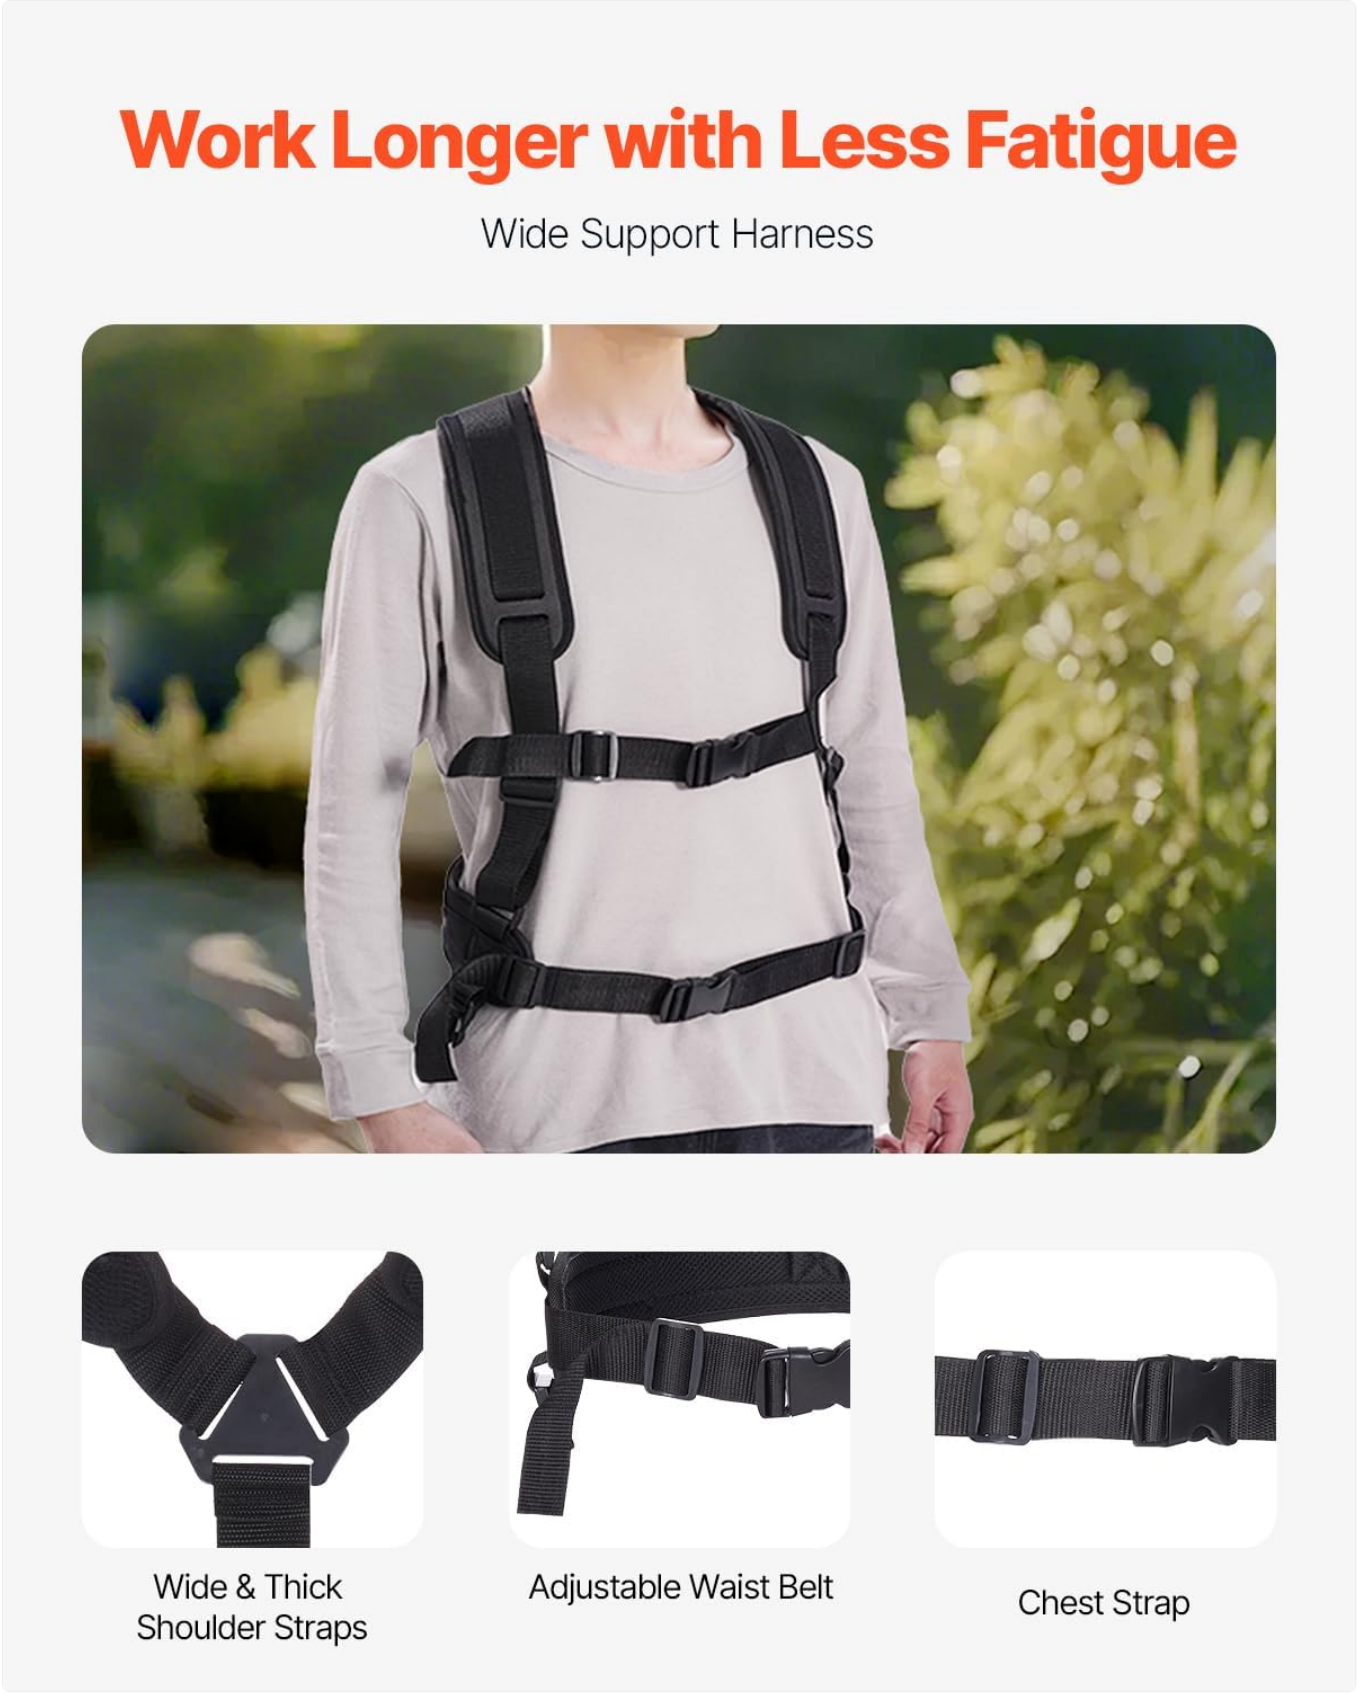

Figure 6.3: The adjustable support harness for comfortable use.

7. Maintenance

- **After Each Use:** Flush the wand and hose with clean water to remove any detergent or debris.
- **Inspect Connections:** Regularly check all quick-connect fittings and threaded connections for wear or damage. Replace O-rings if necessary to prevent leaks.
- **Clean Nozzles:** If spray patterns become irregular, clean the nozzle orifices with the included nozzle cleaning tool or a

thin wire.

- **Store Properly:** Store the telescoping wand in a clean, dry place, preferably disassembled or fully retracted, to prevent damage and prolong its lifespan. Avoid storing in freezing temperatures.

8. Troubleshooting

Problem	Possible Cause	Solution
No pressure or low pressure	Clogged nozzle; insufficient water supply; loose connections.	Clean nozzle; ensure adequate water flow to pressure washer; tighten all connections.
Water leaking from connections	Loose connections; worn O-rings.	Tighten connections; replace damaged O-rings.
Wand sections not locking	Clamps not fully engaged; debris in locking mechanism.	Ensure clamps are fully closed; clean any debris from the locking mechanism.
Irregular spray pattern	Partially clogged nozzle.	Clean the nozzle orifice with the provided tool.

9. Specifications

- **Model:** QD-SSG03
- **Maximum Length:** 18 ft
- **Maximum Pressure:** 4000 PSI
- **Item Weight:** 9.99 pounds
- **Product Dimensions:** 6.89 x 2.36 x 54.84 inches (collapsed)
- **Material:** Lightweight Aluminum

10. Warranty and Support

VEVOR products are designed for durability and performance. For warranty information, technical support, or replacement parts, please refer to the contact information provided with your purchase or visit the official VEVOR website. Please have your model number (QD-SSG03) and purchase details ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DT9843Z1

More documents and user manuals: **https://manuals.plus/**