Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Frigidaire PRMC2285AF (329741478)

Frigidaire Professional Refrigerator User Manual

Model: PRMC2285AF (329741478)

Introduction

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Frigidaire Professional 36-inch 21.4 cu. ft. Counter Depth French Door Refrigerator with Custom-Flex Temp Drawer. Please read this manual thoroughly before using your appliance and keep it for future reference.

Important Safety Information

Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

General Safety Precautions

- **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer: Take off the doors. Leave the shelves in place so that children may not easily climb inside.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Product Overview

The Frigidaire Professional PRMC2285AF refrigerator is designed for modern kitchens, offering ample storage and advanced features. It includes a Custom-Flex Temp Drawer for versatile storage options.

Key Components

- French Doors with integrated ice and water dispenser.
- Custom-Flex Temp Drawer: A versatile drawer that can be set to various temperatures for different food types

(e.g., chill, deli, meat, freezer).

- Spacious interior with adjustable shelves and door bins.
- Bottom freezer drawer.



Figure 1: Front view of the Frigidaire Professional French Door Refrigerator. This image shows the sleek stainless steel finish, the

French doors, and the external ice and water dispenser on the left door.

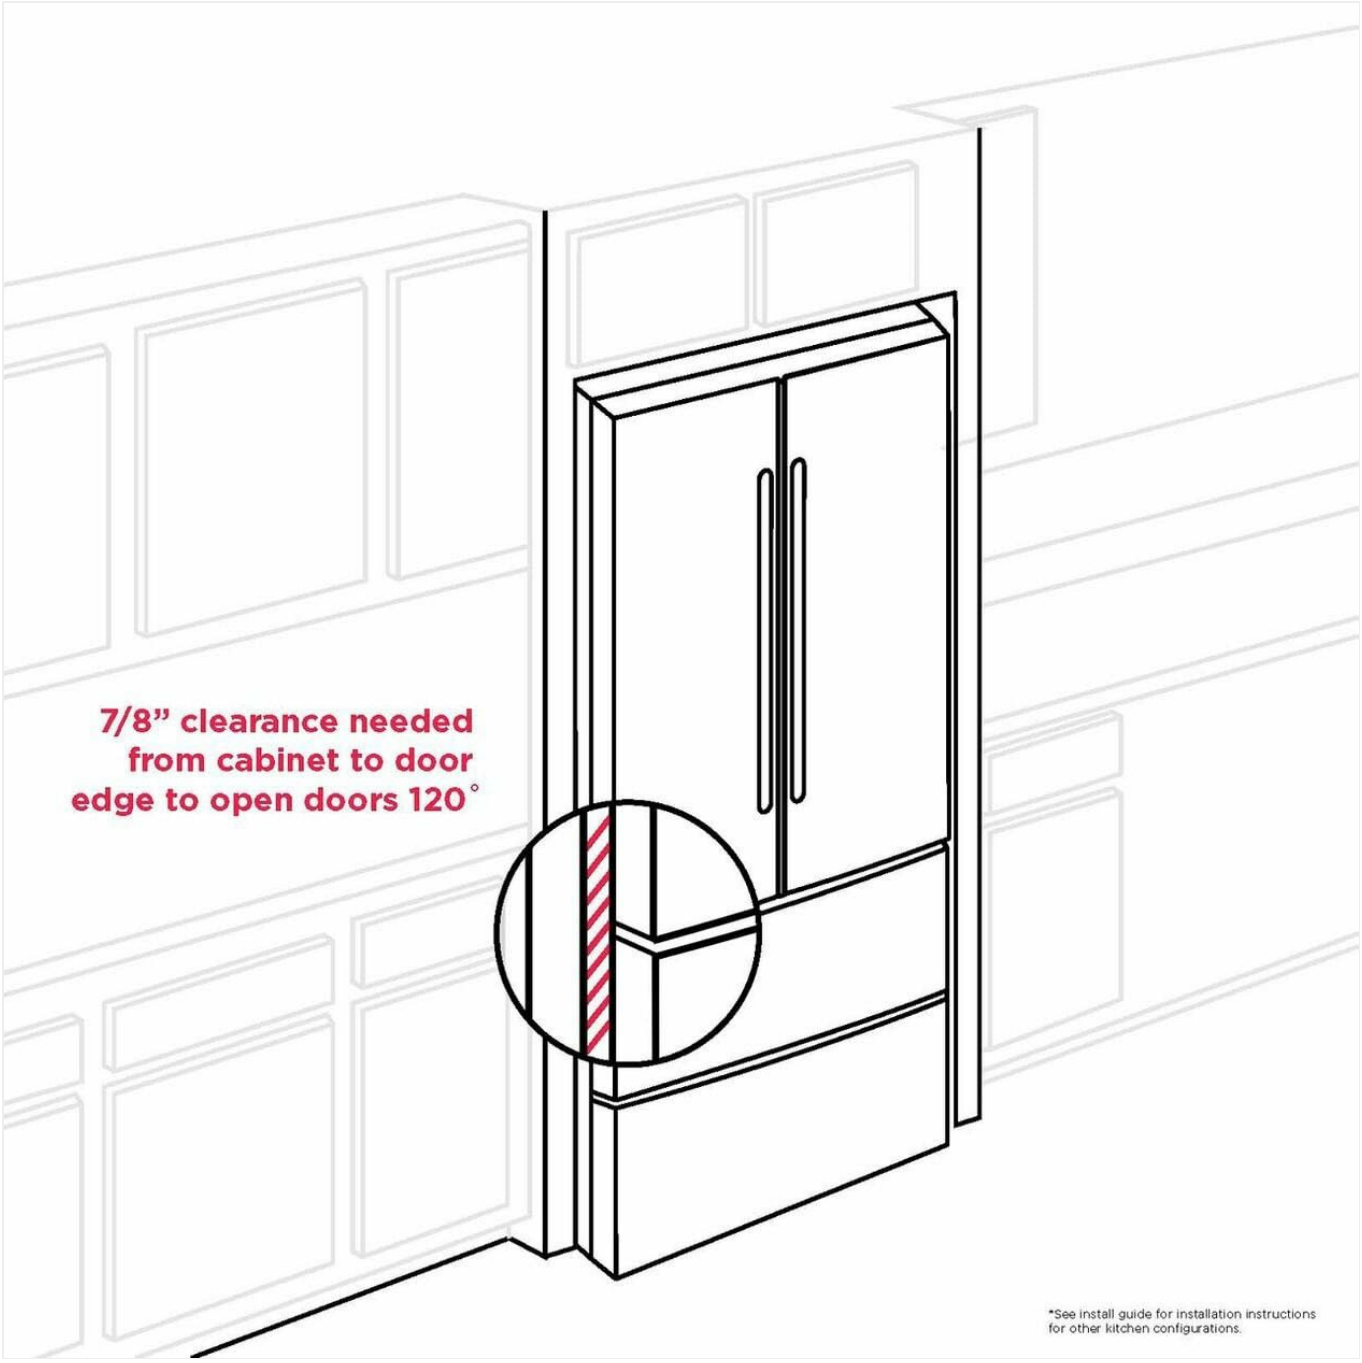


Figure 2: Interior view of the Frigidaire Professional French Door Refrigerator. The image displays the spacious interior with adjustable glass shelves, door bins, crisper drawers, and the ice maker compartment at the top left.

Setup and Installation

Location Requirements

- Ensure the floor is level and strong enough to support the refrigerator when fully loaded.
- Allow adequate clearance for air circulation around the appliance. A minimum of 1 inch (2.54 cm) at the top and sides, and 2 inches (5.08 cm) at the back is recommended.
- For proper door opening, ensure at least 7/8 inch (2.22 cm) clearance from the cabinet edge to open doors 120 degrees.
- Avoid direct sunlight or proximity to heat sources like ovens or radiators.



Figure 3: Installation diagram illustrating the required 7/8 inch clearance from the cabinet edge to allow the refrigerator doors to open 120 degrees. This ensures proper functionality and access.

Electrical Requirements

A dedicated, grounded 115 Volt, 60 Hz, 15 Amp AC only electrical outlet is required. Do not use an extension cord.

Water Supply Connection (for Ice Maker and Water Dispenser)

1. Turn off the main water supply.
2. Connect the refrigerator's water line to a cold water supply using a copper or braided stainless steel line.
3. Ensure all connections are tight to prevent leaks.
4. Turn on the water supply and check for leaks.
5. Flush the water dispenser system for several minutes to clear air and impurities.

Operating Instructions

Temperature Control

The refrigerator and freezer temperatures are pre-set at the factory. Adjust as needed using the control panel located inside the refrigerator compartment or on the dispenser panel.

- **Refrigerator:** Recommended setting is 37°F (3°C).
- **Freezer:** Recommended setting is 0°F (-18°C).
- **Custom-Flex Temp Drawer:** Select desired mode (e.g., Meat/Fish, Cold Drinks, Deli/Snacks, Freezer) via the control panel.

Ice and Water Dispenser

The dispenser provides filtered water and ice (cubed or crushed). Place a glass under the dispenser and press the appropriate paddle.

- For water, press the water paddle.
- For cubed ice, select "CUBED" and press the ice paddle.
- For crushed ice, select "CRUSHED" and press the ice paddle.



Figure 4: The Frigidaire Professional refrigerator integrated into a modern kitchen. This view highlights its counter-depth design, blending seamlessly with cabinetry and other appliances like a double oven.

Maintenance and Care

Cleaning Your Refrigerator

- **Interior:** Clean with a solution of 2 tablespoons baking soda to 1 quart warm water. Rinse and dry thoroughly.
- **Exterior:** Wipe with a clean cloth dampened with warm, soapy water. For stainless steel, use a stainless steel cleaner and polish.
- **Door Gaskets:** Clean regularly with mild soap and water to ensure a proper seal.
- **Condenser Coils:** Clean coils behind or beneath the refrigerator every 6-12 months using a vacuum cleaner or brush to remove dust and debris. This improves efficiency.

Replacing the Water Filter

The water filter should be replaced approximately every 6 months or when the filter indicator light illuminates. Refer to the filter compartment for specific instructions on your model.

Light Bulb Replacement

If an interior light bulb needs replacement, ensure the refrigerator is unplugged. Refer to the specific instructions for your model, usually found near the light fixture.

Troubleshooting

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped/fuse blown; power outage.	Ensure plug is secure; reset breaker/replace fuse; check house power.
Temperatures are too warm.	Door left open; heavy food load; controls set too warm; condenser coils dirty.	Check door seal; allow time for cooling; adjust temperature settings; clean coils.
Water dispenser not working.	Water supply turned off; water filter clogged; water line frozen.	Turn on water supply; replace water filter; thaw frozen line.
Noisy operation.	Normal operating sounds; refrigerator not level; items vibrating inside.	Refer to "Normal Operating Sounds" section; level the refrigerator; rearrange items.

Specifications

- **Model:** PRMC2285AF (Item model number: 329741478)
- **Brand:** Frigidaire Professional
- **Type:** Counter Depth French Door Refrigerator
- **Capacity:** 21.4 cu. ft.
- **Dimensions (Approximate):**
  - Height: [Refer to installation guide for exact height with hinges]
  - Width: 36 inches
  - Depth: [Refer to installation guide for exact depth with doors/handles]
- **Power Supply:** 115V, 60Hz, 15A dedicated circuit
- **Features:** Custom-Flex Temp Drawer, Ice & Water Dispenser, Stainless Steel Finish

Warranty and Customer Support

Warranty Information

Your Frigidaire Professional refrigerator comes with a limited warranty. Please refer to the separate warranty card included with your appliance for full details on coverage, terms, and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, service scheduling, or to order genuine Frigidaire replacement parts, please contact Frigidaire Customer Service. You can find contact information on the Frigidaire website or in your warranty documentation.
Online Resources: Visit the official Frigidaire website for FAQs, product registration, and additional support materials.

© 2025 Frigidaire. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DWJD8M5H

More documents and user manuals: **https://manuals.plus/**