Manuals+
Q & A | Deep Search | Upload

LEVOLOR 197067219756

LEVOLOR Basics Cordless Fabric Roller Shade User Manual

Model: 197067219756 | Brand: LEVOLOR

Product Overview

The LEVOLOR Basics Cordless Fabric Roller Shade offers a versatile aesthetic suitable for various interior styles, from traditional to contemporary. Designed for ease of use and enhanced privacy, this blackout shade features a white fabric front with a blackout coated liner, providing superior light control and room darkening capabilities.

This image shows the LEVOLOR Basics Cordless Fabric Roller Shade in Neutral White, fully extended within a window frame, demonstrating its clean and minimalist appearance.

Its cordless operating system ensures consistent reliability and eliminates cords, making it a safe solution for households with children and pets. The shade is designed for simple and quick installation, featuring an open

roll headrail and coordinating bracket covers for a cohesive look.

Safety Information

Your LEVOLOR Basics Cordless Fabric Roller Shade is designed with safety in mind. The cordless lift mechanism removes the need for pull cords, significantly reducing potential hazards for young children and pets. Always ensure the shade is operated smoothly and without excessive force to maintain its integrity and safety features.

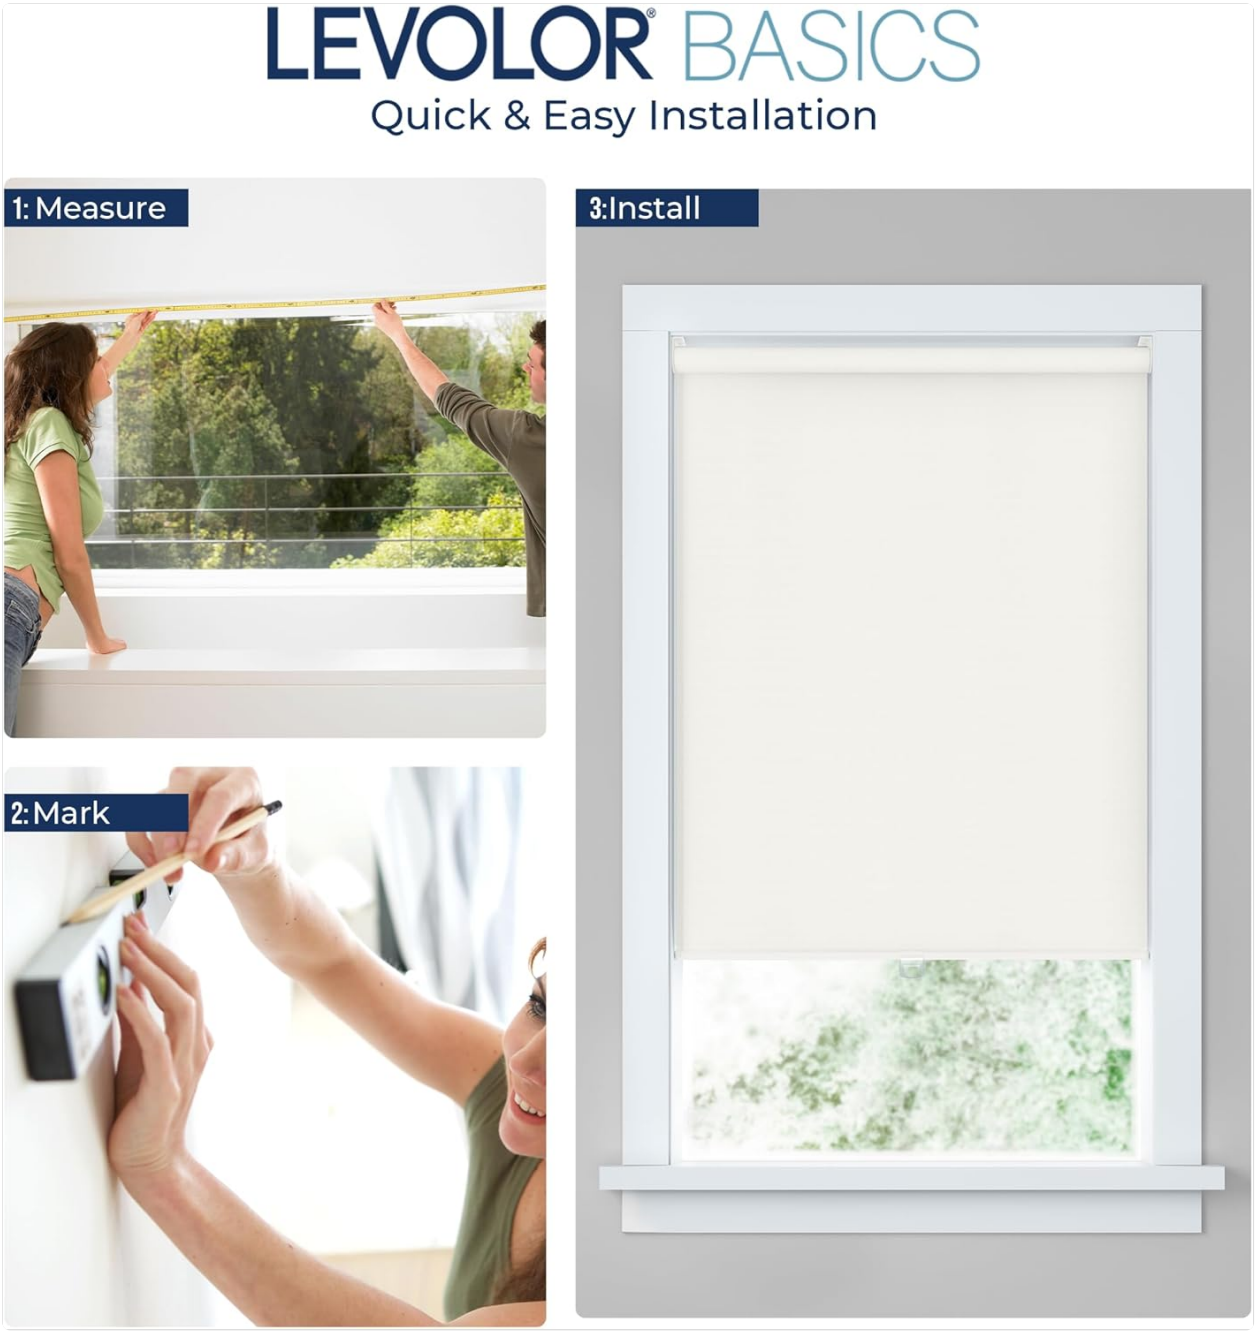

The cordless design of this shade eliminates cords, providing a safer environment for homes with children and pets.

Installation Guide

Before You Begin: Measuring Your Window

Accurate measurement is critical for a proper fit. For inside mount installations, measure the window width and height in three different places (top, middle, and bottom). Use the smallest measurement for both width and height to ensure the shade fits correctly within the window frame.

Accurate measurement is crucial for proper fit. Measure the window width and height in at least three different places to ensure precision.

Installation Steps

Your LEVOLOR shade comes with all necessary hardware and instructions for quick and easy installation. Follow these general steps:

1. **Mark Bracket Locations:** Using the provided template or by measuring, mark the precise locations for your installation brackets inside the window frame. Ensure marks are level.
2. **Install Brackets:** Securely attach the brackets to the marked locations using the screws provided. Ensure they are firmly mounted and aligned.
3. **Attach Shade:** Carefully insert the shade into the installed brackets. The open roll headrail and bracket covers are designed to provide a clean, finished look. Ensure the shade clicks securely into place.

This visual guide illustrates the three main steps for installing your LEVOLOR roller shade: measuring the window, marking the bracket positions, and finally installing the shade.

Operating Your Shade

The cordless operating system allows for smooth and easy adjustment of your shade. To raise the shade, gently push the bottom rail upwards. To lower the shade, gently pull the bottom rail downwards. The shade will hold its position once released. Avoid forcing the shade or pulling/pushing at an angle to ensure smooth operation and longevity of the mechanism.

The cordless operating system allows for smooth and easy adjustment of the shade. Simply push up to raise and pull down to lower.

Care and Maintenance

Maintaining your LEVOLOR Basics Cordless Fabric Roller Shade is simple. To keep your shade clean and looking its best, regularly dust the fabric with a soft cloth or a vacuum cleaner with a brush attachment. For more stubborn marks, gently wipe the fabric with a slightly damp cloth using mild soap and water. Avoid harsh chemicals or abrasive cleaners, as these can damage the fabric or the blackout coating. Allow the shade to dry completely before raising it.

To maintain the quality of your shade, gently wipe the fabric with a slightly damp cloth to remove dust or smudges.

Troubleshooting

- **Shade Not Rolling Smoothly:** Ensure there are no obstructions in the window frame or around the shade mechanism. Check that the installation brackets are level and securely fastened.
- **Light Seepage Around Edges:** This can occur if the shade width is slightly smaller than the window opening. Ensure accurate measurements were taken. For maximum light blockage, consider an outside mount installation or pairing with curtains.
- **Shade Does Not Stay Up/Down:** The cordless mechanism may need to be reset or inspected for damage. Ensure you are operating the shade by pulling/pushing the bottom rail directly and smoothly. Avoid sudden jerks.
- **Shade Appears Crooked:** Verify that the installation brackets are perfectly level. Minor adjustments to the bracket position may be necessary.

Product Specifications

Feature	Detail
Product Dimensions	72"L x 36"W
Brand	LEVOLOR
Color	White
Opacity	Blackout
Recommended Uses	Indoor
Operation Mode	Manual
Shape	Rectangular
Number of Items	1
Size	36"W x 72"H
Mounting Type	Inside Mount
Control Type	Cordless
Manufacturer	LEVOLOR
UPC	197067219756
Item Weight	2.35 pounds
ASIN	B0DWQB5SPF
Item Model Number	197067219756
Date First Available	February 10, 2025

Warranty and Support

LEVOLOR is committed to delivering reliable products. Your LEVOLOR Basics Cordless Fabric Roller Shade is backed by a **Limited Lifetime Warranty**. This warranty covers defects in materials and workmanship for the lifetime of the product, provided it is installed and maintained according to the instructions.

For detailed warranty information, claims, or technical support, please visit the official LEVOLOR website or contact their customer service department. Keep your purchase receipt as proof of purchase.

© 2025 LEVOLOR. All rights reserved.

Related Documents - 197067219756

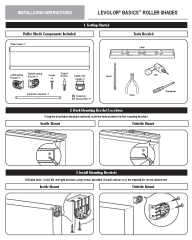	[Levolor Basics Roller Shades Installation Guide] Step-by-step installation instructions for Levolor Basics Roller Shades, including component identification, mounting, and adjustment procedures.
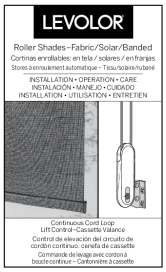	[LEVOLOR Roller Shades Installation, Operation, and Care Guide] Comprehensive guide for installing, operating, and caring for LEVOLOR Roller Shades, featuring Fabric, Solar, and Banded styles with Continuous Cord Loop and Cordless Lift Control systems. Includes safety information and troubleshooting.
	[LEVOLOR Roller Shades - Motorized Control Lift Installation and Operation Guide] Comprehensive guide for installing, operating, and caring for LEVOLOR Motorized Control Lift Roller Shades (Fabric, Solar, Banded). Includes setup, troubleshooting, and cleaning instructions.
	[Levolor Cellular Shades Installation Guide: Cordless, Cord Loop, Motorized] Comprehensive guide to installing Levolor Cellular (Honeycomb) Shades, covering cordless lift, cord loop, and motorized options. Includes parts, tools, step-by-step instructions, and troubleshooting.
	[LEVOLOR Motorized Control Lift Roller Shades Installation and Operation Guide] Detailed instructions for installing, operating, and maintaining LEVOLOR Motorized Control Lift Roller Shades. Covers inside and outside mounting, remote control, battery charging, cleaning, and warranty information.
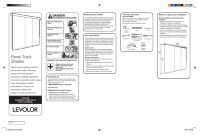	[Levolor Panel Track Shades Installation and Care Guide] Comprehensive guide for installing and maintaining Levolor Panel Track Shades, including safety warnings, cleaning instructions, and troubleshooting tips.