Frigidaire 5304526506

Frigidaire 30" Glide Rack Instruction Manual

Model: 5304526506

Product Overview

The Frigidaire 30" Glide Rack is a telescopic oven rack designed to provide enhanced access to dishes within your oven. Its smooth gliding mechanism allows for effortless extension, simplifying the monitoring and removal of food. Constructed with a durable chrome finish, this rack is intended for use with select Frigidaire 30" ranges and wall ovens.

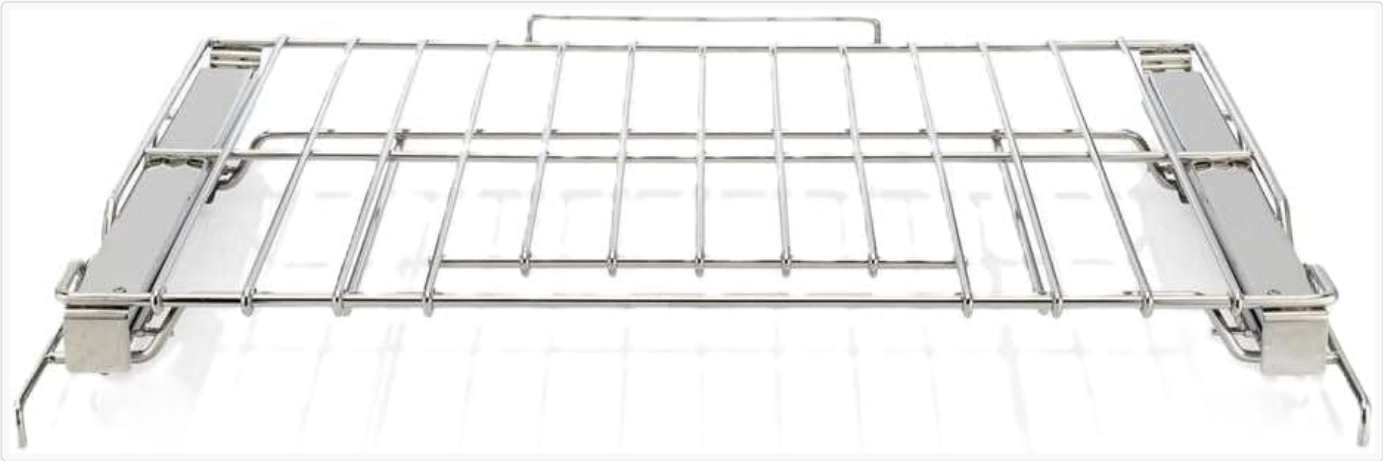

Image: Top view of the Frigidaire 30" Glide Rack, showcasing its chrome finish and telescopic design.

Safety Information

Always exercise caution when handling hot oven racks. Use oven mitts or heat-resistant gloves when inserting or removing the glide rack from a hot oven. Ensure the rack is securely seated before placing heavy items on it. Do not attempt to force the rack if it encounters resistance during installation or operation.

Setup and Installation

The Frigidaire 30" Glide Rack is designed for tool-free installation. Follow these steps to properly install the rack in your

compatible Frigidaire 30" range or wall oven.

1. **Preparation:** Ensure your oven is cool and turned off before beginning installation. Remove any existing oven racks.
2. **Positioning:** Identify the desired rack position within your oven. The glide rack can be placed on any standard rack support.
3. **Insertion:** Carefully slide the glide rack into the oven, ensuring the side rails align with the oven's rack supports. Push the rack fully to the back of the oven.
4. **Verification:** Gently pull the rack forward to ensure the gliding mechanism operates smoothly and the rack is securely seated.



Image: The Frigidaire Glide Rack shown installed in an oven, extended with a cooking pot on it, demonstrating easier access.

Important Note:

This glide rack is specifically designed for select Frigidaire 30" ranges and wall ovens. Verify compatibility with your appliance model before installation. Incorrect fit may lead to improper function or damage.

Operating Instructions

The Frigidaire Glide Rack enhances your cooking experience by providing easy access to your dishes.

- **Extending the Rack:** To access items on the rack, gently pull the front handle of the glide rack. The telescopic mechanism will extend the rack smoothly out of the oven.
- **Retracting the Rack:** After placing or removing items, gently push the rack back into the oven until it is fully seated.
- **Weight Capacity:** While durable, avoid placing excessively heavy items on the extended rack to prevent strain on the gliding mechanism.

Maintenance and Care

Proper care will ensure the longevity and smooth operation of your Frigidaire Glide Rack.

- **Cleaning:** Clean the rack with warm, soapy water and a soft cloth. Rinse thoroughly and dry completely.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the chrome finish.
- **Lubrication:** The gliding mechanism is designed for smooth operation. Avoid applying oils or lubricants unless specifically instructed by Frigidaire, as this can attract debris and hinder performance.
- **Dishwasher Safety:** The product specifications indicate that the Frigidaire Glide Rack is**not dishwasher safe**. Hand wash only.

Troubleshooting

Problem	Possible Cause	Solution
Rack does not glide smoothly.	Accumulation of food debris or grease on the rails.	Remove the rack from the oven and clean the rails thoroughly with warm, soapy water. Ensure no debris obstructs the mechanism.
Rack does not fit in the oven.	Incompatibility with oven model or incorrect size.	Verify your oven model is a compatible Frigidaire 30" range or wall oven. This rack is designed for specific dimensions. If incompatible, contact the retailer for return or exchange.
Rack feels loose or unstable.	Rack not fully seated on oven supports.	Remove and re-insert the rack, ensuring it is pushed completely to the back and securely rests on all oven rack supports.

Specifications

- **Model Number:** 5304526506
- **Brand:** Frigidaire
- **Size:** 30 inches
- **Material:** Stainless Steel
- **Color:** Silver
- **Product Dimensions (L x W x H):** 17.32" x 2.76" x 25.2"
- **Item Weight:** 7.25 Pounds
- **Dishwasher Safe:** No
- **UPC:** 012505482908

Warranty and Support

For warranty information or technical support regarding your Frigidaire Glide Rack, please refer to the documentation provided with your Frigidaire appliance or visit the official Frigidaire website. You may also contact Frigidaire customer service directly for assistance.

Frigidaire Official Website: www.frigidaire.com

© 2025 Frigidaire. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question