**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



### Z-Lite 1954P18-BN

# Z-Lite Madeline 5-Light Pendant Instruction Manual

Model: 1954P18-BN | Brand: Z-Lite

## 1. Product Overview

The Z-Lite Madeline 5-Light Pendant (Model 1954P18-BN) is a modern lighting fixture designed to provide ambient illumination. It features a brushed nickel finish, a conical pleated linen shade, and decorative chains for height adjustability. This pendant is suitable for various indoor settings, adding a refined flair to your space.

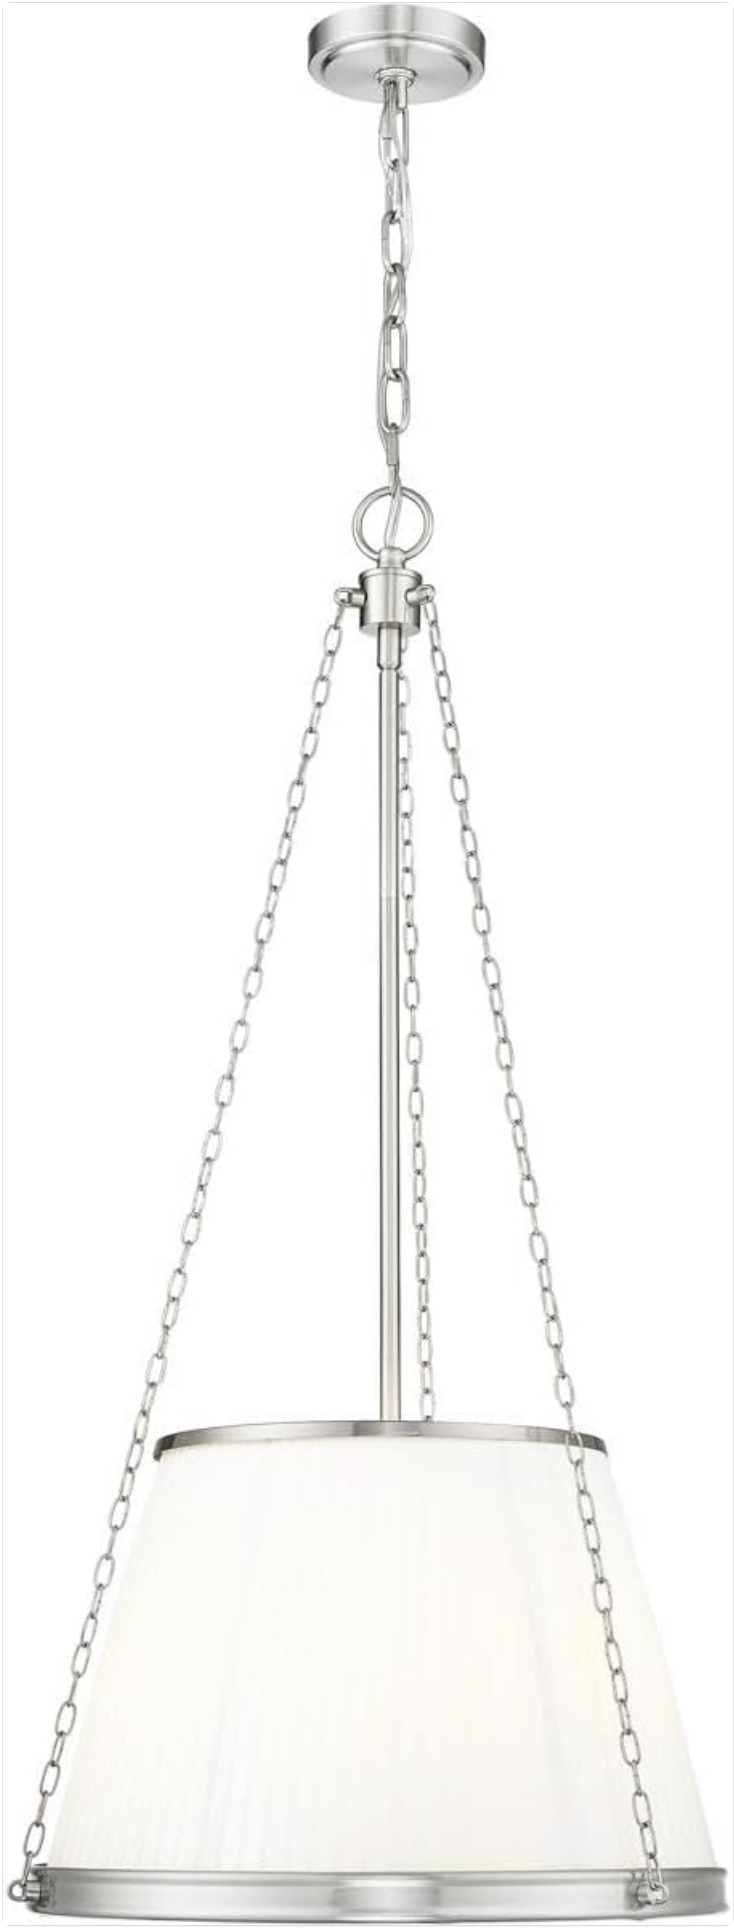


Image 1.1: Front view of the Z-Lite Madeline 5-Light Pendant in Brushed Nickel finish, showcasing its conical pleated linen shade and adjustable chains.



Image 1.2: The Z-Lite Madeline pendant light installed above a kitchen island, demonstrating its aesthetic integration into a home environment.

## 2. Safety Information

Please read and understand all instructions before beginning installation. Failure to do so may result in electric shock, fire, or other injuries that could be hazardous or even fatal. Installation should be performed by a qualified electrician or a person with adequate knowledge of electrical wiring.

- **WARNING:** To avoid electric shock, disconnect power at the main fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC).
- Do not install this fixture in wet or damp locations. It is designed for dry, indoor use only.
- Ensure the fixture is securely mounted to a structural component of the building.
- Do not exceed the maximum wattage specified for the bulbs.
- Handle glass components and bulbs with care to prevent breakage.

## 3. Package Contents

Carefully unpack your fixture and inspect the contents to ensure all parts are present and undamaged. Keep all packaging materials until installation is complete to prevent accidental disposal of small parts.

| Item | Description | Quantity |
|---|---|---|
| A | Mounting Hardware (Crossbar, Screws, Wire Nuts) | 1 Set |
| B | Canopy/Ceiling Plate | 1 |

| Item | Description | Quantity |
|---|---|---|
| C | Chain Assembly | 1 Set |
| D | Fixture Body with Socket Cluster | 1 |
| E | Pleated Linen Shade | 1 |

*Note: Bulbs are typically not included and must be purchased separately. Refer to the Specifications section for recommended bulb type and wattage.*

## 4. Setup and Installation

Follow these steps carefully to install your Z-Lite Madeline pendant light. It is recommended to have assistance during installation due to the size and weight of the fixture.

1. **Turn Off Power:** Before starting, ensure the power to the junction box is turned off at the circuit breaker or fuse box.
2. **Install Mounting Hardware:** Attach the mounting crossbar to the junction box using the provided screws. Ensure it is securely fastened.
3. **Determine Hanging Height:** Adjust the length of the chain to achieve your desired hanging height. The decorative chains allow for flexible height adjustment. Once the desired length is determined, you may need to remove excess chain links.
4. **Wire the Fixture:**
    - Connect the bare copper ground wire from the fixture to the green or bare copper ground wire from the junction box using a wire nut.
    - Connect the ribbed (or white) wire from the fixture to the white (neutral) wire from the junction box using a wire nut.
    - Connect the smooth (or black) wire from the fixture to the black (hot) wire from the junction box using a wire nut.
    - Ensure all wire connections are secure and tucked neatly into the junction box.
5. **Mount the Canopy:** Carefully push the canopy up to the ceiling, aligning the mounting screws with the holes in the canopy. Secure the canopy in place with the decorative nuts.
6. **Assemble Shade and Bulbs:**
    - Attach the pleated linen shade to the fixture body according to the manufacturer's instructions.
    - Install five (5) E12 candelabra base bulbs (max 60W each) into the sockets. Do not overtighten.



Image 4.1: Detailed view of the five E12 candelabra base bulb sockets at the base of the pendant fixture.

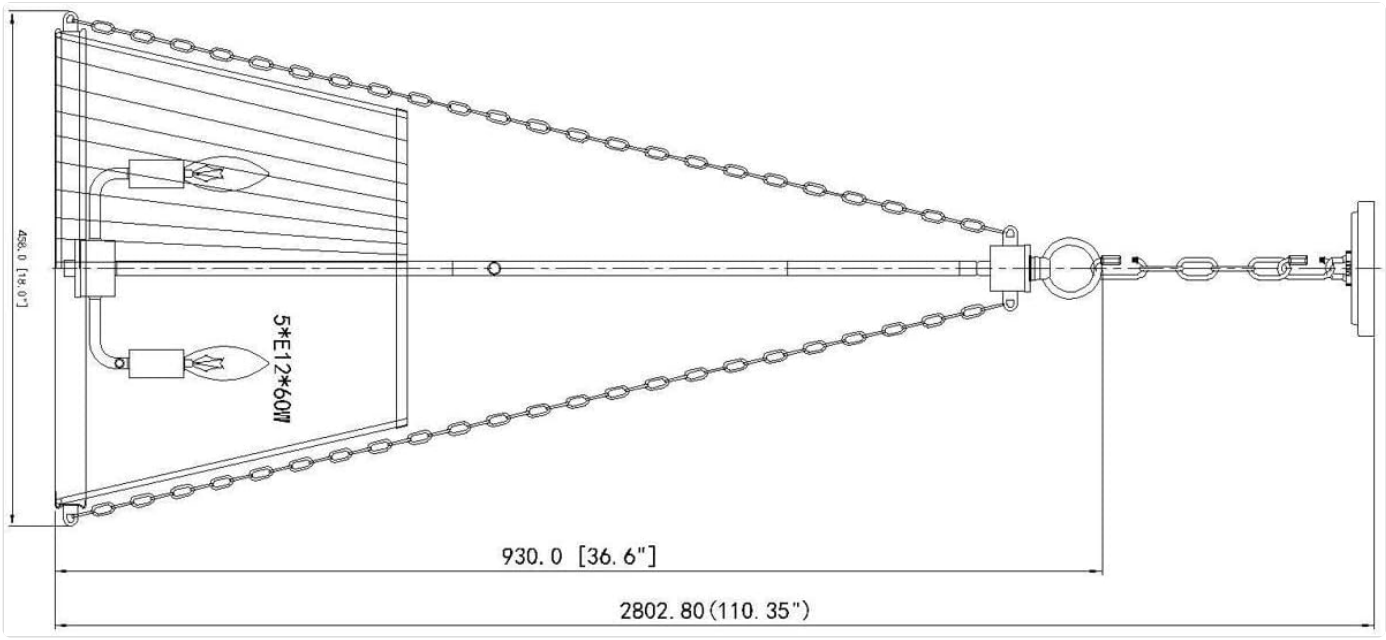



Image 4.2: Technical drawing illustrating the dimensions of the Z-Lite Madeline pendant and specifying the use of 5 E12 60W bulbs.

- **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

## 5. Operating Instructions

The Z-Lite Madeline pendant light operates via a standard wall switch connected to the circuit. Ensure the correct bulbs are installed before operation.

- To turn the light **ON**, flip the wall switch to the 'ON' position.
- To turn the light **OFF**, flip the wall switch to the 'OFF' position.
- If using dimmable bulbs and a compatible dimmer switch, you can adjust the light intensity by manipulating the dimmer control.

## 6. Maintenance

Regular maintenance will help preserve the appearance and functionality of your pendant light.

- **Cleaning:**
  - Always disconnect power before cleaning.
  - For the brushed nickel finish, wipe with a soft, dry cloth. Do not use abrasive cleaners, polishes, or solvents as they may damage the finish.
  - For the linen shade, gently dust with a soft brush or use a vacuum cleaner with a brush attachment on a low setting. Spot clean with a damp cloth if necessary, avoiding excessive moisture.
- **Bulb Replacement:**
  - Ensure the fixture is cool and power is disconnected before replacing bulbs.
  - Use only E12 candelabra base bulbs with a maximum wattage of 60W per bulb.
  - Carefully screw in new bulbs, ensuring they are seated properly.

## 7. Troubleshooting

If you encounter issues with your pendant light, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| Light does not turn on. | • Power is off at the circuit breaker.<br>• Loose wire connections.<br>• Faulty bulb(s).<br>• Faulty wall switch. | • Check the circuit breaker and ensure it is in the 'ON' position.<br>• Turn off power, check all wire connections in the junction box and fixture.<br>• Replace bulb(s) with new ones.<br>• Consult a qualified electrician to inspect or replace the switch. |
| Light flickers or dims. | • Loose bulb.<br>• Incorrect bulb type/wattage.<br>• Loose wire connection.<br>• Incompatible dimmer switch (if applicable). | • Tighten bulbs securely.<br>• Ensure bulbs match specifications (E12, max 60W).<br>• Turn off power, check all wire connections.<br>• Ensure dimmer switch is compatible with incandescent/LED bulbs used. |
| Fixture hums. | • Incompatible dimmer switch.<br>• Loose wiring. | • Replace dimmer with a high-quality, compatible model.<br>• Turn off power, check all wire connections. |

## 8. Specifications

| Feature | Detail |
|---|---|
| Model Number | 1954P18-BN |
| Brand | Z-Lite |
| Finish Color | Brushed Nickel |
| Material | Alloy Steel |
| Style | Madeline |
| Number of Lights | 5 |
| Bulb Type | E12 Candelabra Base (not included) |
| Max Wattage per Bulb | 60 Watts |
| Voltage | 120 Volts |
| Item Weight | 8 Pounds (approx. 3.63 kg) |
| Product Dimensions (L x W x H) | 18 x 18 x 36.75 inches (approx. 45.7 x 45.7 x 93.3 cm) |
| Mounting Type | Ambient Lighting (Ceiling Mount) |
| UPC | 685659203684 |

## 9. Warranty and Support

This Z-Lite product comes with a**Limited Warranty**. For specific details regarding the terms and conditions of your warranty, please refer to the documentation included with your purchase or contact Z-Lite customer support directly.

For technical assistance, replacement parts, or warranty claims, please contact Z-Lite customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

*Please retain your proof of purchase for warranty purposes.*

© 2025 Z-Lite. All rights reserved. Information subject to change without notice.
For the latest information, please visit the official Z-Lite website.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

**Open the live page**

**https://manuals.plus/asin/B0DWZ58SJJ**

More documents and user manuals: **https://manuals.plus/**