Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LITEKON B0DXFCJ65Y

LITEKON Cordless Mini Chainsaw 1000W - Instruction Manual

MODEL: B0DXFCJ65Y

Introduction

Thank you for choosing the LITEKON Cordless Mini Chainsaw. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new tool. Please read it thoroughly before first use and keep it for future reference.

What's in the Box

Your LITEKON Cordless Mini Chainsaw package includes the following components:

- 1 x Mini Chainsaw Unit
- 2 x 2000mAh Lithium-Ion Batteries
- 1 x Quick Charger
- 2 x Guide Plates (one pre-mounted, one extra)
- 2 x Chains (one pre-mounted, one extra)
- 1 x Safety Goggles
- 1 x Work Gloves
- 1 x Cleaning Brush
- 1 x Lube Bottle (empty, for user-supplied oil)
- 1 x Screwdriver (for chain adjustment)
- 1 x Storage Box
- 1 x Instruction Manual



Image: Complete LITEKON Mini Chainsaw Set, including the chainsaw, batteries, charger, and accessories, neatly organized in its storage box.

▶ **Watch video online**

Unboxing Video of Mini Chainsaw

Video: An unboxing demonstration of the LITEKON Mini Chainsaw, showcasing all included components and their arrangement within the packaging.

Safety Information

Your safety is paramount. Adhere to these guidelines to prevent accidents and injuries:

- **Personal Protective Equipment:** Always wear appropriate personal protective equipment, including the provided safety goggles and work gloves, when operating the chainsaw.
- **Safety Button:** The chainsaw is equipped with a safety button that must be pressed simultaneously with the trigger to operate, preventing accidental starts.

- **Chain Protection:** Utilize the provided chain cover and hand guard to protect against injuries during operation and storage. Ensure the chain cover is in place when the chainsaw is not in use.
- **Stable Stance:** Maintain a firm grip on the chainsaw and ensure a stable stance before and during operation.



Image: A user demonstrating the proper grip and use of the hand guard on the LITEKON Mini Chainsaw for enhanced safety.

Setup

Follow these steps to prepare your chainsaw for use:

1. **Battery Installation:** Insert a fully charged 20V Lithium-Ion battery into the chainsaw's battery slot until it clicks securely into place.
2. **Oil Filling:** Locate the oil tank cap on the chainsaw. Unscrew the cap and carefully pour bar and chain lubricant (not included, but a small bottle is provided for convenience) into the tank. Do not overfill. Press the bubble hole a few times to ensure the chain is lubricated.
3. **Chain Tension Adjustment:** Check the chain tension. The chain should be snug but still able to be pulled around the guide bar by hand. Adjust tension using the provided screwdriver if necessary, ensuring it's not too tight or too loose.

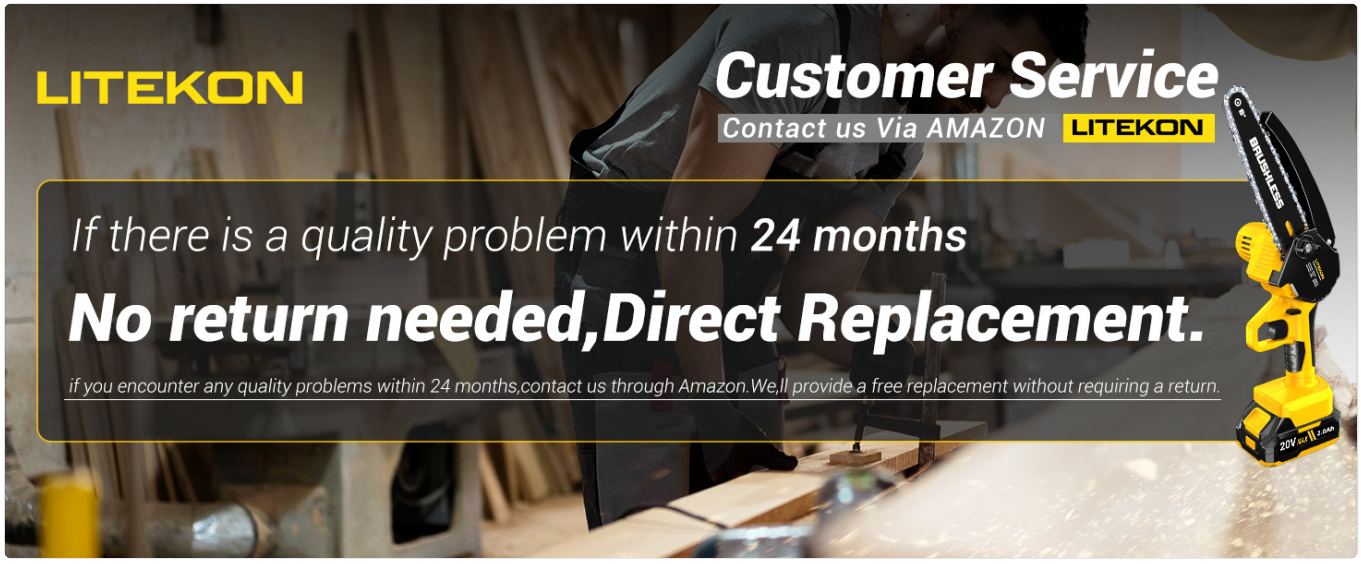


Image: A visual guide illustrating the six steps for setting up the LITEKON Mini Chainsaw, including oiling and battery insertion.



Image: Close-up of the LITEKON Mini Chainsaw's automatic oil filling system, showing oil being poured into the reservoir.

Operating Instructions

To begin using your LITEKON Cordless Mini Chainsaw:

- **Power On:** To start the chainsaw, press and hold the safety button, then squeeze the trigger. Release the safety button once the chain starts moving.
- **Cutting Capacity:** The 1000W brushless motor provides superior cutting power, capable of cutting through 6-inch wood branches effortlessly with a chain speed of 36 FT/S.
- **Cutting Technique:** Always maintain a firm grip on the chainsaw and ensure a stable stance. Allow the chainsaw to do the work; do not force it through the wood.
- **Avoid Overload:** Avoid cutting branches larger than the recommended 6-inch capacity to prevent damage to the tool and ensure safety.



Image: The LITEKON Mini Chainsaw cutting a 6-inch diameter log, highlighting its cutting capacity.



Image: A detailed view of the LITEKON Mini Chainsaw's brushless motor, emphasizing its 1000W power and 36 FT/S chain speed.

▶ **Watch video online**

Litekon Mini Chainsaw Yellow+2 battery

Video: A demonstration of the LITEKON Mini Chainsaw in action, cutting various tree branches and showcasing its performance.

▶ **Watch video online**

Powerful Brushless Mini Chainsaw

Video: A short video highlighting the powerful brushless motor of the LITEKON Mini Chainsaw during cutting tasks.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your chainsaw:

- **Chain Lubrication:** The chainsaw features a double-pump automatic chain lubricating system. Regularly check the oil level and refill as needed to ensure smooth operation and reduce wear on the chain and bar.

- **Cleaning:** After each use, disconnect the battery and use the provided cleaning brush to remove sawdust, debris, and resin from the chain, guide bar, and motor housing.
- **Chain Replacement:** If the chain becomes dull or damaged, replace it with the provided spare chain or a compatible replacement. Refer to the detailed instructions in the included manual for proper chain replacement and tensioning.



Image: A close-up view of the manganese steel chain, highlighting its sharpness and heat-resistant properties for durability.

Troubleshooting

If you encounter any operational issues not covered in this manual, please ensure the battery is fully charged, the chain is properly tensioned, and the oil reservoir is filled. For persistent problems, contact LITEKON customer support.

Specifications

Feature	Specification
Brand	LITEKON
Power Source	Battery Powered
Horsepower	1000 Watts
Item Weight	2 Kilograms (4.4 pounds)
Product Dimensions	5"L x 5"W x 14"H
Chain Length	6 Inches
Chain Speed	36 FT/S
Batteries	2 x 12V (20V Max) 2000mAh Lithium Ion (included)
Material	Plastic
UPC	789563854977



Image: A visual representation of the high-performance 20V Max 2000mAh Lithium-Ion battery, highlighting its capacity and durability features.

Warranty and Support

LITEKON stands behind its products:

- **24-Month Direct Replacement:** If there is a quality problem within 24 months of purchase, LITEKON offers a direct replacement. No return is needed for eligible issues.
- **30-Day Return Policy:** A 30-day refund or replacement policy is available through the retailer.
- **Customer Service:** For any quality problems or support inquiries, contact LITEKON via Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DXFCJ65Y

More documents and user manuals: **https://manuals.plus/**