iROCKER CRUISER 7.0

iROCKER Cruiser 7.0 Inflatable Stand Up Paddle Board Instruction Manual

Model: CRUISER 7.0

1. Introduction

This manual provides essential instructions for the safe and effective use of your iROCKER Cruiser 7.0 Inflatable Stand Up Paddle Board. The iROCKER Cruiser 7.0 is designed for beginners, SUP yoga enthusiasts, families with children, and intermediate paddlers who prefer a stable and comfortable experience. It offers ample room for one rider and additional cargo, or can accommodate two riders, with a maximum weight capacity of 435 lbs.

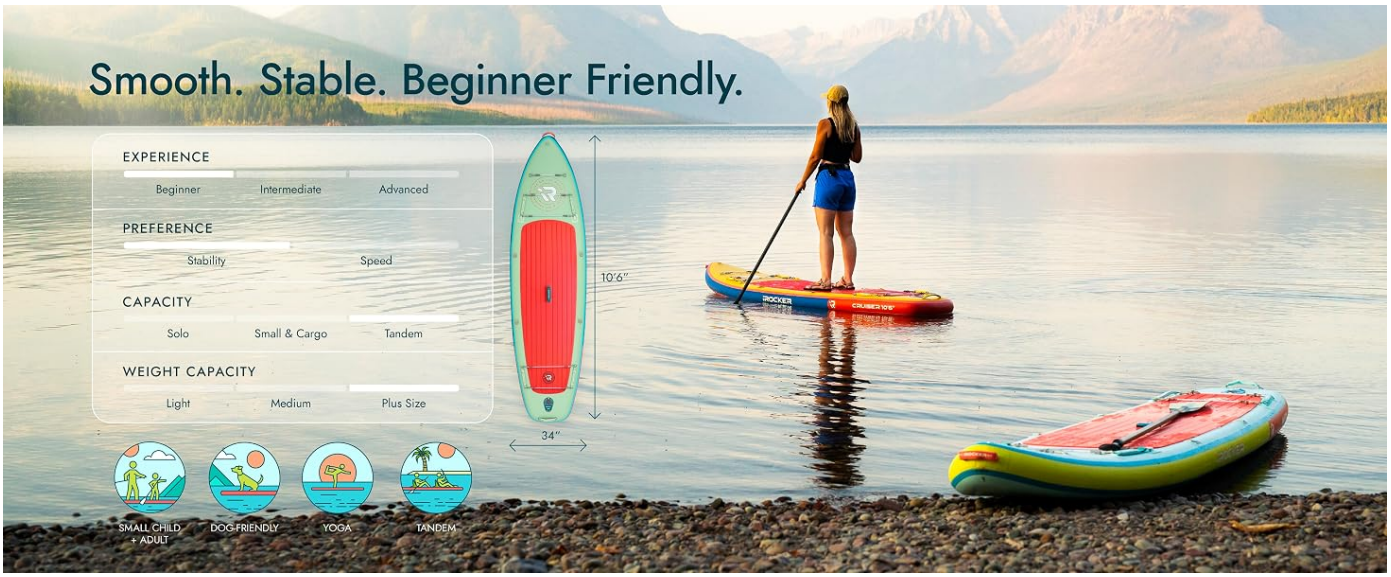


Image: The iROCKER Cruiser 7.0 paddle board demonstrating its smooth, stable, and beginner-friendly design on calm water.

2. What's Included

Your iROCKER Cruiser 7.0 package includes the following components:

- 1 x 10’6"/3.2m CRUISER 10'6" Inflatable Stand Up Paddle Board
- 3 x Removable Nylon SUP Fins (1 Center Fin and 2 Side Fins)
- 1 x 10'/3m Leash With Key Stash Spot
- 1 x 3-Piece Hexa-Edge Carbon Paddle
- 1 x iROCKER Universal Carry Strap
- 1 x Electric Pump
- 1 x Repair Kit (Patches And Valve Wrench, Glue Sold Separately)



Image: All components of the iROCKER Cruiser 7.0 package, including the paddle board, paddle, fins, leash, carry strap, electric pump, and repair kit.

3. Setup Instructions

3.1. Inflation

1. Locate the inflation valve on the board. Twist the cap counter-clockwise to open.
2. Ensure the inner pin of the valve is in the 'up' position for inflation. If it's down, press it to pop it up.
3. Connect the hose of the included 12V electric pump to the valve. The pump can be powered by a power point, cigarette lighter, or a portable 12V battery (sold separately).
4. Inflate the board to the recommended pressure of**14-18 PSI**. The electric pump can inflate the SUP in 12 minutes or less.
5. Once inflated, quickly remove the pump hose and replace the valve cap by twisting it clockwise until secure.

3.2. Fin Attachment

The iROCKER Cruiser 7.0 features three removable nylon fins. These rigid resin fins are designed for quick and secure attachment.

1. Slide each fin into its designated slot on the underside of the board.
2. Secure each fin using the locking lever system until it clicks firmly into place.

3.3. Leash Attachment

Attach the provided 10'/3m leash to the D-ring at the tail of the board and secure the ankle cuff to your ankle. This safety measure ensures the board remains close to you if you fall into the water.

4. Operating Instructions

4.1. Stability and Deck Features

The iROCKER Cruiser 7.0 offers enhanced stability, making it suitable for various activities including leisurely paddling, SUP yoga, or paddling with children and pets. The extra-wide base contributes to this stability.



Image: A person and a dog enjoying the wide and stable iROCKER Cruiser 7.0 paddle board on a calm body of water.

The deck features a soft, grippy pad in the middle for secure footing. While some areas of the board may become slick when wet, the overall design minimizes the risk of slipping.



Image: A person standing and paddling on the iROCKER Cruiser 7.0, showcasing its use in water.

4.2. Carrying and Storage

The board is equipped with multiple handles for easy carrying. Additionally, various D-rings and elastic bungee cords are strategically placed around the board, allowing you to secure gear, coolers, or other accessories during your paddle.

Image: A person and a dog on the iROCKER Cruiser 7.0, highlighting its suitability for tandem use.

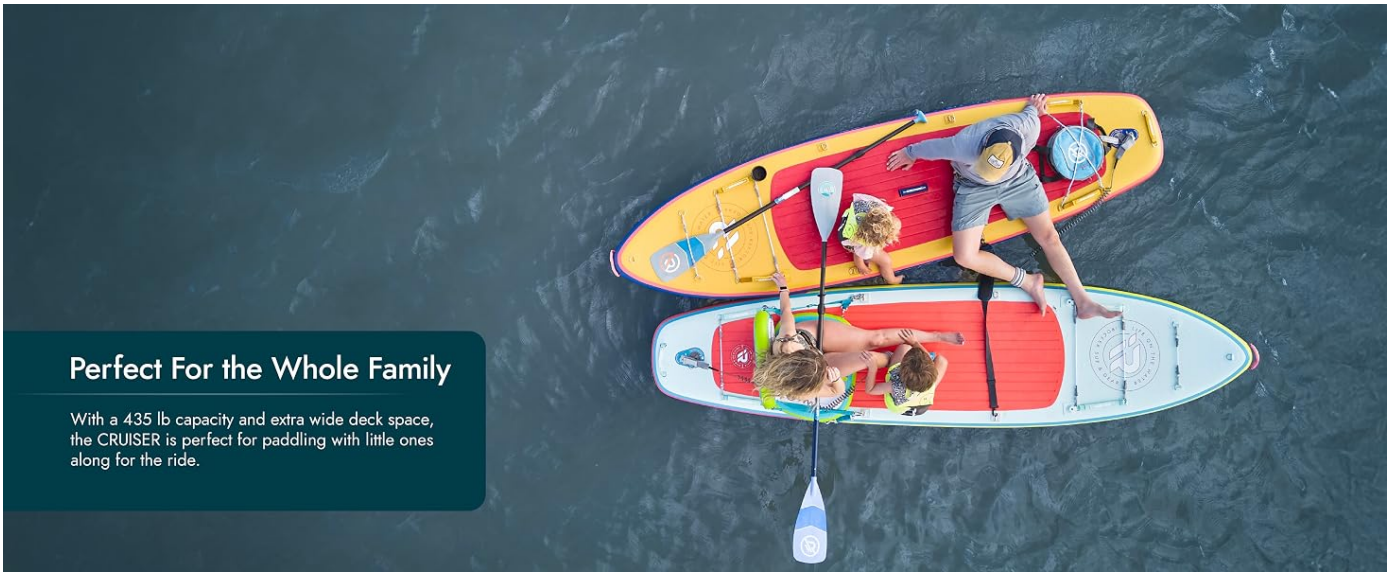


Image: A family enjoying paddleboarding on iROCKER SUPs, illustrating the board's family-friendly design.

5. Maintenance

To ensure the longevity and optimal performance of your iROCKER Cruiser 7.0, follow these maintenance guidelines:

- **Cleaning:** After each use, rinse the board thoroughly with fresh water to remove salt, sand, and debris. Use a mild soap if necessary.
- **Drying:** Allow the board to dry completely before deflating and storing to prevent mold and mildew growth.
- **Storage:** Store the deflated board in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on top of the folded board.
- **Inspection:** Regularly inspect the board for any signs of wear, punctures, or damage. Address minor issues promptly using the included repair kit.
- **Valve Care:** Keep the inflation valve clean and free of sand or debris to ensure a proper seal.

6. Troubleshooting

If you encounter any issues with your iROCKER Cruiser 7.0, consider the following common troubleshooting steps:

- **Board losing air:** Check the inflation valve to ensure it is clean, properly sealed, and the inner pin is in the 'up' position. Inspect the board for any visible punctures or leaks. Use soapy water to identify small leaks.
- **Difficulty inflating:** Ensure the electric pump is correctly connected to a power source and the valve. Verify that the valve's inner pin is in the 'up' position.
- **Instability during use:** Confirm the board is inflated to the recommended 14-18 PSI. Under-inflation can significantly reduce stability. Ensure fins are securely attached.
- **Paddle assembly issues:** Ensure all three pieces of the paddle are correctly aligned and locked into place. Adjust the paddle length to suit your height for optimal performance.

For further assistance, please refer to the support information in Section 8.

7. Specifications

Feature	Specification
Model Name	CRUISER 7.0
Skill Level	Beginner
Maximum Weight Recommendation	435 Pounds
Item Dimensions (L x W x H)	126"L x 34"W x 6"H

Material	Triple-Layer, Military-Grade PVC with Drop-Stitch Core
Sport	Paddleboarding
UPC	810136412147

8. Warranty and Support

The iROCKER Cruiser 7.0 Inflatable Stand Up Paddle Board comes with a**3 Year Manufacturer Warranty**.
For warranty claims, product support, or additional information, please visit the officialROCKER Store or contact iROCKER customer service directly.

© 2025 iROCKER. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question