## LEXiBOOK RL800HP1

LEXiBOOK Hedwig Nightlight Alarm Clock (Model RL800HP1) Instruction Manual

Brand: LEXiBOOK | Model: RL800HP1

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your LEXiBOOK Hedwig Nightlight Alarm Clock (Model RL800HP1). Please read this guide thoroughly before use to ensure proper functionality and safety.

SAFETY INFORMATION

- Keep away from water and moisture.
- Do not expose to direct sunlight or extreme temperatures.
- Use only the specified battery type (3 x AA/LR6, not included).
- Do not mix old and new batteries, or different types of batteries.
- Dispose of batteries responsibly according to local regulations.
- This product is not a toy. Adult supervision is recommended for young children.

PACKAGE CONTENTS

- 1 x LEXiBOOK Hedwig Nightlight Alarm Clock (Model RL800HP1)
- 1 x Instruction Manual

Image: The Hedwig Nightlight Alarm Clock shown in its retail packaging, highlighting its design and features.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the alarm clock.
2. Using a small screwdriver, open the battery compartment cover.
3. Insert 3 x AA/LR6 batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Initial Power-On

Once batteries are installed, the LCD screen should light up, indicating the device is ready for use.

Image: Rear view of the Hedwig Nightlight Alarm Clock, illustrating the location of the battery compartment and control buttons.

OPERATING INSTRUCTIONS

1. Setting Time and Alarm

Refer to the buttons on the back of the unit for time and alarm settings. Specific button functions are typically indicated by icons or labels.

- **Time Setting:** Press the "TIME SET" button (or similar) and use the +/- buttons to adjust hours and minutes. Press "SET" again to confirm.
- **Alarm Setting:** Press the "ALARM SET" button (or similar) and use the +/- buttons to set the desired alarm time. Press "SET" again to confirm.
- **Alarm Activation/Deactivation:** Use the dedicated alarm ON/OFF switch or button to enable or disable the alarm.

2. Nightlight Function

The Hedwig figure illuminates to provide a gentle nightlight. This function can be activated by pressing the Hedwig figure or a dedicated button.

- **Activate Nightlight:** Press down on the Hedwig figure or locate the nightlight button (often indicated by a lightbulb icon).
- **LCD Screen Backlight:** The LCD screen backlight can be adjusted or turned off for glare-free nights. Consult the specific controls on your device for this feature.

Image: The Hedwig Nightlight Alarm Clock with its Hedwig figure illuminated, surrounded by musical notes, indicating its sound and light features.

3. Sound and Melody Selection

Choose from 6 sounds and ringtones inspired by Hedwig and the Harry Potter universe.

- **Select Melody:** Use the "SOUND" or "MELODY" button (or similar) to cycle through available sounds.
- **Adjust Volume:** Use the "VOLUME" +/- buttons to set the desired alarm volume.

4. Snooze Function

To temporarily silence the alarm and get a few extra minutes of sleep:

- When the alarm sounds, press the top of the clock or the Hedwig figure to activate the snooze function. The alarm will sound again after a short interval.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace all batteries when the low battery indicator appears or when the display dims. Follow the battery installation steps in the Setup section.
- **Storage:** If not using the clock for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Solution
Clock does not turn on/display is blank.	Check battery installation. Ensure batteries are new and correctly inserted.
Alarm does not sound.	Verify the alarm is activated. Check the alarm volume setting. Replace batteries if low.
Nightlight does not work.	Ensure batteries are not depleted. Press the Hedwig figure firmly.
Time is inaccurate.	Reset the time following the operating instructions. Replace batteries if the issue persists.

SPECIFICATIONS

- **Brand:** LEXiBOOK
- **Model:** RL800HP1
- **Color:** White
- **Display Type:** Digital LCD
- **Power Source:** 3 x AA batteries (not included)
- **Product Dimensions:** 3.5"W x 7.1"H
- **Item Weight:** 7.8 ounces
- **Material:** Plastic
- **Special Features:** Nightlight, Alarm, Snooze, 6 Sounds/Ringtones

OFFICIAL PRODUCT VIDEOS
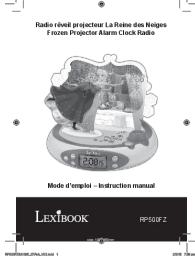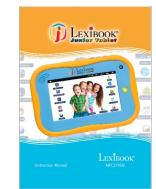
Your browser does not support the video tag.

Video: An official product video from Lexibook Limited showcasing the Hedwig Nightlight Alarm Clock (Model RL800HP1), demonstrating its features and design.

WARRANTY AND SUPPORT

LEXiBOOK products are designed for quality and reliability. For warranty information or technical support, please refer to the contact details provided in the product packaging or visit the official LEXiBOOK website.
For additional assistance, you may also contact the seller directly through the platform where the product was purchased.

Related Documents - RL800HP1

[Coach Theo My Sleep Companion Instruction Manual](#)
User guide for the Lexibook Coach Theo My Sleep Companion alarm clock, detailing setup, functions, safety, and warranty information.

[Lexibook Toy Story Buzz Lightyear Projector Alarm Clock Radio - Instruction Manual](#)
Instruction manual for the Lexibook Toy Story Buzz Lightyear Projector Alarm Clock Radio (RP500TS), detailing product description, battery information, settings for clock, alarm, stopwatch, radio, melodies, night light, and projector, along with technical specifications and warranty information.

[My Educational Sleep Companion RLT100D Instruction Manual](#)
Comprehensive instruction manual for the Lexibook RLT100D My Educational Sleep Companion. Learn how to set up alarms, utilize light effects, nap timer, sunrise/sunset simulation, and access maintenance and warranty information.

[Lexibook Frozen Projector Alarm Clock Radio RP500FZ - User Manual](#)
Official user manual for the Lexibook Frozen Projector Alarm Clock Radio (Model RP500FZ). This guide provides instructions on setup, features, specifications, maintenance, and warranty information.

[Lexibook Junior Tablet MFC270EN Instruction Manual - Setup, Features, and Safety Guide](#)
Comprehensive instruction manual for the Lexibook Junior Tablet (MFC270EN). Learn how to set up, navigate, use apps, connect to Wi-Fi, and follow safety guidelines for this educational and entertaining device.

[Coach Leon My Sleep Companion Instruction Manual](#)
Official instruction manual for the Lexibook Coach Leon My Sleep Companion alarm clock, detailing setup, features, safety, and maintenance.