Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TOPGOOSE B0F29SPLKL

TOPGOOSE 360 Degree View 4 Channel Dash Cam User Manual

Model: B0F29SPLKL

Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your TOPGOOSE 360 Degree View 4 Channel Dash Cam. This device is designed to record video from four distinct perspectives: front, rear, inside the cabin, and left/right sides of your vehicle, offering extensive coverage for enhanced driving safety and incident recording.

Please read this manual thoroughly before using the product to ensure proper functionality and to maximize its features.

Package Contents

Verify that all items listed below are included in your package:

- 1 x Dual Dash Cam Unit
- 1 x Adjustable Suction Mount
- 1 x Rear Camera
- 1 x Rear Camera Cable
- 1 x Car Charger (Lighter car charger power)
- 1 x USB Type-C Charging Cable
- 1 x User Manual
- 1 x 64GB High-Speed Memory Card (TF Card)
- 2 x Screws (for rear camera mounting)
- 1 x 3M Adhesive (for rear camera mounting)



Figure 1: Contents of the TOPGOOSE Dash Cam package.

Product Overview

The TOPGOOSE 360 Degree View 4 Channel Dash Cam provides comprehensive vehicle surveillance with its multi-camera system. It features a main unit with front, cabin, left, and right cameras, complemented by a separate rear camera. All cameras record in Full HD 1080P, ensuring clear video evidence.

Key Features:

- **Quad Camera System:** Records simultaneously from front, rear, inside, and side views.
- **Full HD 1080P Recording:** High-resolution video capture for all channels.
- **360-Degree Coverage:** Wide-angle lenses (170° front/side, 150° cabin, 170° rear) minimize blind spots.
- **G-Sensor:** Automatically locks video files upon sudden impact or collision to prevent overwriting.
- **Loop Recording:** Continuously records by overwriting the oldest files when the memory card is full.
- **24-Hour Parking Monitor:** Detects motion and impacts when the vehicle is parked (requires optional hardwire kit).
- **Super Night Vision:** Enhanced low-light performance with F1.8 aperture and infrared lights for clear night recordings.
- **3-Inch Display:** Provides real-time view and easy access to settings.



Figure 2: Quad Camera System Overview.

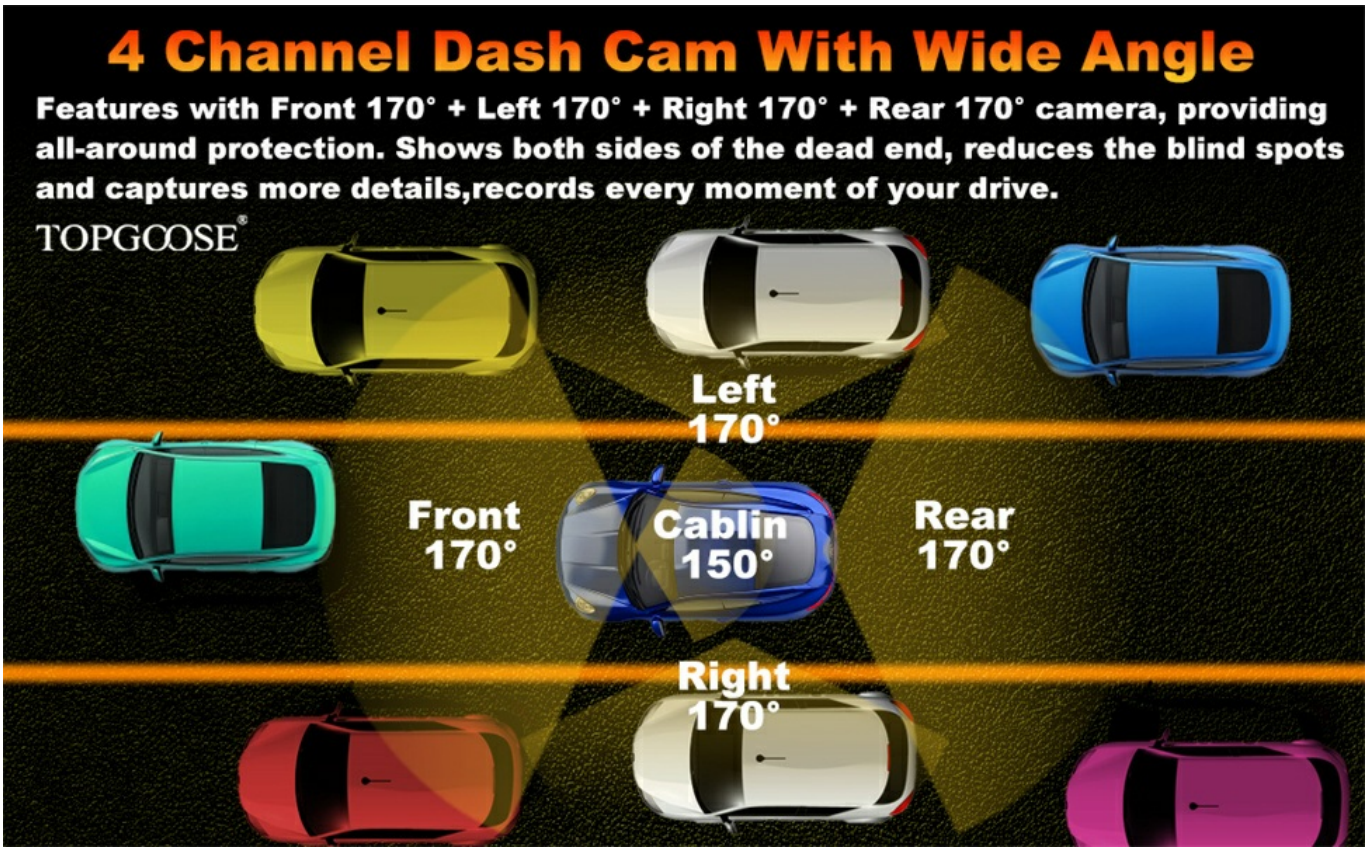


Figure 3: 360-Degree All-Around Protection.

Setup

1. Install the Memory Card

Insert the provided 64GB TF card into the dash cam's memory card slot. Ensure it is inserted correctly until it clicks into place. The dash cam supports up to 128GB TF cards (Class 10 or higher recommended).

2. Mount the Dash Cam

Attach the adjustable suction mount to the dash cam. Clean the windshield area where you intend to mount the dash cam. Press the suction cup firmly against the windshield and flip the lever to secure it. Position the dash cam to ensure a clear view for the front camera without obstructing your driving view.

3. Install the Rear Camera

Connect the rear camera to the main dash cam unit using the provided rear camera cable. Route the cable neatly along the vehicle's interior trim to the rear of the car. Mount the rear camera on the rear windshield using the 3M adhesive or screws, ensuring it has a clear view of the road behind.



Figure 4: Rear Camera Unit.

4. Connect Power

Plug the car charger into your vehicle's cigarette lighter socket. Connect the other end of the car charger cable to the dash cam's power input port. Route the cable discreetly to avoid interference with driving controls. The dash cam will automatically power on and begin recording when the vehicle's ignition is turned on.



Figure 5: Easy Installation Diagram.

Your browser does not support the video tag.

Video 1: This video provides a visual guide on how to install and use the TOPGOOSE Dash Cam, demonstrating the mounting process, cable management, and basic operation.

Operating Instructions

1. Power On/Off

The dash cam automatically powers on and begins recording when connected to the car charger and the vehicle's ignition is on. It powers off automatically when the ignition is turned off.

2. Recording Modes

- **Normal Recording:** Continuous recording while driving. Files are saved in segments (e.g., 1, 3, or 5 minutes) and loop recorded.
- **Loop Recording:** When the memory card is full, the oldest unlocked files are automatically overwritten by new recordings.
- **G-Sensor (Emergency Lock):** In the event of a sudden impact or collision, the built-in G-sensor detects the event and automatically locks the current video file, preventing it from being overwritten by loop recording.
- **Parking Monitor:** With an optional hardwire kit (not included), the dash cam can monitor your vehicle for impacts or motion even when parked, recording incidents to protect your car.



Figure 6: G-Sensor, Parking Monitor, and Loop Recording Features.



Figure 7: 24-Hour Parking Monitoring.

3. Night Vision

The dash cam is equipped with Super Night Vision technology, featuring an F1.8 aperture and infrared lights for the cabin camera, ensuring clear recordings in low-light conditions. Wide Dynamic Range (WDR) technology automatically adjusts exposure to capture details in both bright and dark areas, reducing chromatic aberrations.



Figure 8: Super Night Vision Capabilities.



Figure 9: Super Night Vision 2.0 for Enhanced Clarity.

4. Wide Angle Coverage

The front and side cameras feature a 170-degree wide-angle lens, capturing a broad view of the road ahead and adjacent lanes. The cabin camera provides a 150-degree view, and the rear camera offers a 170-degree view, ensuring comprehensive coverage around your vehicle.



Figure 10: 170-Degree Wide Angle View.

Maintenance

1. Memory Card Formatting

It is recommended to format the memory card regularly (e.g., once a month) to ensure optimal performance and prevent data corruption. This can typically be done through the dash cam's settings menu. Formatting will erase all data on the card, so back up any important files beforehand.

2. Cleaning

Use a soft, dry cloth to clean the dash cam lenses and screen. Avoid using abrasive cleaners or solvents, which can damage the device. Ensure the suction cup is clean for a secure mount.

3. Environmental Considerations

The dash cam is built to withstand a wide range of temperatures, from -4°F to 140°F (-20°C to 60°C). However, prolonged exposure to extreme temperatures outside this range may affect its lifespan and performance. Avoid leaving the device in

direct sunlight for extended periods in very hot climates.



Figure 11: Temperature Resistance.

Troubleshooting

Dash Cam Not Powering On:

- Ensure the car charger is securely plugged into both the dash cam and the vehicle's cigarette lighter socket.
- Check if the vehicle's cigarette lighter socket is receiving power. Test with another device if possible.
- Verify that the vehicle's ignition is on.

Recording Stops or Freezes:

- Format the memory card regularly to clear old data and maintain performance.
- Ensure you are using a high-speed (Class 10 or higher) TF card.
- Check if the memory card is full. If so, enable loop recording or manually delete unnecessary files.

Poor Video Quality:

- Clean the camera lenses to remove any dirt or smudges.
- Ensure the protective film has been removed from the lenses.
- Adjust the dash cam's position to avoid glare or reflections from the windshield.

G-Sensor Too Sensitive/Not Sensitive Enough:

- Adjust the G-sensor sensitivity setting in the dash cam's menu. Lower sensitivity for fewer false triggers, higher for more detection.

Specifications

Feature	Specification
Brand	TOPGOOSE
Model	B0F29SPLKL
Video Capture Resolution	1080p (FHD)
Number of Cameras	4 (Front, Inside, Left, Right) + 1 (Rear)
Field of View	360 degrees total (170° Front/Side, 150° Cabin, 170° Rear)
Screen Size	3 inches
Memory Storage Capacity	64 GB (TF Card included)
Frame Rate	30 FPS
Product Dimensions (D x W x H)	2.36" x 3.15" x 2.76"
Item Weight	380 g
Battery Cell Type	Lithium Ion
Operating Temperature Range	-4°F to 140°F (-20°C to 60°C)

Support

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided in the packaging or visit the official TOPGOOSE website. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F29SPLKL

More documents and user manuals: **https://manuals.plus/**