Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hanpusen 363f9b84-4f28-4a1c-9666-1bcf048cca8a

Hanpusen Rechargeable Wireless Camera Remote Control Instruction Manual

Model: 363f9b84-4f28-4a1c-9666-1bcf048cca8a

Product Overview

The Hanpusen Rechargeable Wireless Camera Remote Control is designed to enhance your photography experience by providing convenient remote operation for compatible Canon cameras. Featuring an OLED display, this remote supports various shooting modes and offers a wireless range of up to 10 meters (32.8 feet).

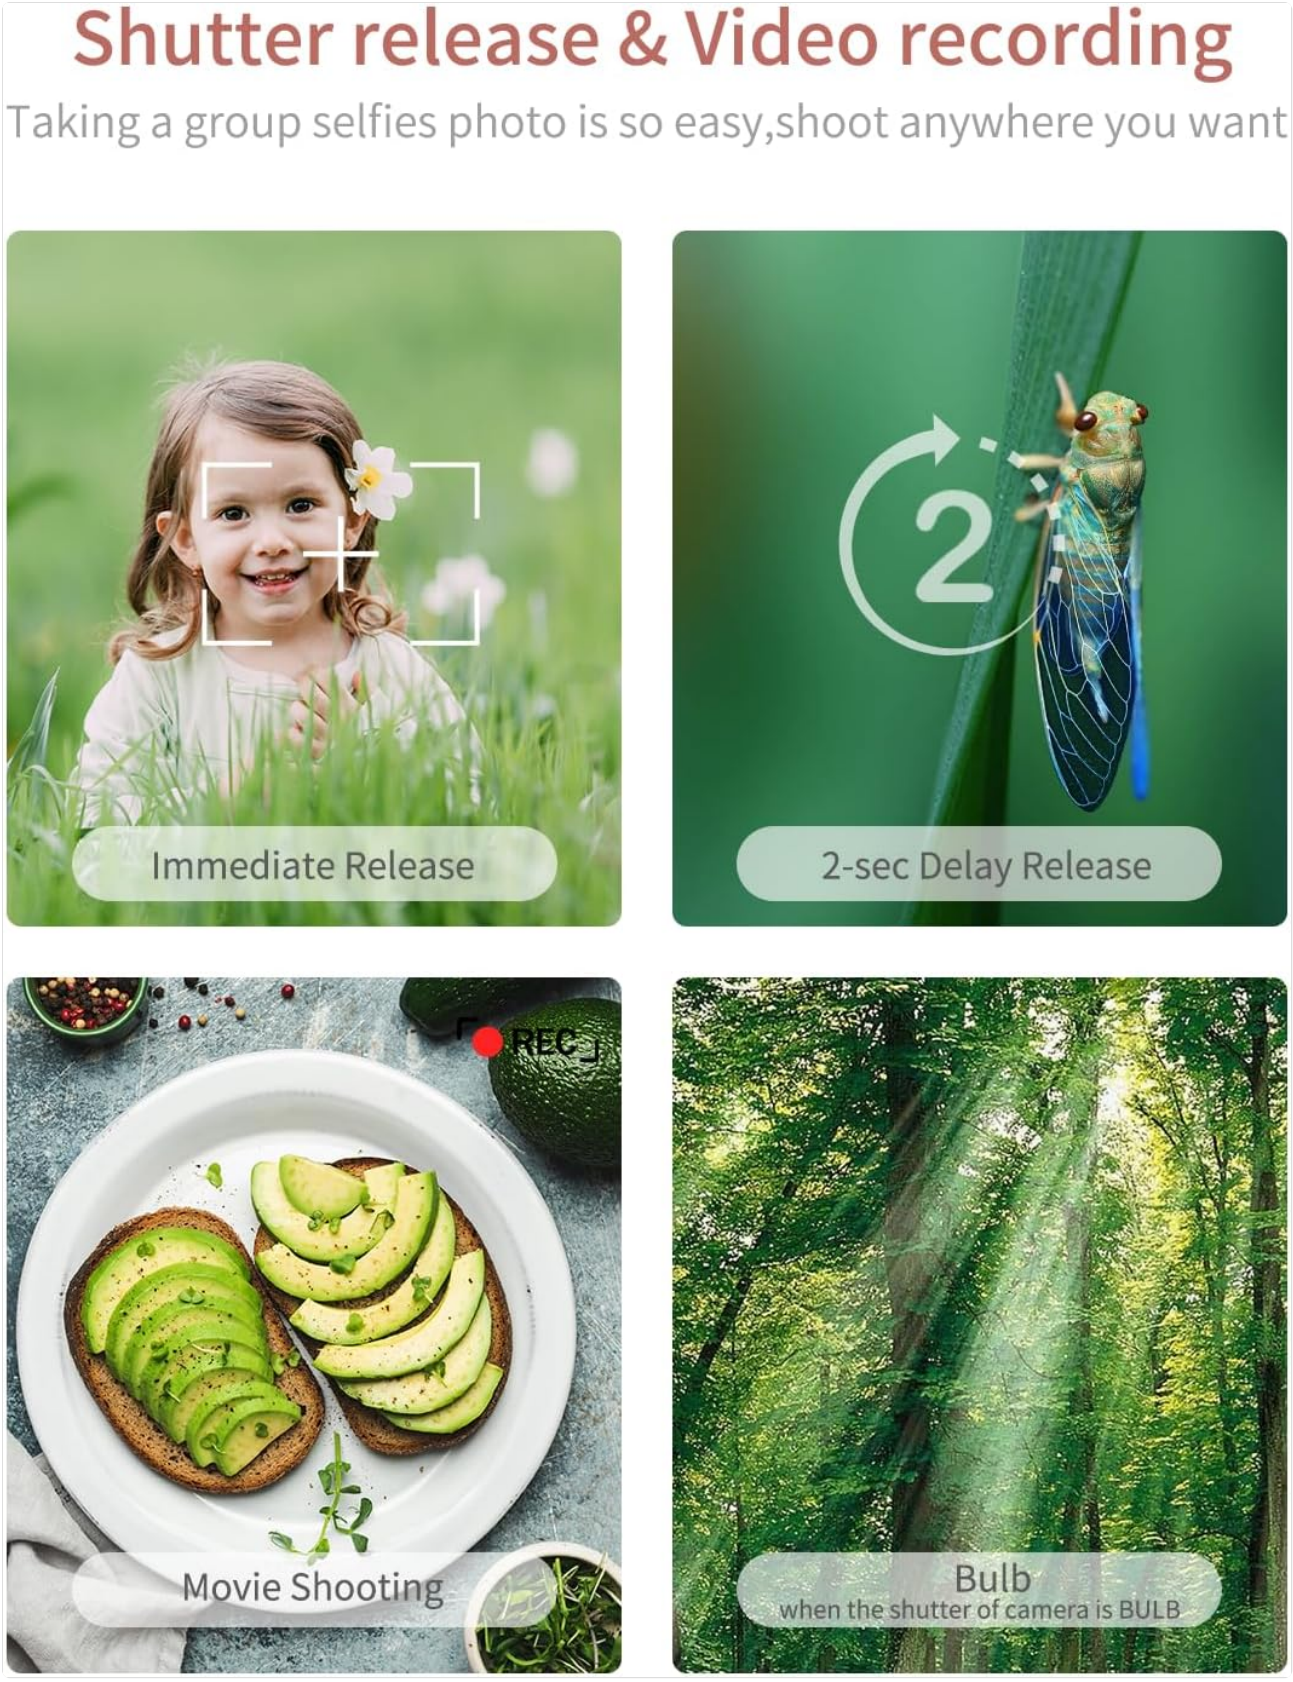

Image: Hanpusen Wireless Camera Remote Control with OLED screen, showing its compact design and button layout.

Compatibility

This remote control is compatible with a wide range of Canon camera models, including:

- Canon EOS R, R1, R3, RP, R5, R6, R7, R8, R10, R50, R50V, R100
- Canon M6 Mark II, M200, M50, M50 II
- Canon SX70 HS, PowerShot G5X Mark II, G7X Mark III, PowerShot V10, PowerShot V1

- Canon 800D (EOS Rebel T7i), 200D (EOS Rebel SL2), 250D (EOS Rebel SL3)

Note: For optimal performance, ensure both the camera and the remote are in pairing mode during connection. Some features like remote video shooting may vary by camera model (e.g., R5C does not support remote video shooting).



Image: Hanpusen remote control shown alongside a Canon camera, illustrating compatibility.

Setup: Pairing Instructions

Follow these steps to pair your Hanpusen remote control with your Canon camera. The exact steps may vary slightly depending on your camera model.

General Pairing Steps:

1. **Enable Wireless Communication:** On your camera, navigate to the menu and select "Wireless communication settings" or "Wi-Fi/Bluetooth connection."
2. **Select Bluetooth Function:** Choose "Bluetooth function" and set it to "Enable."
3. **Select Remote Control:** Within the Bluetooth settings, select "Remote Control."
4. **Initiate Pairing on Remote:** Press and hold the "<" and ">" buttons on the BR-3 remote for at least 3 seconds until "Scanning" appears on the OLED screen.
5. **Confirm Pairing on Camera:** On your camera, select "Pairing" or "Connect to Wireless Remote" and confirm the connection. A message should confirm successful pairing.

Important: After successful pairing, enable the drive mode on your camera for the remote to function. Otherwise, all buttons will be disabled.

Specific Pairing Examples:

Pairing 1: For Canon EOS R, RP, 6D II, 77D (9000D), M50, Rebel T7i (800D), SL2 (200D), PowerShot G5X Mark II, SX70 HS

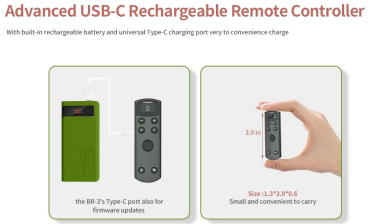

Detailed steps for pairing with specific Canon models, including menu navigation and remote button actions.

Pairing 2: For Canon EOS R5, R6, R7, R10, R100, M6 II, M50 II, M200, 90D, Rebel T8i (850D), SL3 (250D, 200D II), PowerShot G7X Mark III

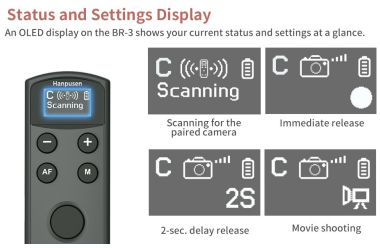

Specific pairing steps for another group of Canon cameras, highlighting Wi-Fi/Bluetooth settings.

Pairing 3: For Canon EOS R50, R6 II, R8, PowerShot V10

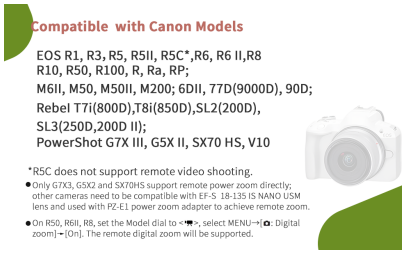

Further pairing instructions for additional Canon models, focusing on Bluetooth enablement.

Operating Instructions

The Hanpusen remote control offers multiple functions for versatile shooting.

Remote Control Buttons and Functions:



Image: Labeled diagram of the remote control, indicating each button's function.

- **Screen:** Displays current status and settings.
- **Power Button:** Press and hold to turn the remote on or off.

- **Pair Button:** Press and hold for at least 2 seconds to enter pairing state.
- **Shutter Release Button:** Controls the camera to shoot photos.
- **Mode Button (M):** Switches between Instant Release, 2-second Delay Release, and Movie Shooting modes.
- **Auto Focus (AF) Button:** Initiates autofocus when the camera is set to autofocus mode.
- **Zoom Control (+/- Buttons):** Controls the camera's power zoom (if supported by the camera or with a motorized zoom adapter). Press (-) for wide-angle, (+) for telephoto.
- **USB Type-C Connector:** Used for charging and firmware updates.

Shooting Modes:

- **Instant Shooting Mode:** Captures a photo immediately when the shutter button is pressed.
- **2-Second Time-Lapse:** Delays the shutter release by 2 seconds, useful for self-portraits or reducing camera shake.
- **Short Video Shooting:** Initiates video recording.
- **BULB Mode:** For cameras where the shutter is set to BULB exposure, allowing for long exposures.

Note: The camera should be adjusted to the corresponding mode for certain remote functions to work correctly.



Image: Visual representation of various shooting modes: Immediate Release, 2-sec Delay Release, Movie Shooting, and Bulb mode.

OLED Display Indicators:

The OLED display provides clear status updates:

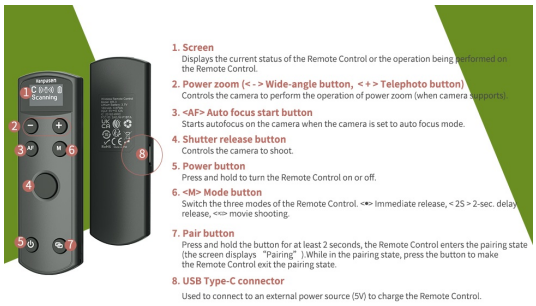

Image: Examples of the OLED display showing "Scanning," "Immediate Release," "2-sec Delay Release," and "Movie Shooting" icons.

- **Scanning:** Indicates the remote is searching for a camera to pair with.
- **Immediate Release:** Confirms the remote is set for instant photo capture.
- **2-sec Delay Release:** Shows the 2-second timer is active before photo capture.
- **Movie Shooting:** Indicates the remote is in video recording mode.
- **Battery Level:** Displays the current battery status of the remote.

Maintenance

The Hanpusen remote control features a built-in rechargeable battery for convenience.

- **Charging:** Use the universal Type-C charging port to recharge the remote. A full charge takes approximately 1.5 hours and provides up to 10 hours of battery life.
- **Firmware Updates:** The Type-C port can also be used for firmware upgrades to maintain compatibility with future camera updates.



Image: The remote control connected to a power bank via its USB-C port, illustrating the charging process.

Troubleshooting

- **Remote Not Responding:** Ensure the camera's drive mode is set to "timer/remote" after pairing. If not, the remote's buttons will not function.
- **Pairing Issues:** Make sure both the camera and remote are in pairing mode simultaneously. If issues persist, check your camera's firmware and consider updating the remote's firmware via the Type-C port.
- **Zoom Function Not Working:** For cameras with built-in motorized zoom or a motorized zoom adapter, ensure the zoom switch on the adapter is set to the "PZ" position and the camera's drive mode is set to remote control.
- **Limited Functionality:** Some camera models may have specific limitations. For example, the R5C does not support remote video shooting. Refer to your camera's manual for detailed compatibility.

Specifications

Feature	Detail
Brand	Hanpusen
Model Number	363f9b84-4f28-4a1c-9666-1bcf048cca8a
Color	Black
Special Feature	Rechargeable
Max Number of Supported Devices	1
Compatible Devices	Camera (Canon models listed in Compatibility section)
Wireless Range	Up to 10m / 32.8ft

Battery Life	Up to 10 hours (full charge)
Charging Time	Approx. 1.5 hours
Item Weight	2.89 ounces
Package Dimensions	4.61 x 2.01 x 1.06 inches

Support

For additional support or to explore other Hanpusen products, please visit the official Hanpusen store:

Visit Hanpusen Store

Protection plans are available for purchase separately, offering extended coverage for your device. Please refer to the product listing for details on available protection plans.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F371L858

More documents and user manuals: **https://manuals.plus/**