**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Hanpusen BR-3

# Hanpusen Rechargeable Camera Remote Control Instruction Manual

**Model: BR-3**

**Compatible with Nikon Z-series and Coolpix Cameras**

## 1. Introduction

Thank you for purchasing the Hanpusen Rechargeable Camera Remote Control. This wireless shutter release is designed to provide convenient and precise control over your Nikon camera, enhancing your photography experience. Featuring an OLED screen and a versatile USB-C charging port, it offers reliable performance for various shooting scenarios.

### Key Features:

- **Wireless Operation:** Control your camera from up to 10m (32.8ft) in any direction via Bluetooth.
- **OLED Display:** Clear visibility of status indicators and settings for effortless adjustments.
- **Multi-functionality:** Supports immediate release, video recording, zoom control, and remote adjustment of camera settings.
- **USB-C Rechargeable:** Built-in rechargeable battery provides up to 10 hours of operation on a single charge. Supports firmware updates via USB-C.
- **Versatile Use:** Ideal for low-light photography, self-portraits, family portraits, macro photography, and capturing timid or dangerous animals.




Image: The Hanpusen remote control offers full 360-degree control and an operating range of up to 10 meters (32.8 feet), eliminating the need to point directly at the camera.

## 2. Package Contents

Verify that all items are present in your package:

- Hanpusen BR-3 Wireless Remote Control
- USB Type-C to Type-A Charging Cable (60cm)
- Wrist Lanyard
- User Manual

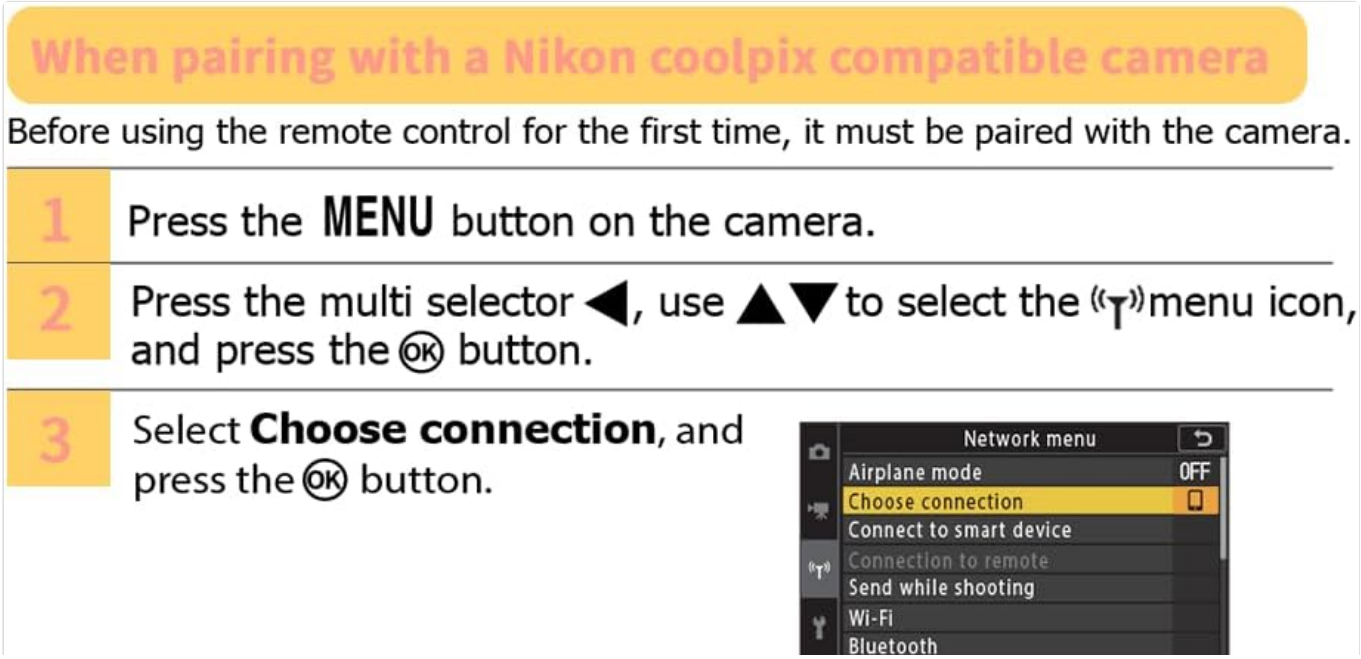



4 Select **Remote control**, and press the OK button.

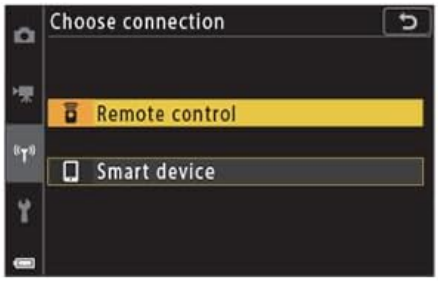


5 Select **Connection to remote** and press the OK button.

- Pairing is enabled and the camera waits for the connection to be established.

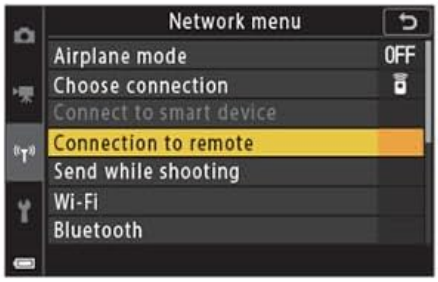


6 Press and hold (for at least 2 seconds) the pair button on the remote control.

When pairing is complete, a connection is established between the camera and the remote control. When you enter shooting mode, and are displayed on the shooting screen.




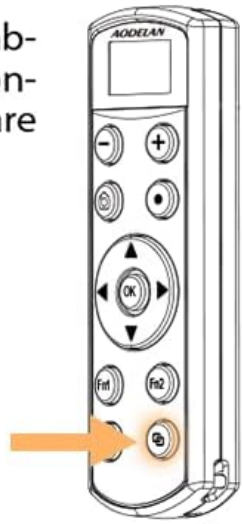


***The Coolpix cameras do not support to assign the function of Fn1 and Fn2 buttons on the BR-3.**

Image: The package includes the Hanpusen BR-3 Wireless Remote Control, a 60cm USB Type-C charging cable, and a wrist lanyard for secure handling.

## 3. Product Overview

Familiarize yourself with the buttons and display of your Hanpusen BR-3 Remote Control:

# How to Pair

## When pairing with a Nikon Z-series compatible camera

**1 Select [Wireless remote (ML-L7) options] > [Save wireless remote controller] in the camera setup menu and press OK.**

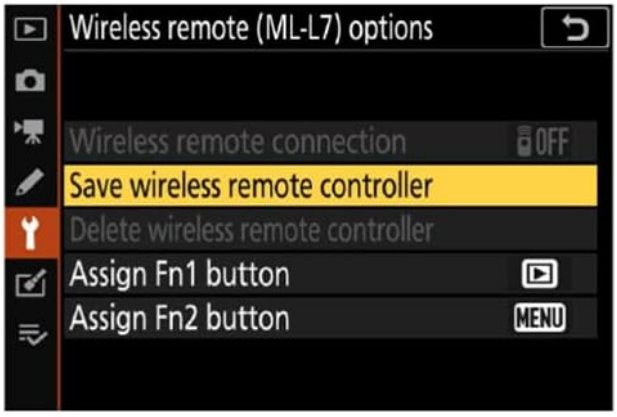


**2 Press and hold the pair button on the remote control (2 seconds or longer).**

When pairing is complete, the camera and remote control will be connected. and are displayed in the shooting display.

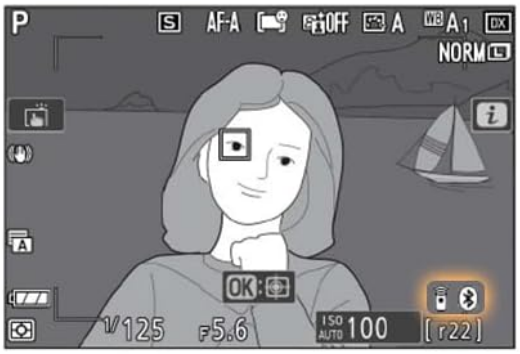





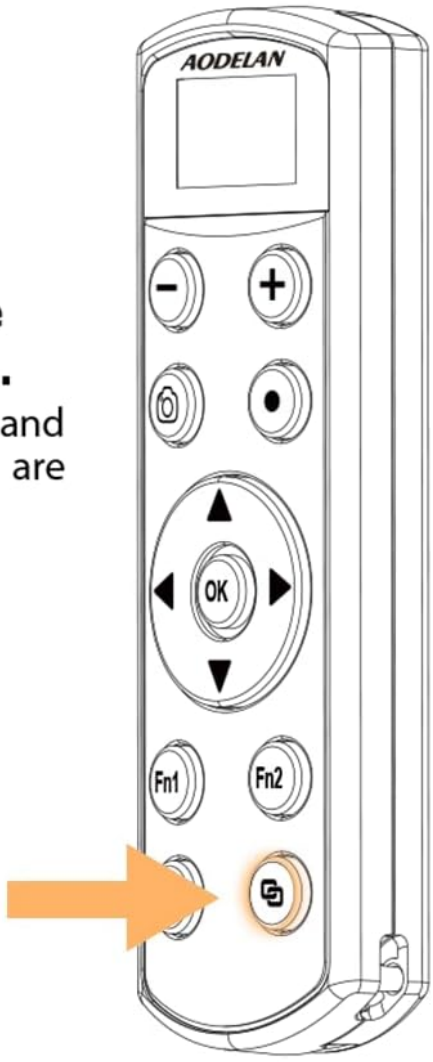


***You can assign the functions of the Fn1 and Fn2 buttons on the BR-3 through the camera menu.**

Image: Detailed diagram of the Hanpusen BR-3 remote control, highlighting its various buttons and the OLED screen with status indicators.

1. **Screen:** Displays current status and operations.
2. **- / + Buttons:** Performs zoom control.

3. **Shutter-release Button:** Functions similarly to the camera's shutter button. Half-press for focus, full-press for capture.
4. **Multi-selector:** Functions like the camera's multi-selector for manual focus adjustment or item selection.
5. **Fn1** / **Fn2 Buttons:** Functions assigned via the camera menu. (Note: Not all camera models support assigning these functions).
6. **Power Button:** Press and hold to turn the remote control on or off.
7. **Movie Record Button:** Starts and stops movie recording.
8. **Pair Button:** Press and hold for at least 2 seconds to enter pairing mode.
9. **USB Type-C Connector:** Used for charging and firmware updates.

### OLED Display Status Indicators:

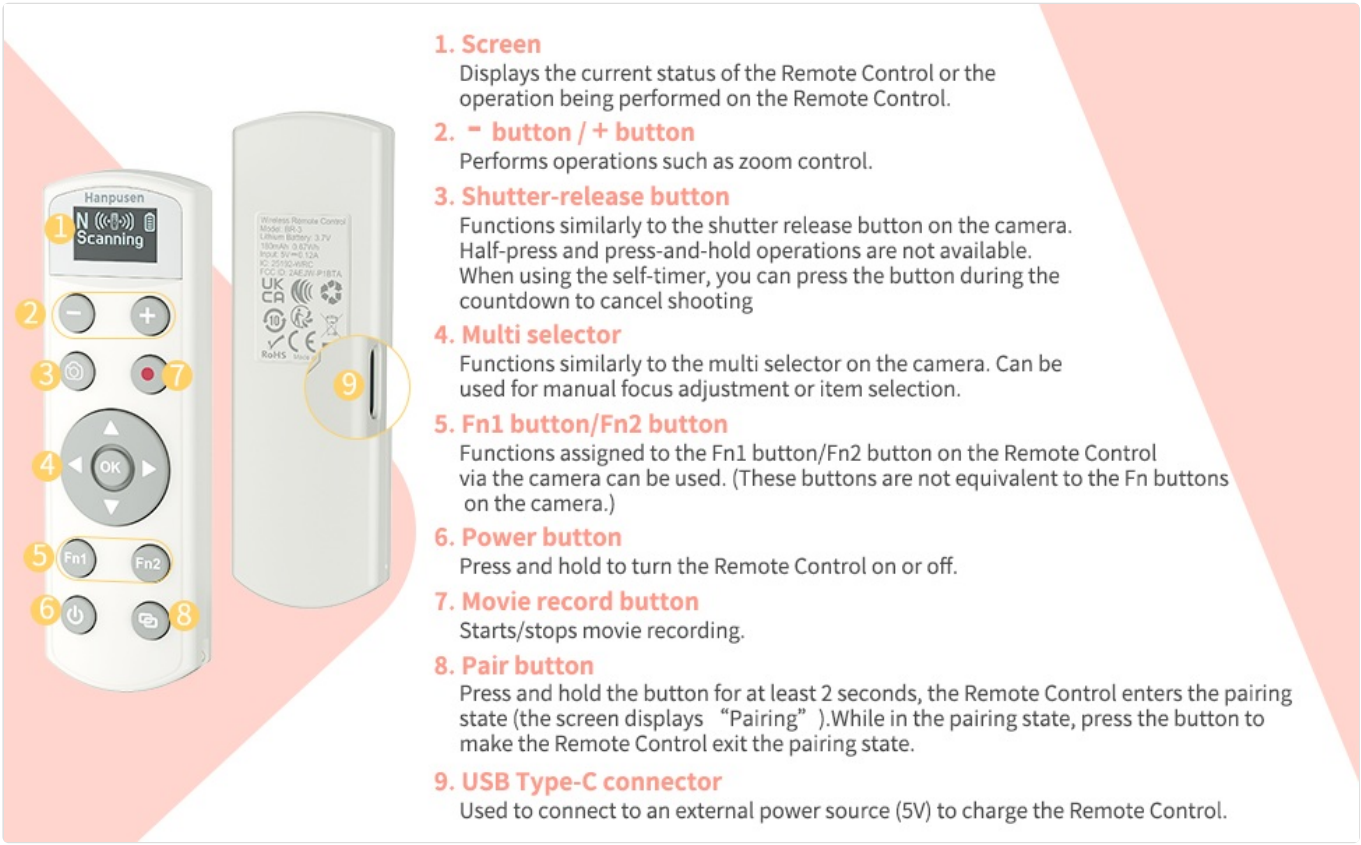


Image: The OLED screen clearly displays the remote's current status, including pairing, photo shooting, movie recording, and camera scanning.

- **N (Scanning):** Remote is scanning for a camera.
- **N (Pairing):** Remote is in pairing status.
- **Camera Icon:** Indicates photo shooting mode.
- **Video Camera Icon:** Indicates movie recording mode.
- **Battery Icon:** Shows current battery level.

## 4. Setup: Pairing the Remote Control

Before using the remote control for the first time, it must be paired with your camera. The pairing process varies slightly depending on your Nikon camera series.

### 4.1. Pairing with Nikon Z-series Compatible Cameras:

1. On your Nikon Z-series camera, navigate to the setup menu.
2. Select **[Wireless remote (ML-L7) options]**.
3. Select **[Save wireless remote controller]** and press the **[OK]** button.
4. Press and hold the **Pair button** on the Hanpusen remote control for at least 2 seconds.
5. When pairing is complete, the camera and remote control will be connected. A remote control icon and Bluetooth symbol will be displayed on the camera's shooting display.

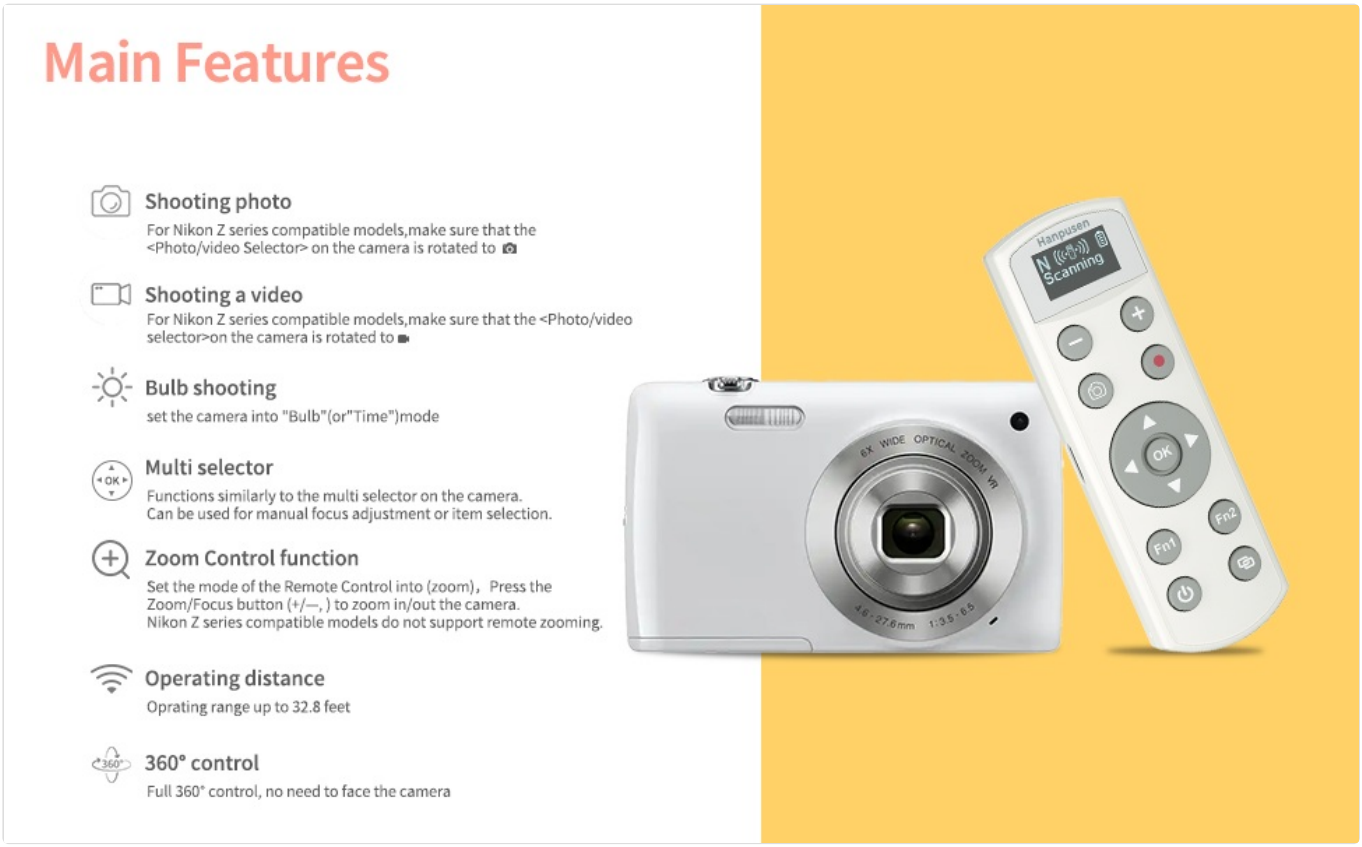


Image: Visual guide demonstrating the pairing process for Nikon Z-series cameras, showing menu navigation and remote button interaction.

### 4.2. Pairing with Nikon Coolpix Compatible Cameras:

1. Press the **[MENU]** button on the camera.
2. Press the multi-selector (up/down/left/right) to select the **(T) menu icon**, and press the **[OK]** button.
3. Select **[Choose connection]**, and press the **[OK]** button.
4. Select **[Remote control]**, and press the **[OK]** button.
5. Select **[Connection to remote]** and press the **[OK]** button. Pairing is enabled, and the camera waits for the connection.
6. Press and hold (for at least 2 seconds) the **Pair button** on the Hanpusen remote control.
7. When pairing is complete, a connection is established between the camera and the remote control. The remote control icon and Bluetooth symbol will be displayed on the shooting screen.

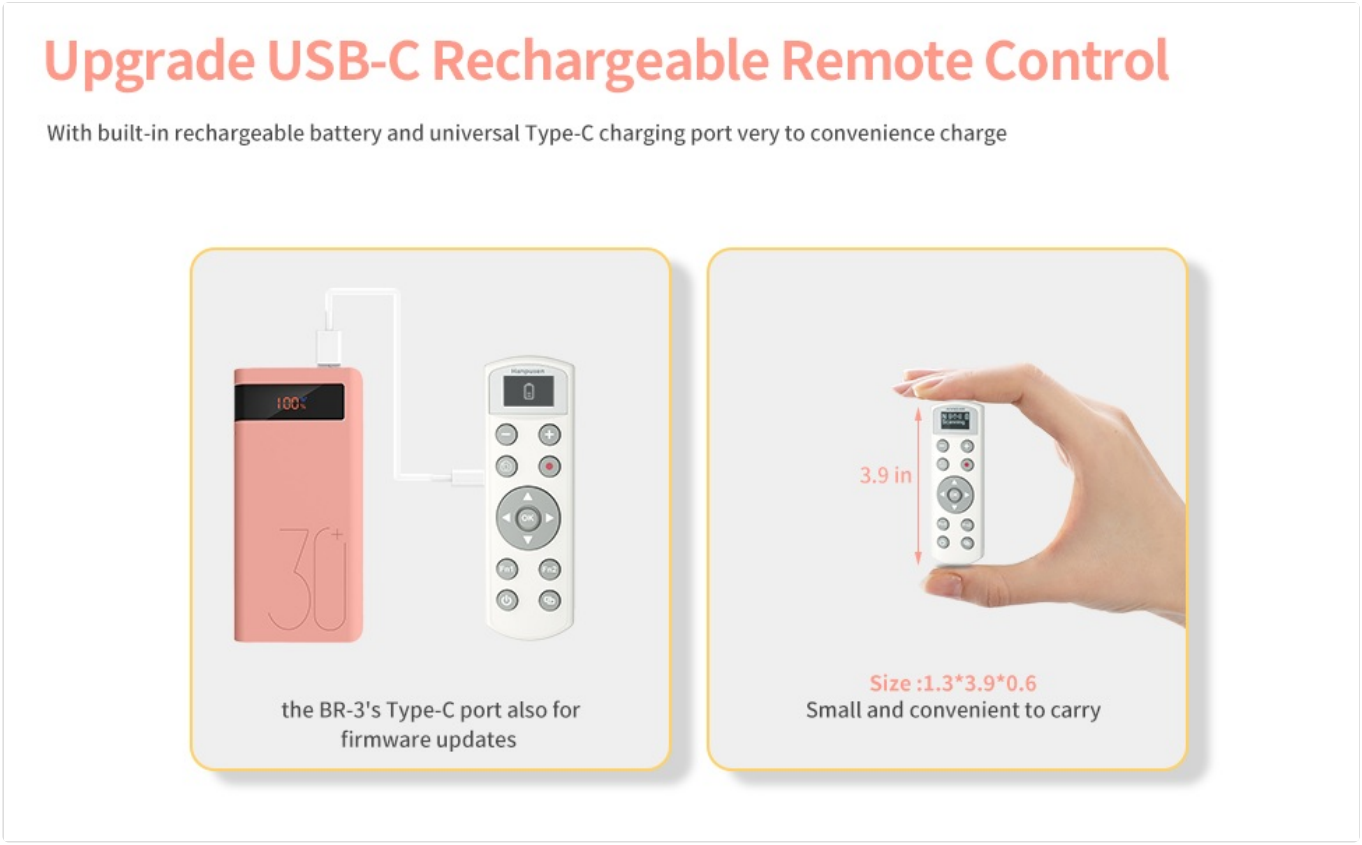


Image: Visual guide demonstrating the pairing process for Nikon Coolpix cameras, showing menu navigation and remote button interaction.

▶ **Watch video online**

Video: This video demonstrates how to pair the Hanpusen remote control with a Nikon Coolpix camera, guiding users through the menu settings and remote button presses.

## 5. Operating Modes

The Hanpusen remote control supports various shooting modes and camera functions.

### 5.1. Shooting Photos:

To shoot a photo, ensure your camera is in photo mode. For Nikon Z-series compatible models, rotate the <Photo/video Selector> on the camera to the camera icon. Press the shutter-release button on the remote control to capture an image.

### 5.2. Shooting Videos:

To record a video, ensure your camera is in video mode. For Nikon Z-series compatible models, rotate the <Photo/video Selector> on the camera to the video camera icon. Press the movie record button on the remote control to start and stop recording.

### 5.3. Bulb Shooting:

For long exposure photography, set your camera into "Bulb" or "Time" mode. Use the remote's shutter-release button to control the exposure duration without touching the camera, preventing camera shake.




Image: The remote supports various shooting modes including single photo capture, movie recording, and bulb shooting for long exposures.

### 5.4. Multi-selector and Zoom Control:

The multi-selector on the remote functions similarly to the camera's multi-selector, allowing for manual focus adjustment or item selection within the camera's menus. Use the +/- buttons for zooming in and out. Note: Nikon Z-series cameras do not support remote optical zoom, but remote digital zoom of the previewed image may be supported.

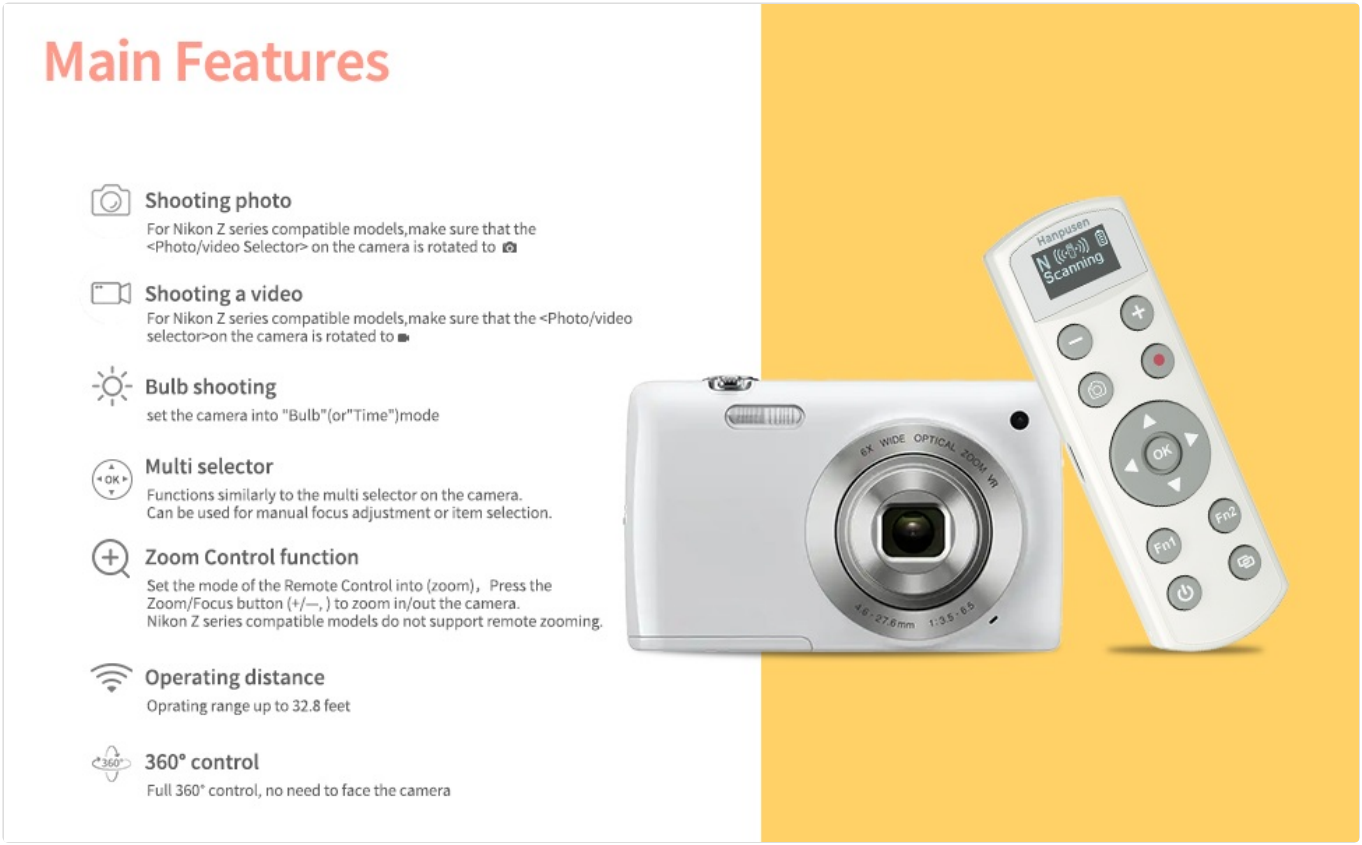


Image: The multi-selector on the remote allows navigation and selection within camera menus for shooting, playback, and settings.

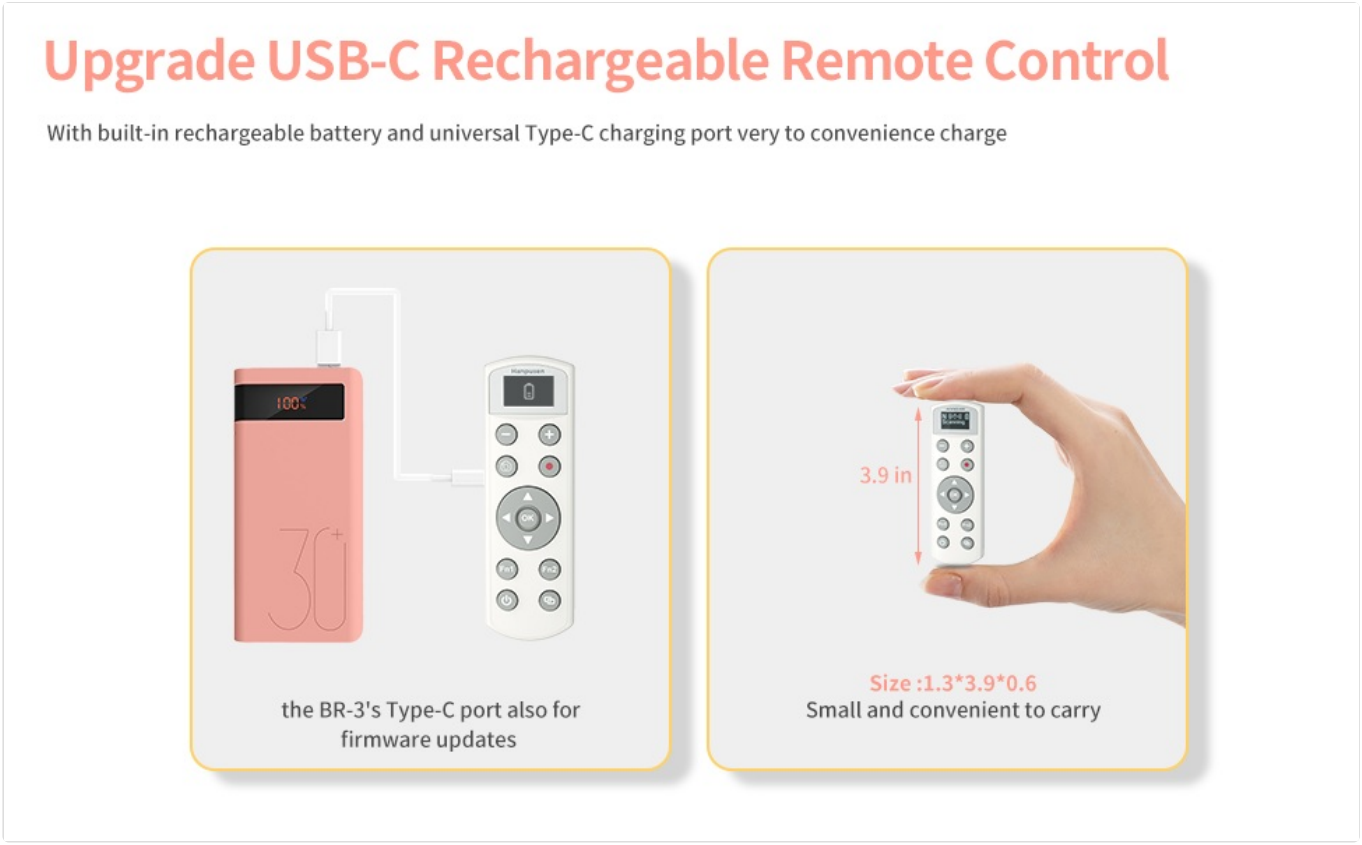


Image: The remote control features dedicated buttons for telephoto (zoom in) and wide-angle (zoom out) functions, allowing remote adjustment of the camera's focal length.

▶ **Watch video online**

Rechargeable Remote Control with OLED Screen for Nikon

Video: This video showcases the various functions of the Hanpusen remote control, including multi-selector navigation, zoom control, and convenient movie recording for Nikon cameras with an OLED screen.

## 6. Charging the Remote Control

The Hanpusen remote control features a built-in rechargeable battery and a USB-C charging port.

1. Connect the provided USB Type-C cable to the remote control's USB-C port.
2. Connect the other end of the cable (USB Type-A) to a suitable power source (e.g., computer USB port, USB wall adapter).
3. The OLED screen will indicate charging status. A full charge provides up to 10 hours of uninterrupted operation.
4. The USB-C port also allows for firmware updates to maintain compatibility with newer camera models.

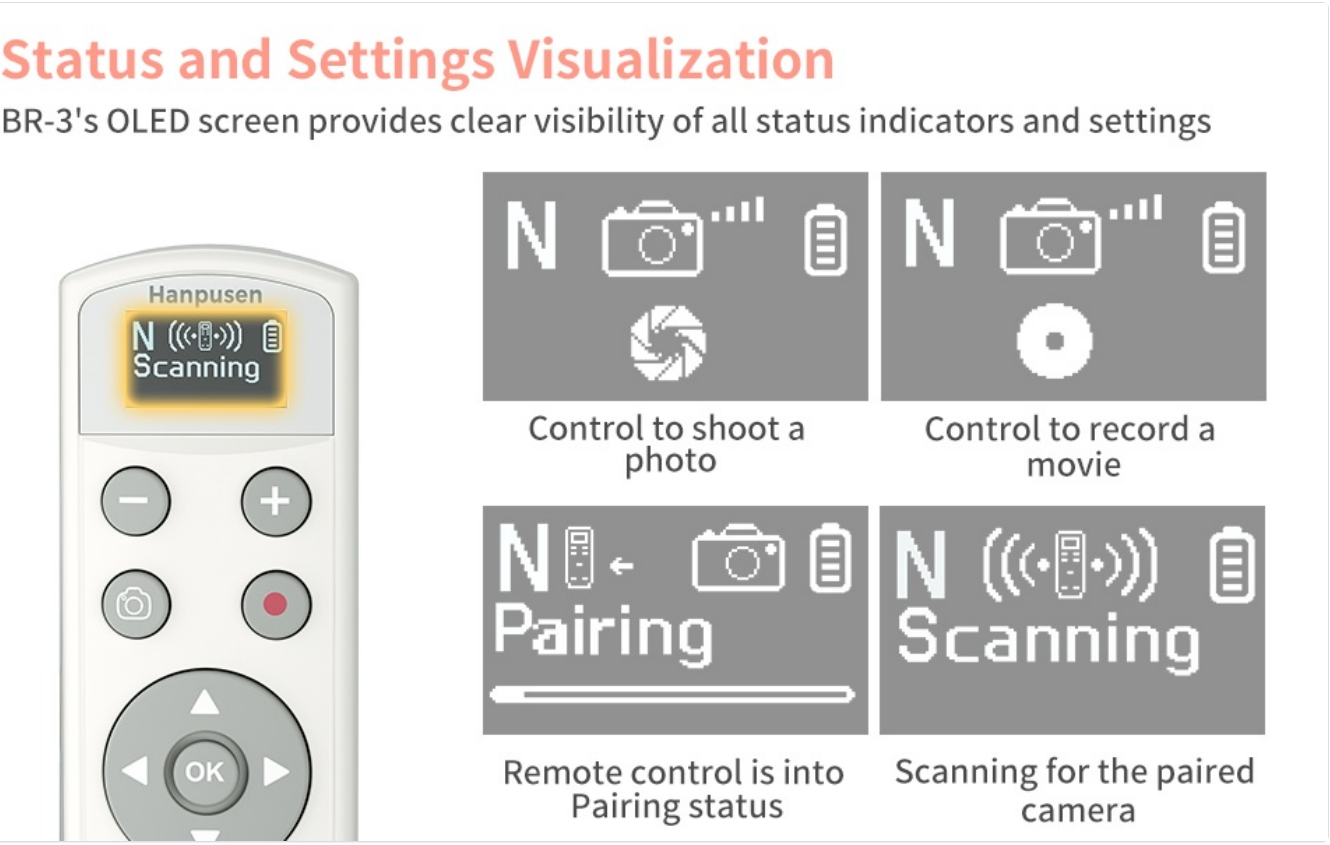


Image: The remote control is shown connected via its USB-C port to a laptop for charging, highlighting its rechargeable nature and firmware update capability.

## 7. Specifications

| Feature | Detail |
|---|---|
| Brand | Hanpusen |
| Model Number | BR-3 |
| Connectivity Technology | Bluetooth |
| Operating Range | Up to 10m (32.8ft) |
| Battery Type | Built-in Rechargeable (Lithium Battery 3.7V, 180mAh) |
| Charging Port | USB Type-C |
| Battery Life | Up to 10 hours (fully charged) |
| Display | OLED Screen |
| Compatible Devices | Nikon Z6III, Z30, Z50, Z50II, Zfc, Zf, Z6II, Z7II, Z5 (with v1.40+ firmware), Coolpix A1000, B600, P1000, P950 |

Note: Nikon Z-series cameras do not support remote optical zoom, but remote digital zoom of the previewed image is supported. Nikon A1000, P1000, B600 do not support assigning functions to Fn1 and Fn2 buttons on the remote control.

## 8. Troubleshooting

- **Remote not pairing:** Ensure the remote is charged. Check camera's Bluetooth settings and confirm it's in pairing mode. Re-attempt the pairing process.
- **Remote not responding:** Check battery level on the remote's OLED screen. Ensure the camera's Bluetooth is enabled and connected. Verify the remote is within the 10m operating range.
- **Zoom function not working (Z-series):** As noted in specifications, Nikon Z-series cameras do not support remote optical zoom. Only digital zoom of the previewed image may be available.
- **Fn1/Fn2 buttons not working (Coolpix):** Some Coolpix models (A1000, P1000, B600) do not support assigning functions to these buttons. Refer to your camera's manual for compatibility.
- **Intermittent connection:** Avoid obstructions between the remote and the camera. Ensure no other devices are causing Bluetooth interference.

## 9. Maintenance

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not disassemble or attempt to repair the remote control yourself. This may void your warranty.
- Store the remote in a cool, dry place when not in use for extended periods.

## 10. Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact Hanpusen customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the Hanpusen Store on Amazon.

© 2025 Hanpusen. All rights reserved.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0F37H7M48**

More documents and user manuals: **https://manuals.plus/**