Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hanpusen BR-3N

Hanpusen BR-3N Rechargeable Wireless Shutter Release for Nikon Cameras User Manual

Model: BR-3N

1. Product Overview

The Hanpusen BR-3N is a versatile rechargeable wireless shutter release designed for select Nikon cameras. It features an OLED display for clear status indication, multi-function controls including zoom, and a robust wireless range.



Image: The Hanpusen BR-3N wireless shutter release shown next to a compatible Nikon camera, highlighting its compact design and the OLED screen.

2. What's Included

Your Hanpusen BR-3N package includes:

- Hanpusen BR-3N Wireless Remote Control
- USB Type-C Charging Cable (60cm)
- Wrist Strap
- User Manual (this document)



Image: A detailed view of the Hanpusen BR-3N remote control, a USB Type-C charging cable, and a wrist strap, illustrating the complete package contents.

3. Setup

3.1 Charging the Remote Control

The BR-3N remote control features a built-in rechargeable battery. Use the provided USB Type-C cable to charge it. The Type-C port also supports firmware upgrades for future camera compatibility.



Image: The Hanpusen BR-3N remote control is shown connected to a laptop via its USB-C port, indicating it is charging. The image highlights the convenience of USB-C charging and the remote's compact size.

3.2 Pairing with Nikon Z Series Cameras

1. On your Nikon Z series camera, navigate to: **[Wireless remote (ML-L7) options]** > **[Save wireless remote controller]** in the camera setup menu.
2. Press and hold the **pair button** on the remote control for 2 seconds or longer.
3. When pairing is complete, the camera and remote control will be connected. The connection status will be displayed on the remote's OLED screen and the camera's shooting display.



Image: Visual instructions for pairing the BR-3N remote with Nikon Z series cameras, detailing the menu navigation on the camera and the location of the pairing button on the remote.

3.3 Pairing with Nikon Coolpix Compatible Cameras

1. Press the **MENU** button on the camera.
2. Press the multi selector (up/down/left/right) to select the **('T') menu icon**, and press the **[OK]** button.
3. Select **[Choose connection]**, and press the **[OK]** button.
4. Select **[Remote control]**, and press the **[OK]** button.
5. Select **[Connection to remote]** and press the **[OK]** button.
6. Press and hold (for at least 2 seconds) the **pair button** on the remote control.
7. When pairing is complete, a connection is established between the camera and the remote control. The connection status will be displayed on the remote's OLED screen and the camera's shooting screen.

Image: Visual instructions for pairing the BR-3N remote with Nikon Coolpix cameras, detailing the menu navigation on the camera and the location of the pairing button on the remote.

▶ **Watch video online**
How to Pair Devices with Your Nikon Coolpix Camera

Video: A demonstration of how to pair a wireless remote control with a Nikon Coolpix camera, showing the menu navigation and button presses required for successful connection.

▶ **Watch video online**
How to pair Nikon Coolpix A1000 with JJC Remote BTR-N1

Video: A step-by-step guide on pairing the JJC Remote BTR-N1 with a Nikon Coolpix A1000 camera, demonstrating the process for establishing a wireless connection.

4. Operating the Remote Control

4.1 Controls Overview and OLED Display

The remote features an OLED display that clearly shows all status indicators and function settings, including battery level and pairing status. Key buttons include:

- **(+) / (-) Buttons:** For zoom control (telephoto/wide-angle).
- **Shutter Button:** For instant shooting and auto-focus.
- **Record Button:** For short video recording.
- **OK Button / Multi-selector:** For menu navigation and selection.
- **Fn1 / Fn2 Buttons:** Assignable function buttons (Note: Nikon A1000, P1000, and B600 do not support assigning functions to Fn1/Fn2).
- **Power Button:** To turn the remote on/off.
- **Pairing Button:** For initiating pairing mode.

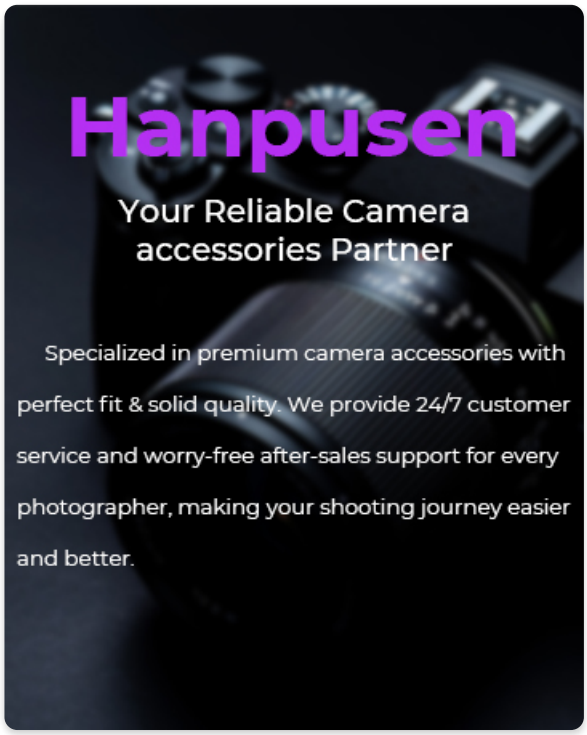

Image: The Hanpusen BR-3N remote control's OLED display is shown, illustrating different status messages such as 'Scanning', 'Screen link successful', 'Remote control recording of videos', and 'Remote control for taking photos'.



Image: An infographic showcasing the multi-functional capabilities of the Hanpusen BR-3N remote, including shooting photos, movie shooting, BULB mode, auto-focus, zoom control, and a 32.8 feet operating distance with 360-degree control.

4.2 Shooting Modes

- **Instant Shooting:** Press the shutter button fully to take a photo. Half-press for auto-focus.
- **Short Video Recording:** Press the record button to start/stop video recording.
- **Bulb Mode:** For long exposure photography. Set your camera to Bulb mode, then use the remote to control the shutter duration.

Image: A collage demonstrating various shooting scenarios with the remote, including pressing the button halfway to focus, shooting pictures, movie shooting, and bulb exposure.

▶ **Watch video online**
timerlapse shutter remote

Video: A detailed demonstration of a timer lapse shutter remote, showcasing its wireless and wired capabilities, various shooting modes (instant, continuous, bulb), delay settings, and interval timer functions for time-lapse photography.

4.3 Zoom Control

Press the **(-) button** on the remote to zoom to the wide-angle end, or press the **(+) button** to zoom to the telephoto side.
Please Note: Nikon Z series cameras do not support remote zoom, but remote zooming of previewed images is supported. This function primarily works with power zoom lenses or power zoom adapters.



Image: The Hanpusen BR-3N remote control is shown in use, demonstrating its focus and zoom capabilities with dedicated telephoto (+) and wide-angle (-) buttons.

4.4 Menu Navigation

The multi-selector (directional buttons and OK button) on the remote can be used to navigate camera menus, similar to the camera's built-in controls. This allows for manual focus adjustment or item selection remotely.



Image: The Hanpusen BR-3N remote control is depicted alongside a camera, illustrating its capability to remotely set up camera functions and navigate menus using its multi-selector buttons.

5. Maintenance

5.1 Cleaning

Wipe the remote control with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

5.2 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

5.3 Firmware Updates

The Type-C port on the remote control can be used for firmware updates. This ensures compatibility with future camera upgrades. Refer to the Hanpusen website for the latest firmware and update instructions.

6. Troubleshooting

6.1 Pairing Issues

- **Remote not pairing:** Ensure both the camera and the remote are in pairing mode. Check the remote's OLED screen for 'Scanning' or 'Pairing' status.
- **Camera not detecting remote:** Verify that your camera model is listed as compatible. Ensure the camera's

firmware is up to date (e.g., Nikon Z5II requires v1.40 or later).

- **Reconnecting after sleep mode:** If the camera enters sleep mode or is turned off, the remote will automatically shut down. To reconnect, simply press the power button on the remote and wait for about 5 seconds. Do not long-press the remote control.

6.2 Functionality Issues

- **Remote zoom not working:** Nikon Z series cameras do not support remote zoom for live view, only for previewed images. Ensure you are using a power zoom lens or power zoom adapter.
- **Fn1/Fn2 buttons unresponsive:** Nikon A1000, P1000, and B600 models do not support assigning functions to the Fn1 and Fn2 buttons on the remote control.

6.3 Battery Issues

The OLED display will show the battery level. Recharge the remote control when the battery is low to ensure uninterrupted operation.

7. Specifications

Feature	Detail
Model Number	BR-3N
Brand	Hanpusen
Connectivity	Wireless (Bluetooth)
Special Feature	Rechargeable, OLED Display
Charging Port	USB Type-C (for charging and firmware updates)
Battery Life	Up to 10 hours (full charge)
Wireless Range	Up to 10 meters (32.8 feet)
Dimensions	4.53 x 2.01 x 1.06 inches
Item Weight	1.2 ounces
Color	Black
Compatible Devices	Nikon Z6 II, Z30, Z50, Z5, Z7 II, Z fc, Z f, Z6 III, Z50 II, Z5II (with v1.40+ firmware), P1000, P1100, P950, B600, A1000

8. Warranty and Support

For warranty information and customer support, please refer to the official Hanpusen website or contact your retailer.

Keep your purchase receipt for any warranty claims.

© 2025 Hanpusen. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F37RCMGX

More documents and user manuals: **https://manuals.plus/**