Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HONOR Honor 400 Pro (Model 5109BUSS)

Honor 400 Pro User Manual

Model: 5109BUSS

1. Introduction

This manual provides essential information for the safe and efficient operation of your Honor 400 Pro smartphone. Please read it thoroughly before using your device.

Product Overview

The Honor 400 Pro is a high-performance 5G smartphone designed for international use. It features a powerful 3.0 GHz Octa-core processor, 12GB of RAM, and 512GB of internal storage. The device runs on Android 15 and is equipped with a long-lasting 5300mAh non-removable battery.



Figure 1.1: Front and back view of the Honor 400 Pro smartphone.

Key Features

- **Display:** 6.7-inch AMOLED display with 1B colors and 1280 x 2800 pixels resolution, 5000 nits peak brightness, 120Hz refresh rate.
- **Processor:** Qualcomm SM8650-AB Snapdragon 8 Gen 3 (4 nm) Octa-core.
- **Memory & Storage:** 12GB RAM, 512GB internal storage.
- **Camera System:**
  - Rear: 200 MP (wide, OIS), 50 MP (telephoto, 3x optical zoom, OIS), 12 MP (ultrawide).
  - Front: 50 MP (wide), 2 MP (depth).
- **Battery:** 5300mAh non-removable silicon-carbon battery.

- **Operating System:** Android 15.
- **Connectivity:** Dual-SIM (Nano-SIM + ESIM or Nano-SIM + Nano-SIM), 2G, 3G, 4G LTE, 5G (SA/NSA).
- **Durability:** IP68 & IP69 Water Resistance.

2. Setup Guide

2.1 Package Contents

Before you begin, ensure all items are present in the package:

- Honor 400 Pro Smartphone
- USB Cable
- Quick Start Guide (not included in this manual)

2.2 SIM Card Installation

The Honor 400 Pro supports Dual-SIM functionality, allowing for either two Nano-SIM cards or one Nano-SIM and one eSIM. Ensure your SIM cards are compatible with the device's supported frequencies (2G, 3G, 4G, 5G).

1. Locate the SIM card tray on the side of your device.
2. Insert the SIM ejector tool (not included) into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM card(s) into the designated slots on the tray with the gold contacts facing down.
4. Carefully reinsert the SIM card tray into the device until it clicks into place.
5. For eSIM activation, refer to your network provider's instructions.

2.3 Initial Charging and Power On

It is recommended to fully charge your device before first use.

1. Connect the provided USB cable to the charging port on your Honor 400 Pro.
2. Connect the other end of the USB cable to a compatible power adapter (not included) and plug it into a power outlet.
3. Once sufficiently charged, press and hold the Power button (located on the side of the device) until the Honor logo appears.
4. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.





Figure 2.1: Front view of the Honor 400 Pro, showing the display and front camera.

3. Operating Your Device

3.1 Basic Navigation

Your Honor 400 Pro runs on Android 15, offering an intuitive user experience. Use touch gestures such as tap, swipe, pinch-to-zoom, and long-press to navigate the interface.

- **Home Screen:** Access your apps and widgets.
- **Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.

3.2 Camera Features

The Honor 400 Pro is equipped with an advanced AI camera system for high-quality photography and videography.



Figure 3.1: Detailed specifications of the Honor 400 Pro's multi-camera system.

- **200MP Ultra-clear AI Main Camera:** Features a 1/1.4-inch flagship ultra-clear image sensor with Optical Image Stabilization (OIS) for sharp, detailed photos.
- **50MP Telephoto Camera:** Utilizes a Sony customized sensor (IMX856) with 3X optical zoom and OIS, ideal for

capturing distant subjects.

- **12MP 112° Ultra Wide Camera:** Perfect for expansive landscapes and group shots.
- **50MP Portrait Selfie Camera:** Front-facing camera with f/2.0 aperture for high-resolution selfies.

The device also includes AI-powered editing features such as AI Image to Video, AI Erase passers-by, AI Upscale, AI Outpanting, AI Cutout and Edit, and AI Eyes Open for enhanced photo manipulation.

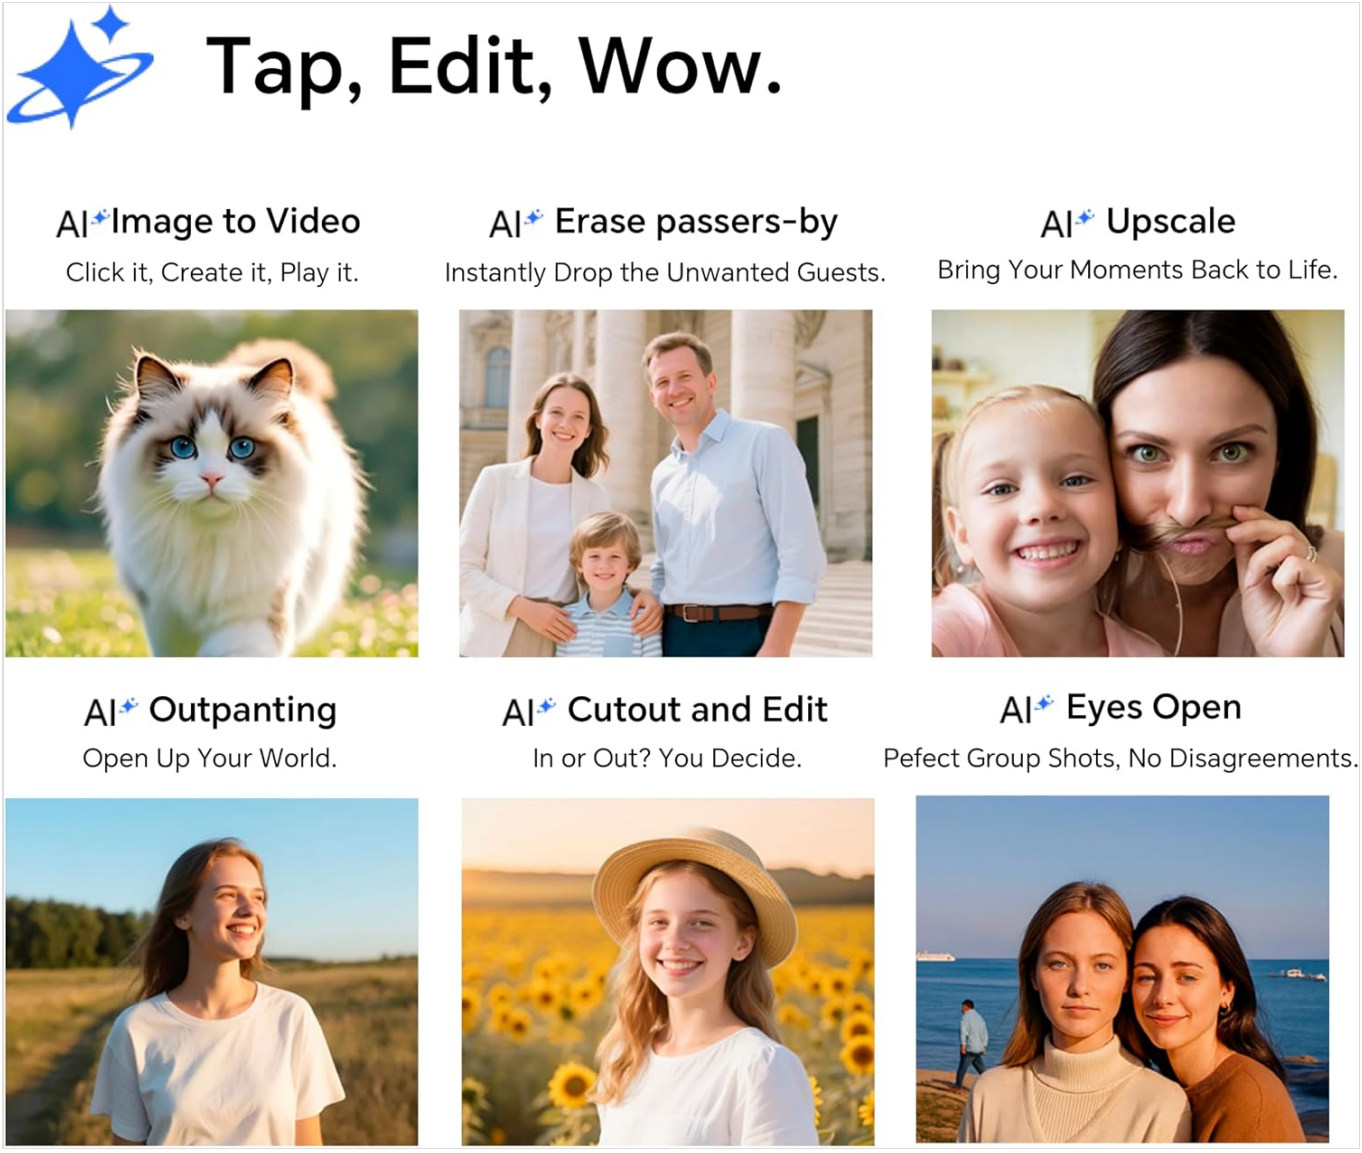

Figure 3.2: Illustration of various AI-powered photo editing capabilities.

The HD Moving Photo feature allows you to capture clarity and select ideal cover photos, stitching cinematic photos seamlessly. It preserves 3 seconds of vibrant live moments.

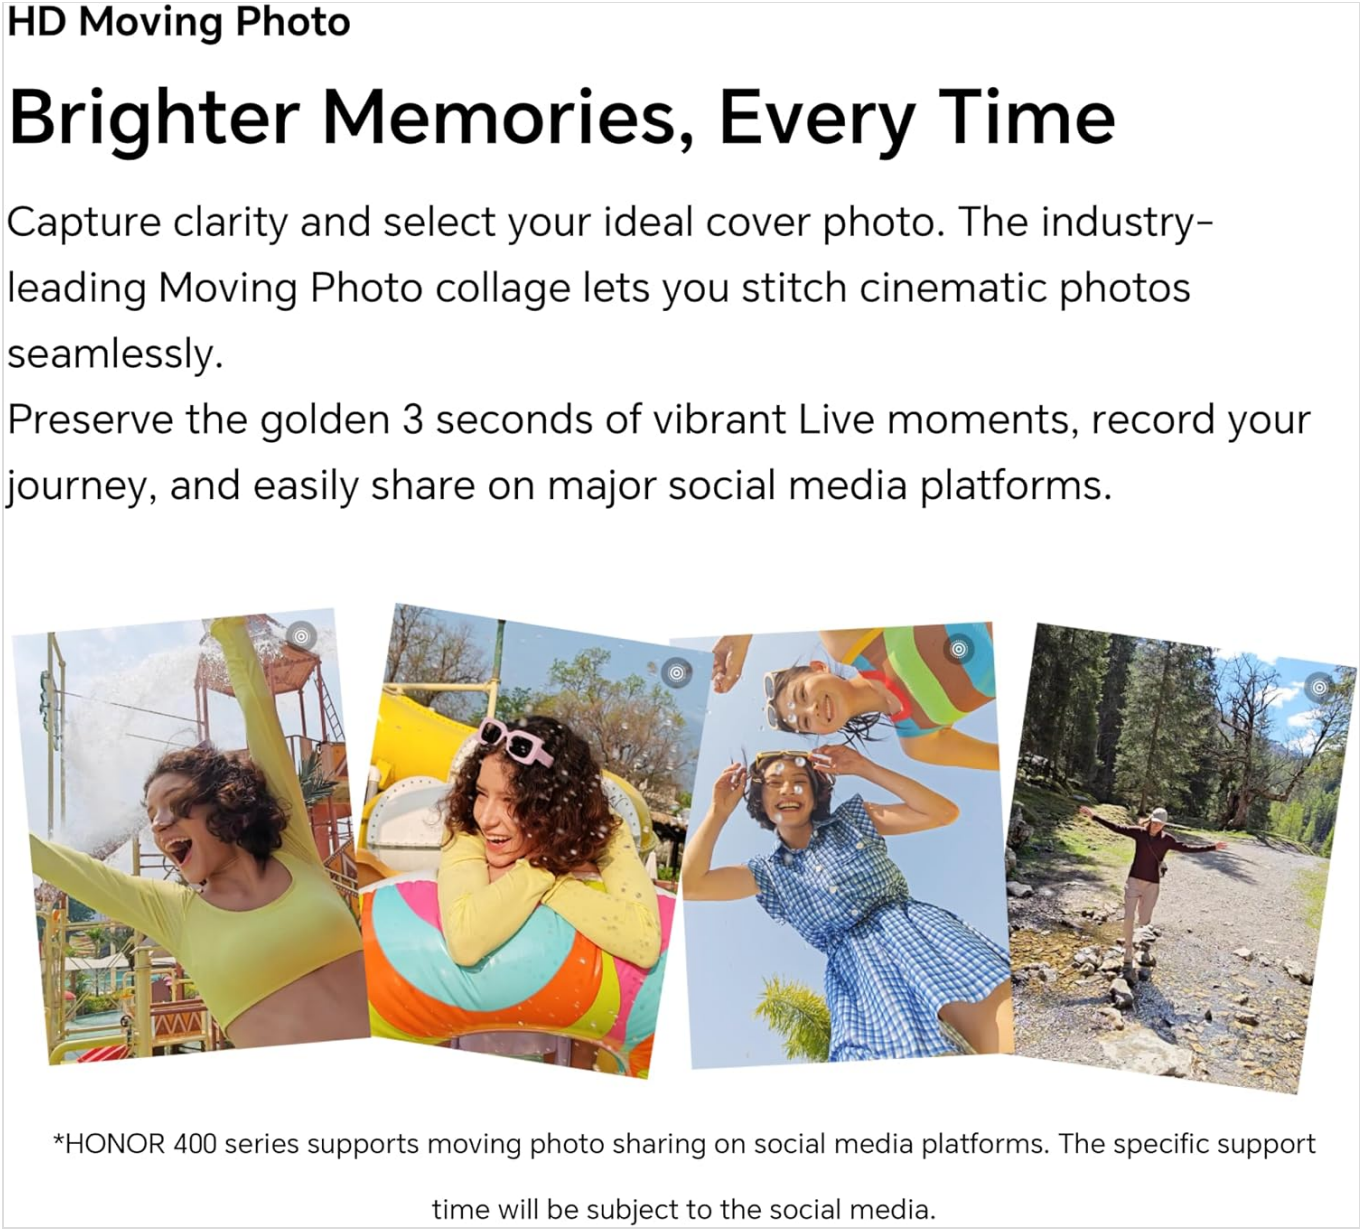

Figure 3.3: Demonstration of the HD Moving Photo feature capturing dynamic scenes.

3.3 Display Features

Experience vivid visuals on the Honor 400 Pro's 6.7-inch AMOLED display.



Figure 3.4: Key features of the Honor 400 Pro's ultra-bright display.

- **Brightness:** Up to 5000 nits peak brightness for clear visibility even in direct sunlight.
- **Resolution:** 2800x1280 pixels with 460 PPI.
- **Color Depth:** 1.07 Billion colors with DCI-P3 wide gamut.
- **Refresh Rate:** 120 Hz for smooth scrolling and gaming.
- **HDR Support:** HDR Vivid, Netflix HDR, and Amazon HDR certification for enhanced dynamic range.

3.4 Battery Management

The Honor 400 Pro is powered by a 5300mAh silicon-carbon battery designed for extended use.



Figure 3.5: Information on the 5300mAh silicon-carbon battery and its durability.

- The battery supports up to 1200 charge and discharge cycles, providing approximately 4 years of durable battery life under typical usage conditions.
- To optimize battery life, manage background app usage and adjust screen brightness.

3.5 Water Resistance

The Honor 400 Pro features IP68 and IP69 water resistance ratings, offering protection against dust and water immersion.



Figure 3.6: The Honor 400 Pro demonstrating its IP68 and IP69 water resistance.

While water resistant, it is not waterproof. Avoid intentional submersion, exposure to pressurized water, or extreme temperatures. Water resistance may decrease over time with normal wear.

4. Maintenance

4.1 Cleaning Your Device

To keep your Honor 400 Pro clean and in good condition:

- Use a soft, lint-free cloth to wipe the screen and body.
- Avoid using abrasive cleaners, solvents, or aerosol sprays.
- For stubborn smudges, slightly dampen the cloth with distilled water.

4.2 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Updates can be found in the device's Settings menu under "System & updates" or "Software update."

4.3 Battery Care

To prolong battery lifespan:

- Avoid exposing the device to extreme temperatures (hot or cold).
- Do not let the battery completely drain frequently.
- Use only approved charging accessories.

4.4 Water Resistance Care

While water resistant, proper care is still important:

- If the device gets wet, wipe it dry with a clean, soft cloth.
- Do not charge the device if the charging port is wet.
- Avoid using the device in saunas, steam rooms, or high-humidity environments.

5. Troubleshooting

This section addresses common issues you might encounter with your Honor 400 Pro.

Problem	Possible Cause	Solution
Device does not power on.	Low battery; software crash.	Charge the device for at least 30 minutes. Press and hold the Power button for 10-15 seconds to force restart.
Cannot connect to network.	SIM card issue; network settings; out of coverage.	Ensure SIM card is correctly inserted. Check network settings (Settings > Mobile network). Restart the device. Contact your network provider.
Screen is unresponsive.	Temporary software glitch.	Force restart the device by holding the Power button.
Apps are crashing or freezing.	App specific issue; low RAM.	Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Update the app. Restart the device.
Battery drains quickly.	High screen brightness; background apps; poor signal.	Reduce screen brightness. Close unused background apps. Enable power saving mode.

5.1 Factory Reset

If issues persist, a factory reset may resolve them. **Warning:** This will erase all data on your device. Back up important data before proceeding.

1. Go to **Settings**.
2. Navigate to **System & updates** > **Reset**.
3. Select **Reset phone** or **Erase all data (factory reset)**.
4. Confirm your choice and enter your password/PIN if prompted.

6. Technical Specifications

Feature	Specification
Model Name	Honor 400 Pro
Model Number	5109BUSS
Dimensions (L x W x H)	6.33 x 3 x 0.32 inches (160.8 x 76.1 x 8.1 mm)
Weight	7.2 ounces (205 grams)
Display	6.7 inches AMOLED, 1B colors, 1280 x 2800 pixels, 120Hz, 5000 nits (peak)
Operating System	Android 15.0
Processor	Qualcomm SM8650-AB Snapdragon 8 Gen 3 (4 nm), Octa-core (1x3.0 GHz Cortex-X4 & 5x2.95 GHz Cortex-A720 & 2x2.0 GHz Cortex-A520)
RAM	12 GB
Internal Storage	512 GB (non-expandable)
Rear Camera	200 MP (wide, f/1.9, OIS), 50 MP (telephoto, f/2.4, 3x optical zoom, OIS), 12 MP (ultrawide, f/2.2)
Front Camera	50 MP (wide, f/2.0), 2 MP (depth, f/2.4)
Battery	5300 mAh (non-removable, Silicon-carbon)
SIM Type	Dual-SIM (Nano-SIM + ESIM OR Nano-SIM + Nano-SIM)
Connectivity	2G, 3G, 4G LTE, 5G (SA/NSA)
Water Resistance	IP68 & IP69
What's in the Box	USB Cable

7. Warranty and Support

7.1 Product Warranty

The Honor 400 Pro is manufactured by Honor. For detailed warranty information, including terms, conditions, and duration, please refer to the official Honor website or the warranty card included with your purchase. Warranty policies may vary by region.

7.2 Customer Support

For technical assistance, service, or further inquiries regarding your Honor 400 Pro, please visit the official Honor support website or contact their customer service channels. Contact information and support resources are typically available on the manufacturer's official website.

Manufacturer: Honor

© 2025 HONOR. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F3XS37PN

More documents and user manuals: **https://manuals.plus/**