Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JOYROOM JR-OE3

JOYROOM OE3 Clip-On Earbuds User Manual

Model: JR-OE3

Introduction | Safety Information | What's in the Box | Product Overview | Setup | Operation | Maintenance | Troubleshooting | Specifications | Warranty & Support

1. Introduction

Thank you for choosing the JOYROOM OE3 Clip-On Earbuds. These wireless open-ear headphones are designed to provide a comfortable and immersive audio experience while keeping you aware of your surroundings. Featuring an innovative L-shaped design, omni-tap control, and automatic left-right recognition, the OE3 earbuds are perfect for daily use, workouts, and more. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance.



Image: The JOYROOM OE3 Clip-On Earbuds in their charging case, showcasing their sleek silver-white design.

2. Safety Information

- Do not expose the earbuds or charging case to extreme temperatures, humidity, or liquids.
- Avoid dropping, impacting, or disassembling the device.
- Use only the provided USB-C charging cable or a certified equivalent.
- Do not use abrasive cleaners or harsh chemicals to clean the earbuds.
- Listen at moderate volume levels to prevent hearing damage.
- Be aware of your surroundings when using the earbuds, especially in traffic or dangerous environments.

3. What's in the Box

- JOYROOM OE3 Open Ear Headphones (x2)
- Charging Case (x1)
- USB-C Charging Cable (x1)
- User Manual (this document)

4. Product Overview

The JOYROOM OE3 earbuds feature an ergonomic L-shaped clip-on design for secure and comfortable wear. Each earbud is ultra-lightweight, weighing only 4.9g, and is crafted from high-elastic, skin-friendly silicone. The charging case is compact and designed for portability, providing additional battery life for your earbuds.



Image: A woman wearing the JOYROOM OE3 earbuds, illustrating the innovative L-shape design, ultra-light 4.9g weight, flexible fit, and crystal clear sound with minimal leakage.

Key Components:

- **Earbuds:** Left and Right, with L-shaped clip-on design and omni-touch surface.
- **Charging Case:** Houses and charges the earbuds, with a USB-C charging port and LED indicator.

5. Setup

5.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB-C charging cable to the charging port on the case and plug the other end into a USB power source (e.g., wall adapter, computer USB port). The LED indicator on the case will show charging status and turn off when fully charged.

5.2 Pairing with Your Device

1. Ensure the earbuds are charged and placed inside the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing light on the earbuds.
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices and select "JOYROOM OE3" from the list.
5. Once connected, the earbud indicator lights will turn off, and your device will confirm the connection.

Note: The JOYROOM OE3 supports dual-device Bluetooth connectivity, allowing seamless switching between two paired devices.

5.3 Wearing the Earbuds

The OE3 earbuds feature an L-shaped clip-on design for a secure and comfortable fit. Simply clip the earbud onto your ear, ensuring the speaker is positioned close to your ear canal. The earbuds automatically detect how they are worn and adjust left and right audio output accordingly, eliminating the need to distinguish between left and right earbuds.

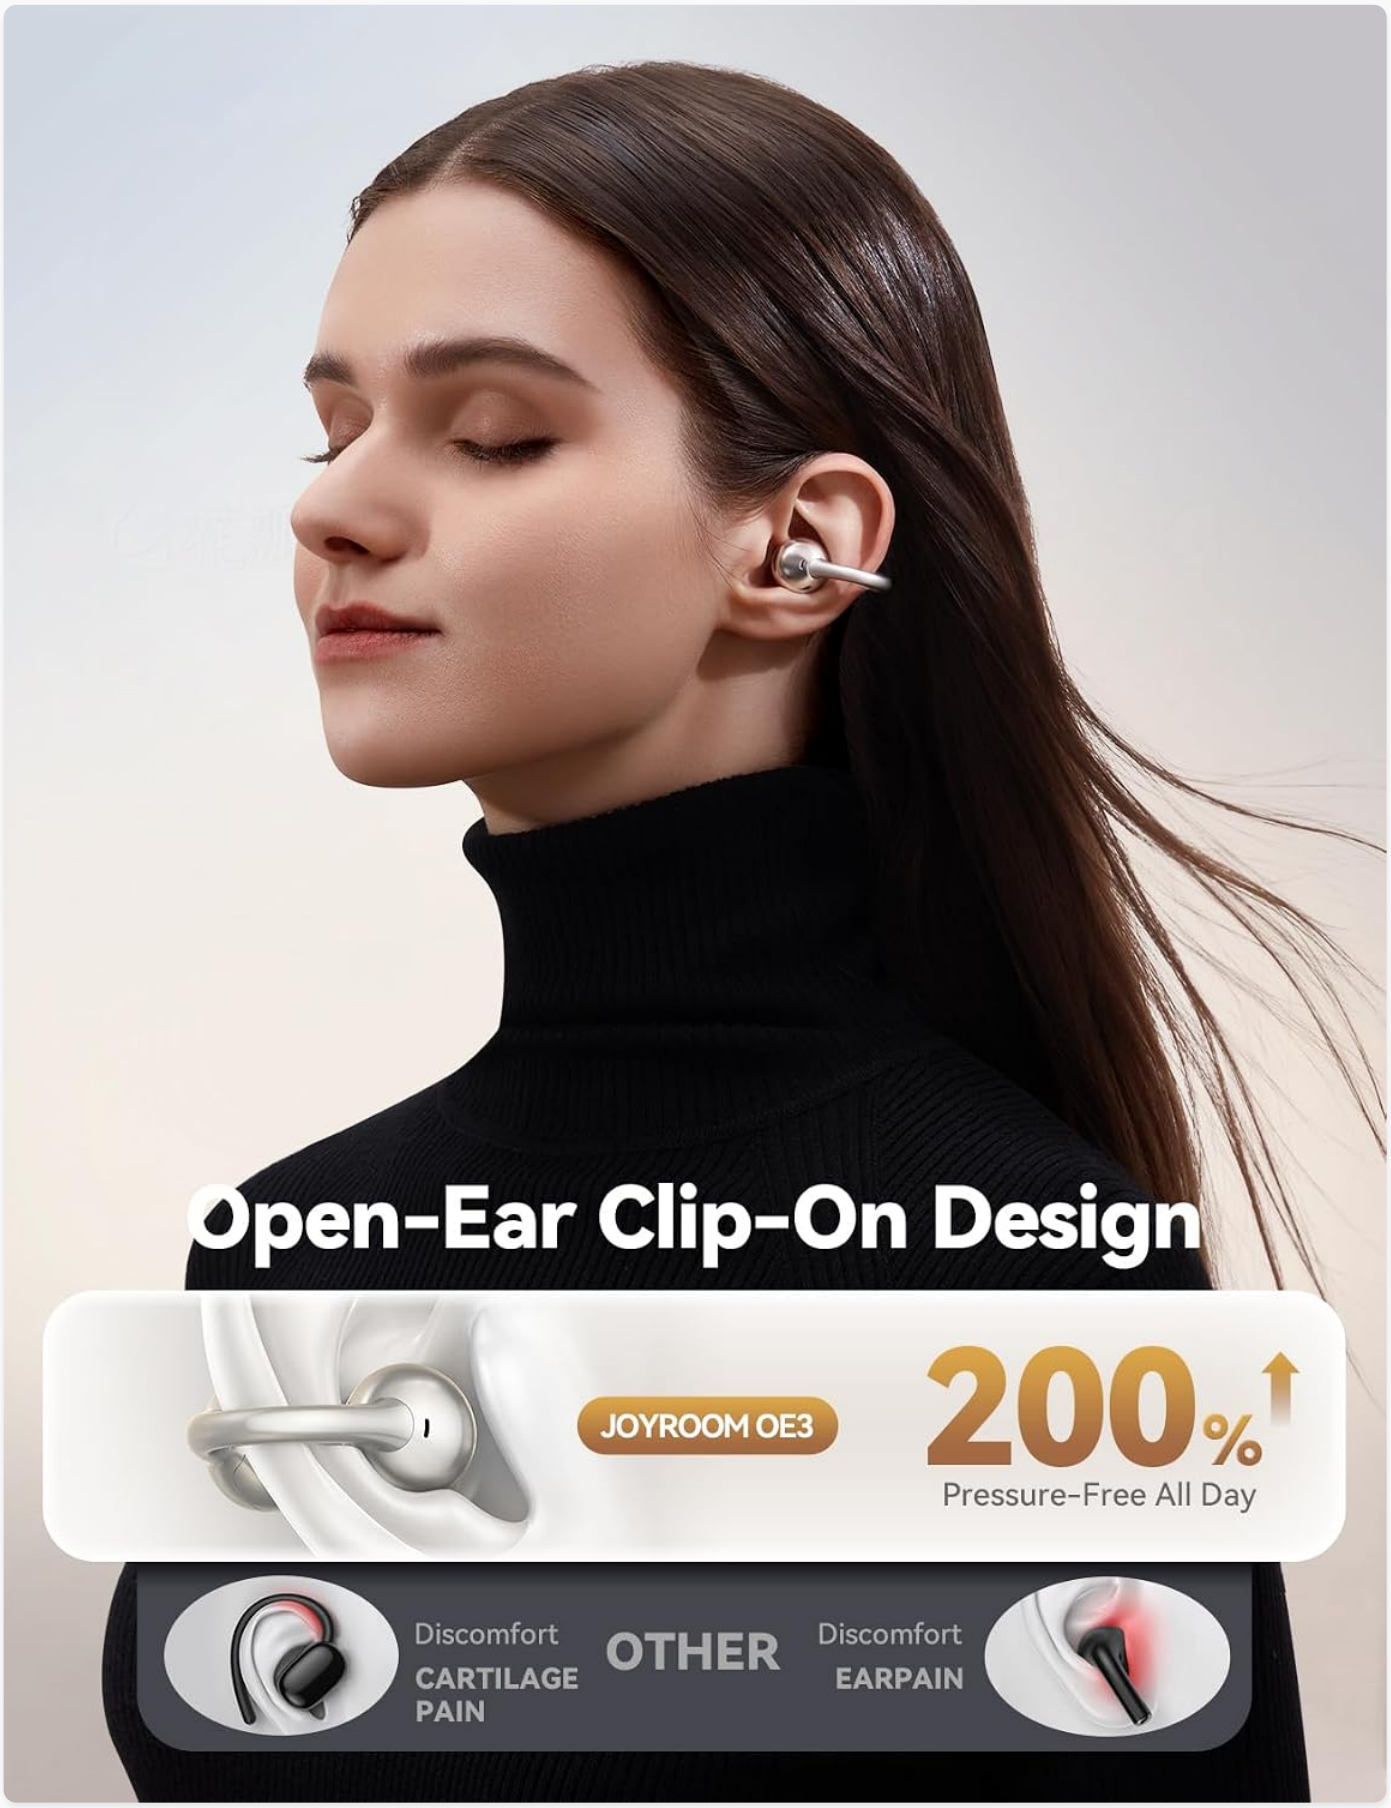

Image: A woman demonstrating the open-ear clip-on design of the JOYROOM OE3 earbuds, emphasizing pressure-free comfort.



Image: A visual guide illustrating the steps to correctly wear the JOYROOM OE3 earbuds, from the flexible design to the completed fit.

6. Operating Instructions

6.1 Omni Tap Control

The JOYROOM OE3 features innovative omni-touch technology, allowing you to control functions by tapping anywhere on the earbud surface. This eliminates the need to find specific tap zones, making control intuitive and easy, even with long nails or gloves.

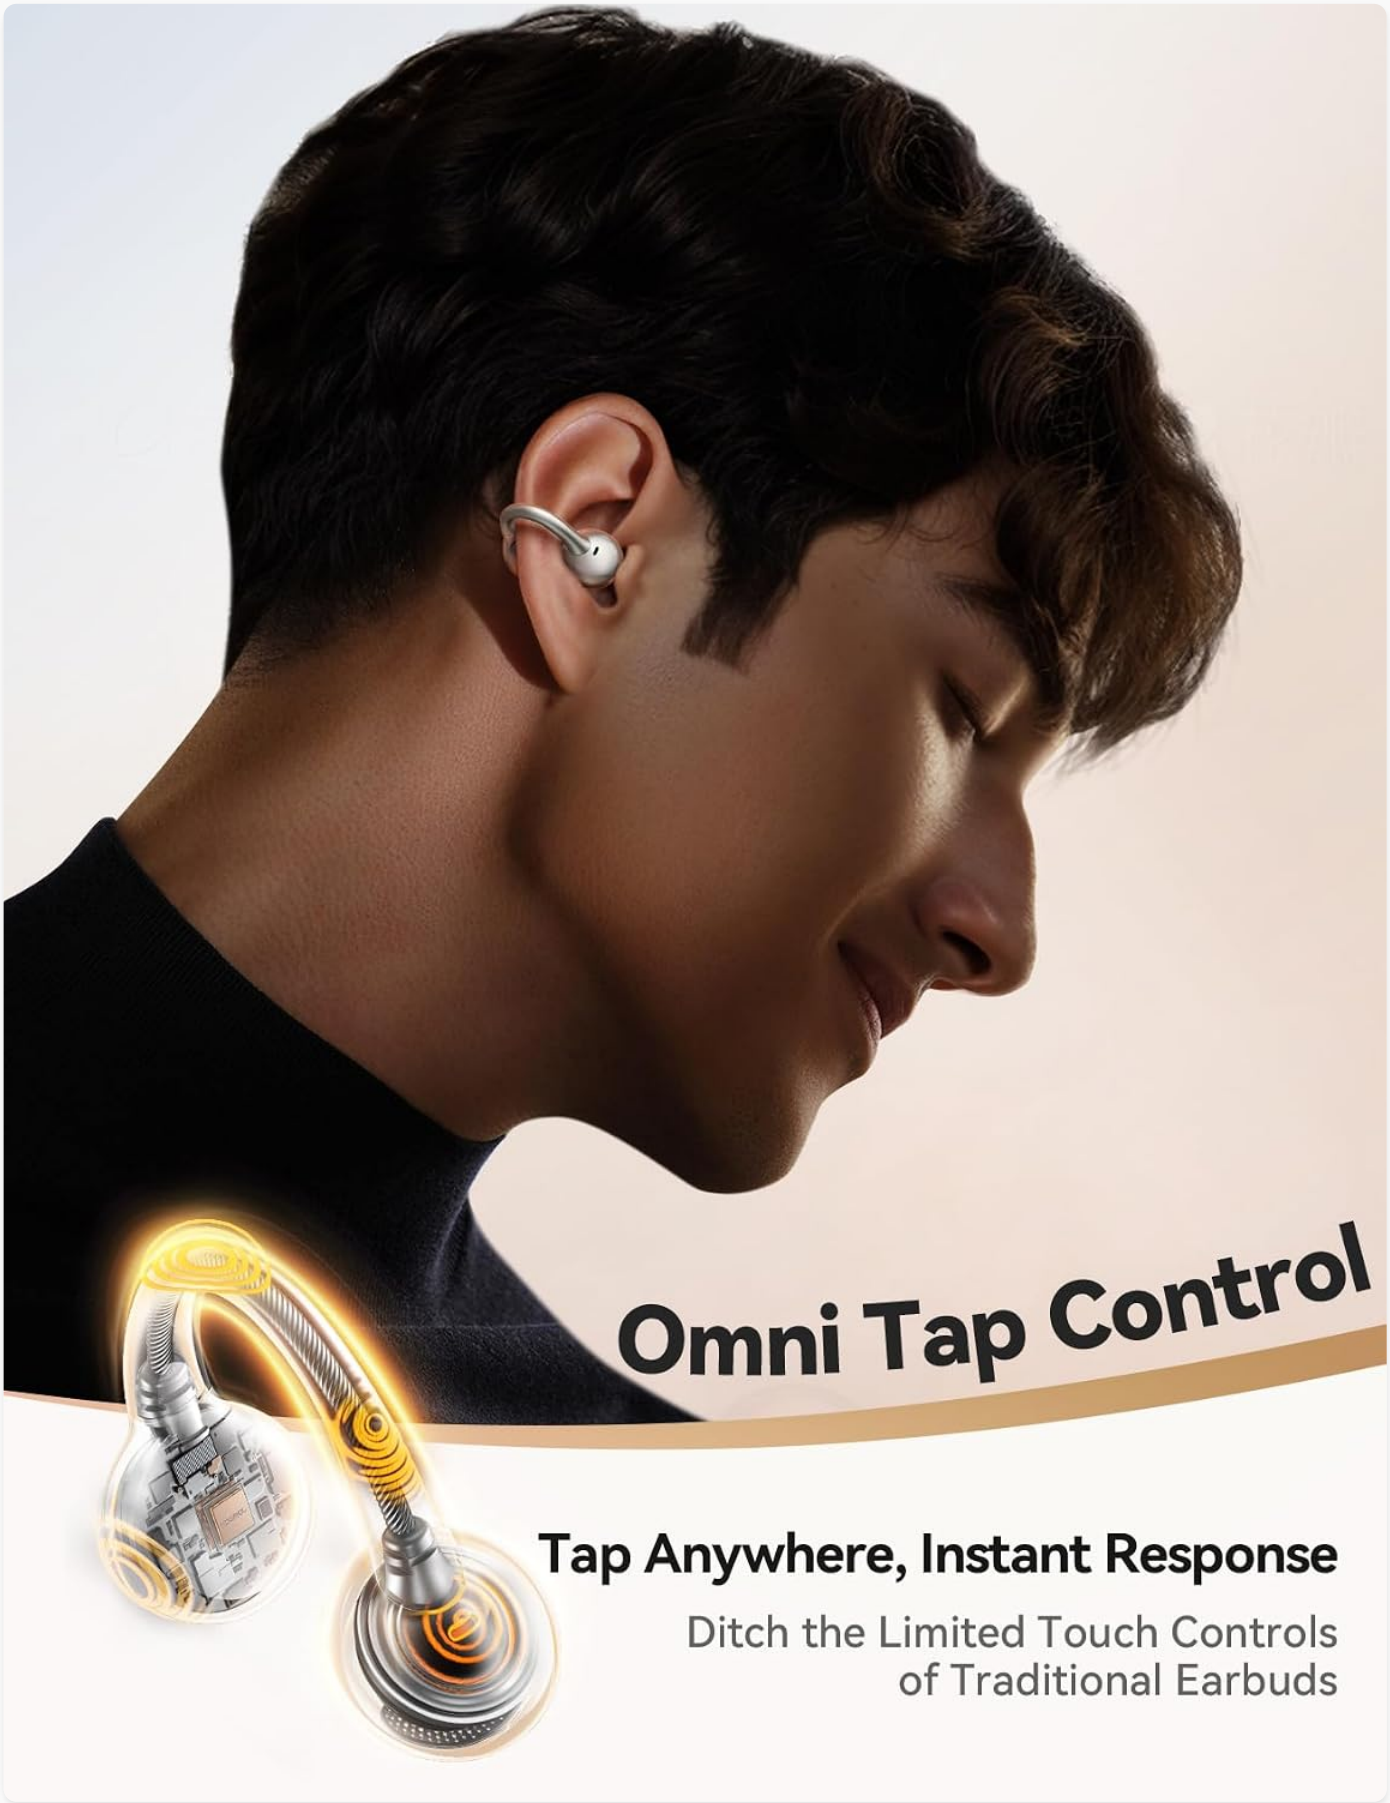

Image: A man using the JOYROOM OE3 earbuds, illustrating the Omni Tap Control feature where any tap on the earbud surface provides instant response.

Default Touch Functions:

Action	Function

Action	Function
Single Tap	Play/Pause music, Answer/End call
Double Tap (Left Earbud)	Previous Track
Double Tap (Right Earbud)	Next Track
Triple Tap	Activate Voice Assistant
Long Press (Left Earbud)	Volume Down
Long Press (Right Earbud)	Volume Up
Long Press (Incoming Call)	Reject Call

Note: You can customize touch settings through the JOYROOM Audio App for a personalized experience.

6.2 Auto Left-Right Recognition

The JOYROOM OE3 earbuds feature advanced self-adaptive audio channel technology. They automatically detect how you wear them and adjust the left and right audio output accordingly. This means you don't need to worry about which earbud goes into which ear; simply put them on, and enjoy perfectly balanced sound without any manual setup.

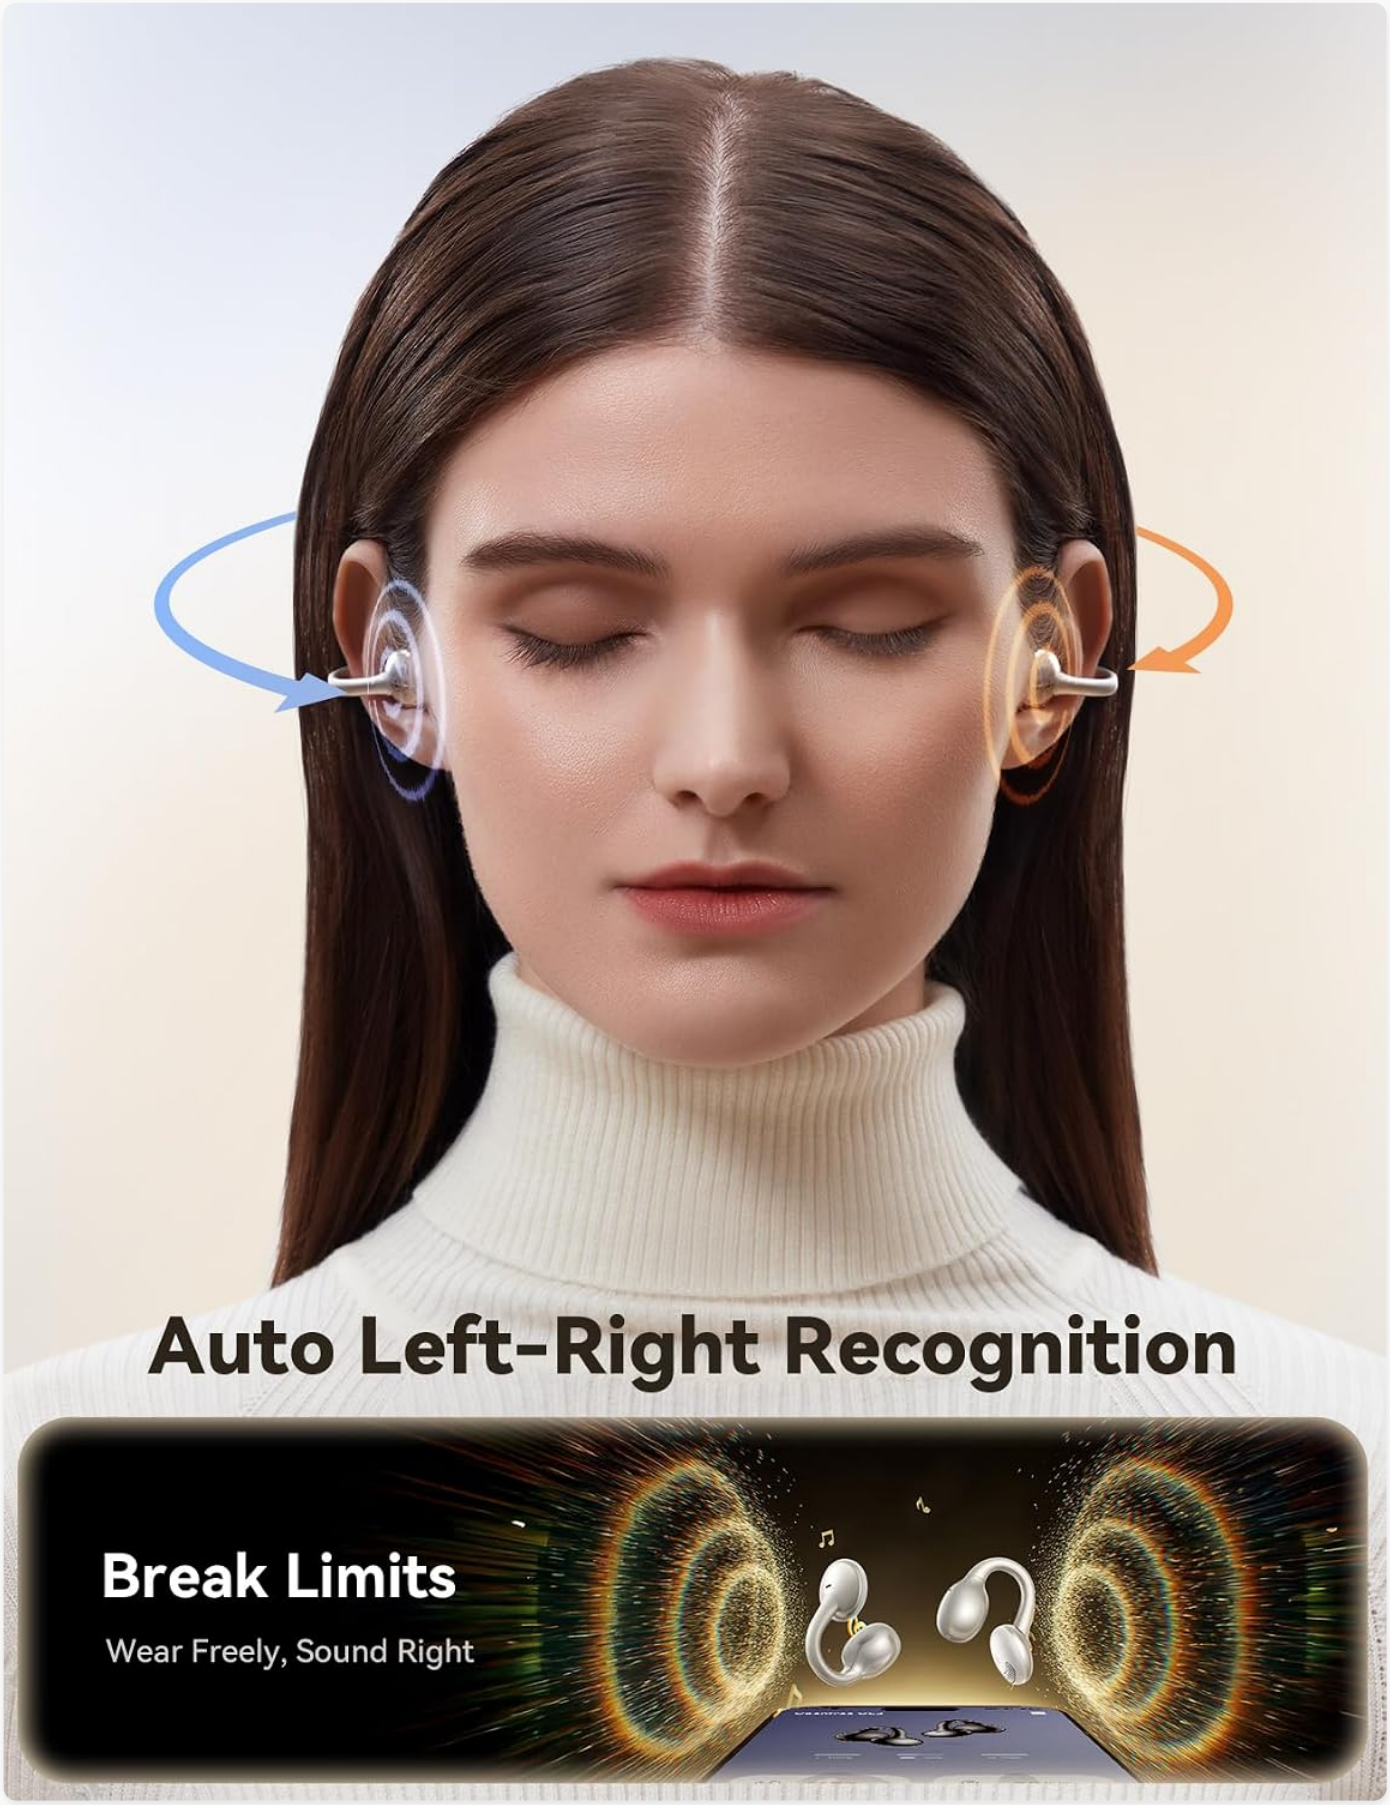

Image: A woman wearing the JOYROOM OE3 earbuds, visually representing the automatic left-right recognition feature that ensures correct audio output regardless of earbud placement.

6.3 Immersive Sound Experience

The OE3 earbuds are equipped with a powerful 13mm driver, composite diaphragm, and high-sensitivity magnet to deliver crisp highs, natural mids, and deep, punchy bass. The 12-layer spatial sound algorithm and exclusive panoramic

enhancement amplify clarity and depth, offering enhanced sound quality. For extra impact, activate the Bass Boost Mode via the app.



Image: A visual representation of the immersive surround sound experience provided by the OE3 earbuds, featuring AI Sound Tuning and boosted immersion.

6.4 Personalized Audio App (JOYROOM Audio App)

Take full control of your listening experience by downloading the JOYROOM Audio App. The app offers several features to customize and enhance your earbuds:

- **Customize Touch Controls:** Adjust the functions assigned to single, double, and triple taps, and long presses.
- **Fine-tune EQ Settings:** Personalize your audio profile with various equalizer presets or create your own.
- **Bass Boost:** Activate low-frequency enhancement for richer, more powerful bass.
- **"Find My Earbuds":** Locate misplaced earbuds by making them emit a sound.
- **Low-Latency Mode:** Optimize audio and visuals for gaming or video watching, ensuring perfect synchronization.

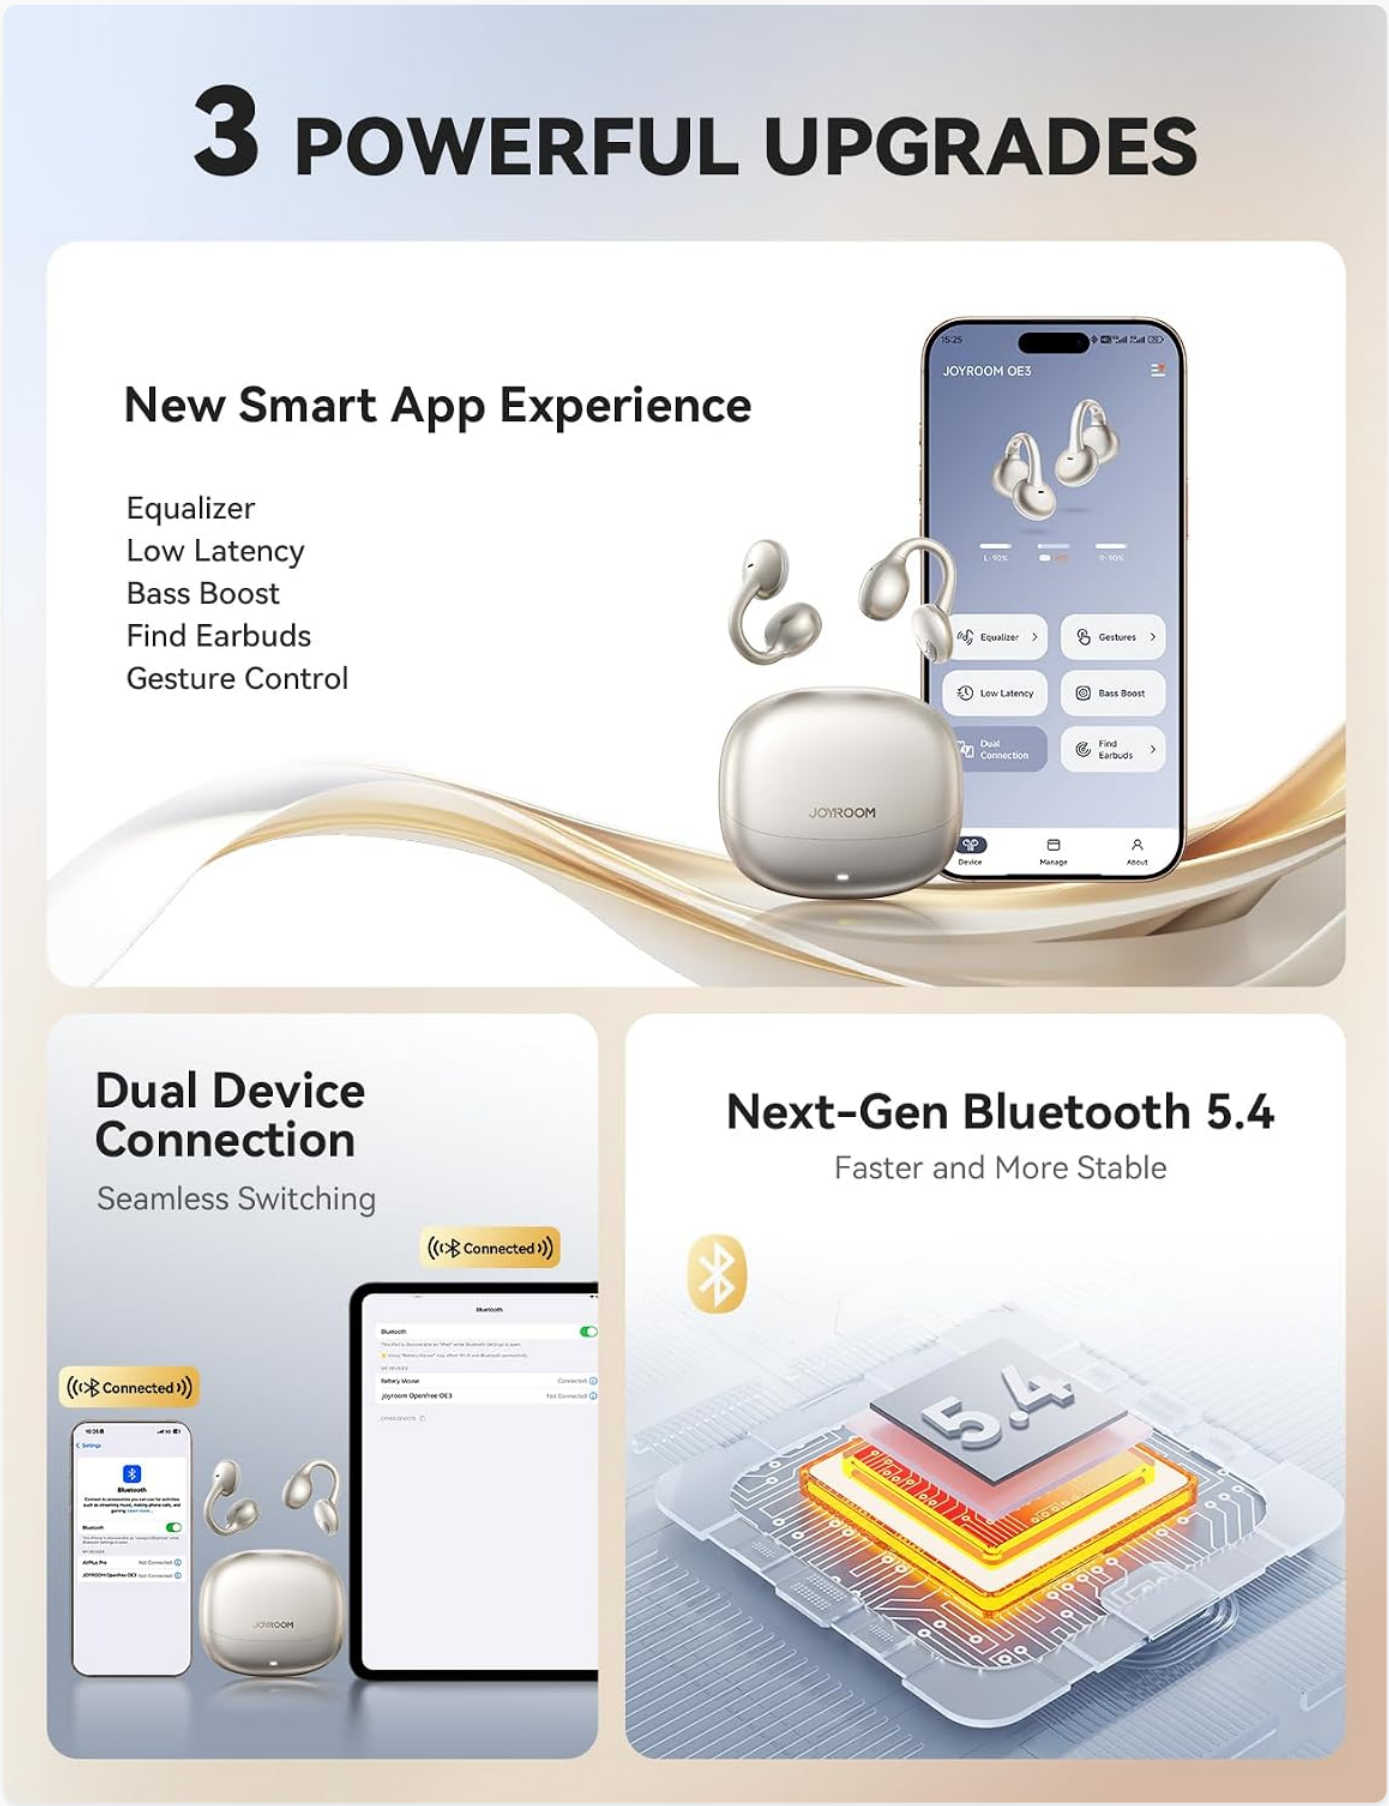

Image: An illustration of the JOYROOM Audio App interface, highlighting features like equalizer, low latency, bass boost, and find earbuds. Also shows dual device connection and Next-Gen Bluetooth 5.4.

6.5 Crystal-Clear Calls (AI-powered ENC)

The OE3 earbuds incorporate AI-powered Environmental Noise Cancellation (ENC) technology. This feature effectively blocks out background noise, ensuring crystal-clear calls wherever you are, allowing your voice to be heard clearly by the

person on the other end.
Note: If call audio comes from your phone instead of the earbuds, go to your phone's Settings > Call Audio Routing and select "Bluetooth Headset".

7. Maintenance

7.1 Cleaning

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use liquid cleaners, sprays, or harsh chemicals.
- Keep the charging contacts on both the earbuds and the case clean and dry.

7.2 Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Store the case in a cool, dry place, away from direct sunlight and extreme temperatures.

7.3 Water Resistance

The JOYROOM OE3 earbuds are IPX4 water-resistant. This means they are protected against splashing water from any direction. They are suitable for workouts and daily use where they might encounter sweat or light rain. However, they are not designed for swimming, showering, or submersion in water. Do not expose them to pressurized water or high-velocity water.



Image: A man with water droplets on his face, demonstrating the IPX4 water-resistant feature of the earbuds, suitable for workouts and everyday splashes.

8. Troubleshooting

Problem	Possible Cause	Solution
Earbuds not pairing	Low battery; not in pairing mode; device Bluetooth off.	Ensure earbuds and case are charged. Place earbuds in case, open lid to enter pairing mode. Turn on Bluetooth on your device.
No sound from earbuds	Not connected; volume too low; incorrect audio output.	Check Bluetooth connection. Increase volume on earbuds and device. Ensure "JOYROOM OE3" is selected as audio output.

Problem	Possible Cause	Solution
Call audio from phone, not earbuds	Incorrect audio routing setting.	On your phone, go to Settings > Call Audio Routing and select "Bluetooth Headset".
Earbuds frequently disconnect	Out of range; interference; low battery.	Keep device within 10 meters (33 feet). Avoid strong electromagnetic interference. Charge earbuds.
Touch controls unresponsive	Earbuds not properly worn; software glitch.	Adjust earbuds for a secure fit. Try resetting the earbuds (refer to app or online support for specific reset instructions).

9. Specifications

Feature	Detail
Model Name	JR-OE3
Brand	JOYROOM
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Ear Placement	Open Ear
Noise Control	Environmental Noise Cancellation (ENC)
Controller Type	Touch
Material	Silicone
Item Weight (each earbud)	4.9g (Ultra-Light)
Water Resistance Level	IPX4 (Water Resistant)
Compatible Devices	Cellphones, Tablets, Laptops
Color	Silver White
Impedance	16 Ohm

10. Warranty & Support

JOYROOM provides a **2-year hassle-free warranty** for the OE3 Clip-On Earbuds. If you encounter any issues during normal use, please contact JOYROOM customer service through your purchase platform or the official JOYROOM website.
Our support team is committed to providing prompt assistance, including troubleshooting, replacements, or other solutions to ensure your satisfaction.
For the latest support information, FAQs, and contact details, please visit the official JOYROOM website or refer to the contact information provided with your purchase.

© 2025 JOYROOM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F53L5MCG

More documents and user manuals: **https://manuals.plus/**