DentJet Hand Massager

DentJet Smart Hand Massager User Manual

Model: Hand Massager

Introduction Features Safety
Precautions Setup Operation Maintenance Troubleshooting Specifications Support

1. Introduction

This manual provides comprehensive instructions for the safe and effective use of your DentJet Smart Hand Massager. Designed to offer compression and heat therapy, this device aims to relieve discomfort in the hands, wrists, and fingers. Please read this manual thoroughly before first use and retain it for future reference.

2. Product Features

- **Advanced Airbag Compression:** Equipped with 13 double-layer TPU airbags for comprehensive hand, wrist, palm, and finger relief.
- **Multiple Massage Modes:** Features 3 distinct massage modes (Comprehensive, Ladder, Alternating) to suit various needs.
- **Adjustable Heat Therapy:** Offers 3 temperature modes (20°C, 35°C, 42°C) for soothing warmth. Fast heating capability.
- **Customizable Intensity:** Provides 5 massage intensities for personalized pressure.
- **Automatic Shut-off:** Includes a 15-minute automatic shut-off timer for safety and convenience.
- **High-Quality Construction:** Made with premium 2-layer TPU leather exterior and body-friendly tech cloth interior, designed for durability and comfort.
- **Portable and Rechargeable:** Features a 2000 mAh battery and Type-C quick charge interface, ideal for use at home, office, or while traveling.

Image: Overview of the DentJet Smart Hand Massager highlighting its key features such as 3 massage modes, 8-10 seconds fast heating, 3 temperature modes, 13 TPU massage airbags, 5 compression models, and a 2000 mAh fast-charging battery.

Image: Detailed view of the massager's control panel and settings, illustrating the 3 massage modes (Vitality, Health, Soothing), 3 temperature modes (20°C, 35°C, 42°C), and 5 levels of force adjustment for personalized therapy.

Image: Diagram showing the dimensions of the hand massager (e.g., 25cm/9.84inch length, 15cm/5.91inch width) and indicating its suitability for different hand sizes.

3. Safety Precautions

To ensure safe operation and prevent injury or damage to the device, please observe the following precautions:

- Do not use the device while sleeping.
- Use for one hand at a time only; do not attempt to use with both hands simultaneously.
- Remove all wearing objects such as jewelry, rings, or nail decorations before use.
- Do not use the device in bathrooms or allow water to come into contact with it. The device is not water-resistant.
- Not suitable for use by children or individuals with small hands.
- During hot weather, keep your hand dry and avoid operating the device in high-temperature environments.
- If your body feels warm, do not use the highest heat setting for more than 10 minutes to prevent potential skin burns.

- Consult a medical professional before use if you have any medical conditions, especially those affecting your hands or circulation.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Ensure the device is fully charged before use to maintain optimal performance.
- Do not use if the power cord or plug is damaged.
- Do not use if the device is malfunctioning or damaged.

4. Setup

Before using your DentJet Smart Hand Massager, please follow these steps:

1. **Unpack:** Carefully remove the massager from its packaging.
2. **Initial Charge:** Connect the massager to a power source using the provided Type-C USB cable. The power indicator light will show charging status (e.g., red light for charging, green light for fully charged). Ensure the device is fully charged before its first use.
3. **Preparation:** Ensure your hands are clean and dry. Remove any jewelry, rings, or watches from the hand you intend to massage.

SMART HAND MASSAGER

User Manual

Please read the manual carefully before using the product and keep it properly.
The product appearance is subject to the actual product.

Precautions

When using this product, please read all instructions in this manual carefully, especially the precautions. Violating the instructions may damage the machine or even cause danger.

Note

1. Do not use for purposes other than hand massage.
2. Do not use with other therapeutic devices at the same time.
3. Do not let young children use or play.
4. Do not use when sleeping.
5. People who cannot express their wishes or cannot move independently should not use it.
6. This product is for one-handed use, do not use it with both hands at the same time.
7. When using, do not wear hard objects such as jewelry or nail decorations around the massage area.
8. Do not use it in places with heavy humidity such as bathrooms, and do not let liquids such as water come into contact with the product.
9. The device has a heating surface, and people who are not sensitive to heat must pay attention when using it.
10. The default working time of this product is 15 minutes per time. If you need to use it again, you need to turn it on again. It is recommended that the single massage time should not exceed 30 minutes to avoid excessive massage.

Prohibited people

1. People who have had bone correction or surgery on their hands are prohibited from using the machine.
2. People with severe peripheral nerve disorders and sensory impairments.
3. People with skin injuries.
4. People with acute pain such as osteoporosis, sprains, muscle strains, etc.
5. People who cannot operate the machine by themselves.

Usage and safety instructions

1. Please choose according to the strength you can bear and make sure it is close to the skin.
2. It is recommended to use the charging cable and standard adapter provided by the machine for charging.
3. Do not clean the machine with water.
4. When using it for the first time, or the battery power is depleted after the product has been shelved for a long time, please follow the instruction manual to charge it to ensure that it can work properly.
5. Do not use it with wet hands.

1

Precautions

Maintenance and storage

1. Cleaning
   Wipe with a soft cloth, do not wet the main unit, do not wipe the main unit with an overly wet towel to prevent water from seeping into the main unit, and do not use thinners, gasoline or other volatile liquids to wipe.
2. Storage and storage
   Place the instrument out of reach of children, away from moisture, high temperature, direct sunlight and water splashes. After use, it is recommended to store the product in the original box. If it is not used for a long time, it is recommended to charge it once every 30 days or so to avoid the battery triggering over-discharge protection, which may cause abnormal charging or failure to charge.
3. Maintenance
   Do not disassemble, repair or replace parts by yourself, which may cause machine failure. If there is a problem with the product, please turn it off in time, do not continue to use it and contact the company's maintenance service center.

Product Parameters

Charging voltage	5V ⎓
power	5W
Battery capacity	2000mAh

2

Instructions

Product Introduction

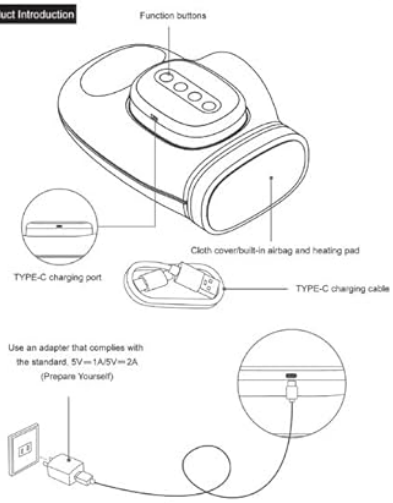

3

Preparation before use

Please check whether the product has power. If the power is too low and the product automatically shuts down or cannot be turned on, please charge it before using it.

1.Make sure your hands are clean and do not get them wet. Do not wear jewelry.

2.Put your fingers into the correct holes in order.

⚠ Note: that the actions of putting in and taking out the hand must be done when the machine is turned off.

4

Instructions

Introduction to left and right hand use

This product is for one-handed use, please do not use it with both hands at the same time.

Left hand

Right hand

5

Product Introduction

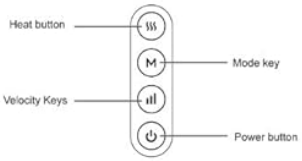

1.Power button
Long press " ⏻ " to turn on/off.
When the battery is fully charged, the green light will be on; low battery: the red light will flash; charging: the red light will flash slowly; fully charged: the green light will be on

2.Hot compress button
Short press " ≋ " to switch between low/medium/high/on/off hot compress. The default setting is no heating.
Low-grade hot compress, green light on; medium-grade hot compress, yellow light on; high-grade hot compress, red light on; off hot compress, light off.

3.Mode button
The default mode is one when powered on. Short press " M " to switch the mode (mode 1-mode 2-mode 3).
Mode 1, green light on; Mode 2, blue light on; Mode 3, red light on.

4.Velocity Keys
Short press " ıll " to switch between 1-5 strength levels, 1 strength levels are the default when powered on.Level 1, green light on; Level 2, blue light on; Level 3, yellow light on; Level 4, purple light on; Level 5, red light on.

Function	Air pressure	Heat	Time
Mode 1	Finger-palm-wrist (comprehensive)	/	15min
Mode 2	Finger-palm-wrist (ladder)	/	15min
Mode 3	Finger-palm-wrist (alternating)	/	15min

6

Battery Disassembly

Battery disassembly

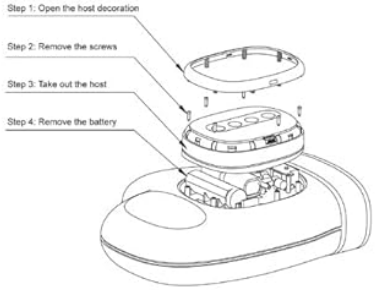

- The main unit (including lithium battery) and accessories of this product have reached the end of their service life. Please do not discard them at will, otherwise electronic waste will be generated and pollute the environment. Before discarding the product, the battery must be removed from the product; before removing the battery, the product must be powered off; the battery should be disposed of safely when removed.

7

Troubleshooting

Troubleshooting

If you encounter problems when using the product, please refer to the following tips and solutions. If the product is still in a faulty state or cannot be used, please turn off the power. Users should not disassemble or repair the product by themselves. Disassembly or repair by yourself and damage to the product will cause the product warranty to be invalid, and the company will not be responsible for any consequences caused by this situation.

problem	Possible causes/solutions
Unable to start the product	Please confirm whether the battery is low; please confirm that the On-Off button has been pressed.
Cannot charge or no charging light	Please check whether the TYPE-C charging cable is properly connected to the charging port of this device;
The product suddenly stops while working	Check if the product is low on power; The time set by the automatic timing device has passed. If the problem persists, do not continue to use it and contact the company's repair service center;

▲ Danger	The battery used in this product is a special rechargeable battery and cannot be used in other products. Do not charge the rechargeable battery that has been removed. Do not throw it into fire to cause excessive heat; Do not pierce it with nails, impact it with gravity, or disassemble it for modification; Do not directly connect the positive and negative poles of the battery with metal; Do not store it with necklaces, hairpins, etc. Do not charge, use, or place it near a stove or in the hot sun. The above situations may cause heating, fire, rupture, etc.
▲ Warning	Please place the removed rechargeable battery out of reach of infants and young children to prevent accidental swallowing; if accidental swallowing occurs, please seek medical attention immediately; When the battery fluid leaks, do not touch the liquid with bare hands, and handle it as follows: When the battery fluid enters the eyes, there is a risk of blindness. Do not rub the eyes directly with your hands. Immediately wash with clean water and seek medical attention; When the battery fluid gets on the body or clothing, it may cause skin inflammation or injury. Please rinse with clean water. If you still feel uncomfortable, seek medical attention immediately; The product can only be disassembled when it is discarded. Failure to do so may result in fire, electric shock, injury, etc.

8

Image: Excerpt from the user manual illustrating the preparation steps before using the hand massager, including charging via Type-C port and ensuring hands are clean and free of jewelry.

5. Operating Instructions

Follow these steps to operate your hand massager:

1. **Insert Hand:** Place one hand into the massager, ensuring your fingers are correctly aligned within the internal dividers.
2. **Power On:** Press the Power button (G) to turn on the device. The power indicator light will illuminate.
3. **Select Mode:** Press the Mode button (M) to cycle through the 3 available massage modes:
    - **Comprehensive Mode:** Indicated by a blue light.
    - **Ladder Mode:** Indicated by a red light.
    - **Alternating Mode:** Indicated by a green light.
4. **Adjust Intensity:** Press the Intensity button (|||) to select from 5 levels of compression strength. The indicator lights will change (e.g., 1st gear: blue, 2nd gear: green, 3rd gear: red, 4th gear: purple, 5th gear: yellow).
5. **Activate Heat:** Press the Heat button (SSS) to choose from 3 temperature settings (20°C, 35°C, 42°C). The indicator lights will change (e.g., 1st gear: blue, 2nd gear: green, 3rd gear: red). Heat cannot be used independently; a massage mode and compression level must also be selected.
6. **Automatic Shut-off:** The device will automatically turn off after 15 minutes of continuous operation.
7. **Power Off:** To manually turn off the device, press and hold the Power button (G) until the lights turn off.

Image: Close-up of the massager's control panel, showing the distinct buttons for Heat, Mode, Intensity, and Power, each with corresponding indicator lights.

Image: A hand inserted into the DentJet Smart Hand Massager, demonstrating proper hand placement for effective massage and compression.

Your browser does not support the video tag.

Video: This video demonstrates the basic operation of the Smart Hand Massager, including powering on, selecting modes, and showing the intelligent hot compress feature. It highlights the simple panel and five-speed intensity adjustment.

6. Maintenance

Proper maintenance ensures the longevity and optimal performance of your hand massager:

- **Cleaning:** Wipe the exterior of the massager with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** The device contains a Lithium-Ion battery. Do not attempt to disassemble the battery. If the device

will not be used for an extended period, charge it periodically to maintain battery health.

- **Disposal:** The main unit and internal lithium battery are recyclable. Please dispose of the product according to local regulations for electronic waste. Do not dispose of with household waste.

SMART HAND MASSAGER

User Manual

Please read the manual carefully before using the product and keep it properly.
The product appearance is subject to the actual product.

Precautions

When using this product, please read all instructions in this manual carefully, especially the precautions. Violating the instructions may damage the machine or even cause danger.

Note

1. Do not use for purposes other than hand massage.
2. Do not use with other therapeutic devices at the same time.
3. Do not let young children use or play.
4. Do not use when sleeping.
5. People who cannot express their wishes or cannot move independently should not use it.
6. This product is for one-handed use, do not use it with both hands at the same time.
7. When using, do not wear hard objects such as jewelry or nail decorations around the massage area.
8. Do not use it in places with heavy humidity such as bathrooms, and do not let liquids such as water come into contact with the product.
9. The device has a heating surface, and people who are not sensitive to heat must pay attention when using it.
10. The default working time of this product is 15 minutes per time. If you need to use it again, you need to turn it on again. It is recommended that the single massage time should not exceed 30 minutes to avoid excessive massage.

Prohibited people

1. People who have had bone correction or surgery on their hands are prohibited from using the machine.
2. People with severe peripheral nerve disorders and sensory impairments.
3. People with skin injuries.
4. People with acute pain such as osteoporosis, sprains, muscle strains, etc.
5. People who cannot operate the machine by themselves.

Usage and safety instructions

1. Please choose according to the strength you can bear and make sure it is close to the skin.
2. It is recommended to use the charging cable and standard adapter provided by the machine for charging.
3. Do not clean the machine with water.
4. When using it for the first time, or the battery power is depleted after the product has been shelved for a long time, please follow the instruction manual to charge it to ensure that it can work properly.
5. Do not use it with wet hands.

1

Precautions

Maintenance and storage

1. Cleaning
   Wipe with a soft cloth, do not wet the main unit, do not wipe the main unit with an overly wet towel to prevent water from seeping into the main unit, and do not use thinners, gasoline or other volatile liquids to wipe.
2. Storage and storage
   Place the instrument out of reach of children, away from moisture, high temperature, direct sunlight and water splashes. After use, it is recommended to store the product in the original box. If it is not used for a long time, it is recommended to charge it once every 30 days or so to avoid the battery triggering over-discharge protection, which may cause abnormal charging or failure to charge.
3. Maintenance
   Do not disassemble, repair or replace parts by yourself, which may cause machine failure. If there is a problem with the product, please turn it off in time, do not continue to use it and contact the company's maintenance service center.

Product Parameters

Charging voltage	5V ⎓
power	5W
Battery capacity	2000mAh

2

Instructions

Product Introduction

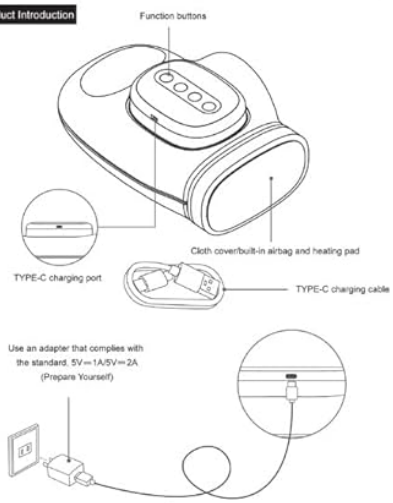

3

Preparation before use

Please check whether the product has power. If the power is too low and the product automatically shuts down or cannot be turned on, please charge it before using it.

1 Make sure your hands are clean and do not get them wet. Do not wear jewelry.

2 Put your fingers into the correct holes in order.

⚠ Note: that the actions of putting in and taking out the hand must be done when the machine is turned off.

4

Instructions

Introduction to left and right hand use

This product is for one-handed use, please do not use it with both hands at the same time.

Left hand

Right hand

5

Product Introduction

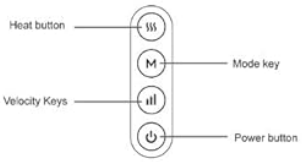

1.Power button
Long press " ⏻ " to turn on/off.
When the battery is fully charged, the green light will be on; low battery: the red light will flash; charging: the red light will flash slowly; fully charged: the green light will be on
2.Hot compress button
Short press " ♨ " to switch between low/medium/high/on/off hot compress. The default setting is no heating.
Low-grade hot compress, green light on; medium-grade hot compress, yellow light on; high-grade hot compress, red light on; off hot compress, light off.
3.Mode button
The default mode is one when powered on. Short press " M " to switch the mode (mode 1-mode 2-mode 3).
Mode 1, green light on; Mode 2, blue light on; Mode 3, red light on.
4.Velocity Keys
Short press " ıll " to switch between 1-5 strength levels, 1 strength levels are the default when powered on.Level 1, green light on; Level 2, blue light on; Level 3, yellow light on; Level 4, purple light on; Level 5, red light on.

Function	Air pressure	Heat	Time
Mode 1	Finger-palm-wrist (comprehensive)	/	15min
Mode 2	Finger-palm-wrist (ladder)	/	15min
Mode 3	Finger-palm-wrist (alternating)	/	15min

6

Battery Disassembly

Battery disassembly

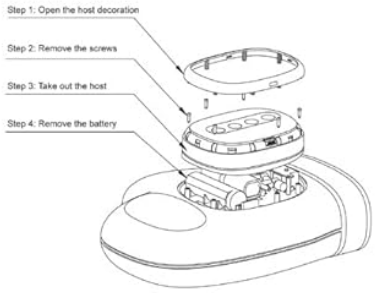

- The main unit (including lithium battery) and accessories of this product have reached the end of their service life. Please do not discard them at will, otherwise electronic waste will be generated and pollute the environment. Before discarding the product, the battery must be removed from the product; before removing the battery, the product must be powered off; the battery should be disposed of safely when removed.

7

Troubleshooting

Troubleshooting

If you encounter problems when using the product, please refer to the following tips and solutions. If the product is still in a faulty state or cannot be used, please turn off the power. Users should not disassemble or repair the product by themselves. Disassembly or repair by yourself and damage to the product will cause the product warranty to be invalid, and the company will not be responsible for any consequences caused by this situation.

problem	Possible causes/solutions
Unable to start the product	Please confirm whether the battery is low; please confirm that the On-Off button has been pressed.
Cannot charge or no charging light	Please check whether the TYPE-C charging cable is properly connected to the charging port of this device;
The product suddenly stops while working	Check if the product is low on power; The time set by the automatic timing device has passed; If the problem persists, do not continue to use it and contact the company's repair service center.

⚠ Danger	The battery used in this product is a special rechargeable battery and cannot be used in other products. Do not charge the rechargeable battery that has been removed. Do not throw it into fire to cause excessive heat; Do not pierce it with nails, impact it with gravity, or disassemble it for modification; Do not directly connect the positive and negative poles of the battery with metal; Do not store it with necklaces, hairpins, etc. Do not charge, use, or place it near a stove or in the hot sun. The above situations may cause heating, fire, rupture, etc.
⚠ Warning	Please place the removed rechargeable battery out of reach of infants and young children to prevent accidental swallowing; if accidental swallowing occurs, please seek medical attention immediately; When the battery fluid leaks, do not touch the liquid with bare hands, and handle it as follows: When the battery fluid enters the eyes, there is a risk of blindness. Do not rub the eyes directly with your hands. Immediately wash with clean water and seek medical attention; When the battery fluid gets on the body or clothing, it may cause skin inflammation or injury. Please rinse with clean water. If you still feel uncomfortable, seek medical attention immediately; The product can only be disassembled when it is discarded. Failure to do so may result in fire, electric shock, injury, etc.

8

Image: Excerpt from the user manual detailing battery disassembly for proper disposal and general maintenance guidelines.

7. Troubleshooting

If you encounter any issues with your DentJet Smart Hand Massager, please refer to the following table for solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Charge the device fully. Ensure the charging cable is properly connected.
Weak compression.	Low battery or incorrect intensity setting.	Recharge the device. Increase the massage intensity level using the Intensity button.
No heat or insufficient heat.	Heat function not activated or low heat setting.	Press the Heat button to activate heat and cycle to a higher temperature setting. Ensure a massage mode is also selected.
Device stops unexpectedly.	Automatic 15-minute shut-off or low battery.	This is normal operation due to the timer. If not due to timer, recharge the device.
Uncomfortable pressure.	Intensity setting is too high.	Decrease the massage intensity level using the Intensity button.

SMART HAND MASSAGER

User Manual

Please read the manual carefully before using the product and keep it properly.
The product appearance is subject to the actual product.

Precautions

When using this product, please read all instructions in this manual carefully, especially the precautions. Violating the instructions may damage the machine or even cause danger.

Note

1. Do not use for purposes other than hand massage.
2. Do not use with other therapeutic devices at the same time.
3. Do not let young children use or play.
4. Do not use when sleeping.
5. People who cannot express their wishes or cannot move independently should not use it.
6. This product is for one-handed use, do not use it with both hands at the same time.
7. When using, do not wear hard objects such as jewelry or nail decorations around the massage area.
8. Do not use it in places with heavy humidity such as bathrooms, and do not let liquids such as water come into contact with the product.
9. The device has a heating surface, and people who are not sensitive to heat must pay attention when using it.
10. The default working time of this product is 15 minutes per time. If you need to use it again, you need to turn it on again. It is recommended that the single massage time should not exceed 30 minutes to avoid excessive massage.

Prohibited people

1. People who have had bone correction or surgery on their hands are prohibited from using the machine.
2. People with severe peripheral nerve disorders and sensory impairments.
3. People with skin injuries.
4. People with acute pain such as osteoporosis, sprains, muscle strains, etc.
5. People who cannot operate the machine by themselves.

Usage and safety instructions

1. Please choose according to the strength you can bear and make sure it is close to the skin.
2. It is recommended to use the charging cable and standard adapter provided by the machine for charging.
3. Do not clean the machine with water.
4. When using it for the first time, or the battery power is depleted after the product has been shelved for a long time, please follow the instruction manual to charge it to ensure that it can work properly.
5. Do not use it with wet hands.

1

Precautions

Maintenance and storage

1. Cleaning
   Wipe with a soft cloth, do not wet the main unit, do not wipe the main unit with an overly wet towel to prevent water from seeping into the main unit, and do not use thinners, gasoline or other volatile liquids to wipe.
2. Storage and storage
   Place the instrument out of reach of children, away from moisture, high temperature, direct sunlight and water splashes. After use, it is recommended to store the product in the original box. If it is not used for a long time, it is recommended to charge it once every 30 days or so to avoid the battery triggering over-discharge protection, which may cause abnormal charging or failure to charge.
3. Maintenance
   Do not disassemble, repair or replace parts by yourself, which may cause machine failure. If there is a problem with the product, please turn it off in time, do not continue to use it and contact the company's maintenance service center.

Product Parameters

Charging voltage	5V ⎓
power	5W
Battery capacity	2000mAh

2

Instructions

Product Introduction

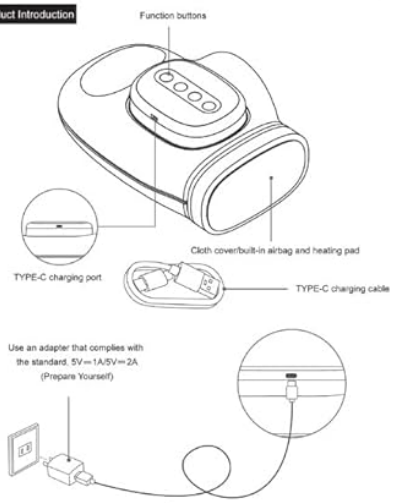

3

Preparation before use

Please check whether the product has power. If the power is too low and the product automatically shuts down or cannot be turned on, please charge it before using it.

1 Make sure your hands are clean and do not get them wet. Do not wear jewelry.

2 Put your fingers into the correct holes in order.

⚠ Note: that the actions of putting in and taking out the hand must be done when the machine is turned off.

4

Instructions

Introduction to left and right hand use

This product is for one-handed use, please do not use it with both hands at the same time.

Left hand

Right hand

5

Product Introduction

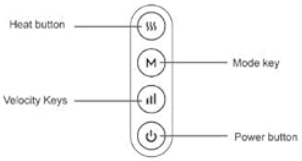

1.Power button
Long press " ⏻ " to turn on/off.
When the battery is fully charged, the green light will be on; low battery: the red light will flash; charging: the red light will flash slowly; fully charged: the green light will be on

2.Hot compress button
Short press " ≋ " to switch between low/medium/high/on/off hot compress. The default setting is no heating.
Low-grade hot compress, green light on; medium-grade hot compress, yellow light on; high-grade hot compress, red light on; off hot compress, light off.

3.Mode button
The default mode is one when powered on. Short press " M " to switch the mode (mode 1-mode 2-mode 3).
Mode 1, green light on; Mode 2, blue light on; Mode 3, red light on.

4.Velocity Keys
Short press " ıll " to switch between 1-5 strength levels, 1 strength levels are the default when powered on.Level 1, green light on; Level 2, blue light on; Level 3, yellow light on; Level 4, purple light on; Level 5, red light on.

Function	Air pressure	Heat	Time
Mode 1	Finger-palm-wrist (comprehensive)	/	15min
Mode 2	Finger-palm-wrist (ladder)	/	15min
Mode 3	Finger-palm-wrist (alternating)	/	15min

6

Battery Disassembly

Battery disassembly

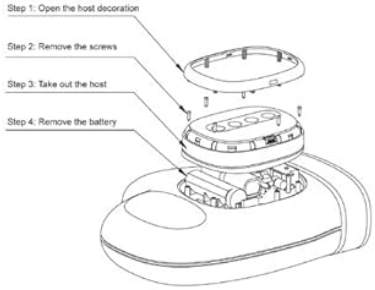

- The main unit (including lithium battery) and accessories of this product have reached the end of their service life. Please do not discard them at will, otherwise electronic waste will be generated and pollute the environment. Before discarding the product, the battery must be removed from the product; before removing the battery, the product must be powered off; the battery should be disposed of safely when removed.

7

Troubleshooting

Troubleshooting

If you encounter problems when using the product, please refer to the following tips and solutions. If the product is still in a faulty state or cannot be used, please turn off the power. Users should not disassemble or repair the product by themselves. Disassembly or repair by yourself and damage to the product will cause the product warranty to be invalid, and the company will not be responsible for any consequences caused by this situation.

problem	Possible causes/solutions
Unable to start the product	Please confirm whether the battery is low; please confirm that the On-Off button has been pressed.
Cannot charge or no charging light	Please check whether the TYPE-C charging cable is properly connected to the charging port of this device;
The product suddenly stops while working	Check if the product is low on power; The time set by the automatic timing device has passed. If the problem persists, do not continue to use it and contact the company's repair service center;

▲ Danger	The battery used in this product is a special rechargeable battery and cannot be used in other products. Do not charge the rechargeable battery that has been removed. Do not throw it into fire to cause excessive heat; Do not pierce it with nails, impact it with gravity, or disassemble it for modification; Do not directly connect the positive and negative poles of the battery with metal; Do not store it with necklaces, hairpins, etc. Do not charge, use, or place it near a stove or in the hot sun. The above situations may cause heating, fire, rupture, etc.
▲ Warning	Please place the removed rechargeable battery out of reach of infants and young children to prevent accidental swallowing; if accidental swallowing occurs, please seek medical attention immediately; When the battery fluid leaks, do not touch the liquid with bare hands, and handle it as follows: When the battery fluid enters the eyes, there is a risk of blindness. Do not rub the eyes directly with your hands. Immediately wash with clean water and seek medical attention; When the battery fluid gets on the body or clothing, it may cause skin inflammation or injury. Please rinse with clean water. If you still feel uncomfortable, seek medical attention immediately; The product can only be disassembled when it is discarded. Failure to do so may result in fire, electric shock, injury, etc.

8

Image: Excerpt from the user manual providing a troubleshooting guide for common issues and their resolutions.

8. Product Specifications

Feature	Detail
Brand	DentJet
Model Name	Hand Massager
Product Dimensions	9.65 x 3.94 x 7.48 inches (24.5 x 10 x 19 cm)
Item Weight	1.51 Pounds (685 Grams)
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Capacity	2000 mAh
Massage Modes	3 (Comprehensive, Ladder, Alternating)
Temperature Modes	3 (20°C, 35°C, 42°C)
Massage Intensities	5 levels
Automatic Shut-off	15 minutes
Material Type	TPU (exterior)
Water Resistance Level	Not Water Resistant
Manufacturer	Shenzhen Future Electronic Co.,Ltd

9. Warranty and Support

DentJet is committed to providing high-quality products and customer satisfaction.

- **Lifetime Online Support:** If you encounter any problems while using your hand massager, please contact us. Our specialized staff is available online 24 hours a day to assist you in a timely manner.
- **Return Policy:** This product is eligible for a refund or replacement within 30 days of purchase, subject to the retailer's return policy.

For further assistance, please visit the **DentJet Store on Amazon**.

© 2025 DentJet. All rights reserved.