Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Butterfly Xeno Pro 750W (M0981A00000)

Butterfly Xeno Pro 750W Mixer Grinder User Manual

Model: Xeno Pro 750W (M0981A00000)

Introduction

Thank you for choosing the Butterfly Xeno Pro 750W Mixer Grinder. This appliance is designed for efficient and versatile kitchen tasks, including wet and dry grinding, juicing, and blending. It features durable Tritan jars, powerful Vortex blades, and a high-performance Torx21 motor to ensure consistent results and long-lasting performance. Please read this manual carefully before operating the appliance to ensure safe and optimal use. Keep this manual for future reference.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not immerse the motor unit in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils out of the jar while blending to reduce the risk of severe injury to persons or damage to the mixer grinder. A scraper may be used but only when the mixer grinder is not running.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The appliance is equipped with an overload protection mechanism. If the motor stops due to overload, switch off the appliance, unplug it, and allow it to cool down before restarting.
- Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Blades are sharp. Handle with care.

Product Overview

The Butterfly Xeno Pro 750W Mixer Grinder includes the main motor unit and four unbreakable Eastman Tritan jars with corresponding lids and Vortex blades.



Image: The Butterfly Xeno Pro 750W Mixer Grinder with its main unit and four Tritan jars.

Key Components:

- **Motor Unit:** The base unit housing the 750W Torx21 motor.
- **Tritan Jars (4):** Made from BPA-free, impact-resistant Eastman Tritan material.
- **Vortex Blades:** Stainless steel blades designed for efficient grinding and blending.
- **Lids:** Secure lids for each jar to prevent spillage during operation.
- **Speed Control Knob:** For selecting desired speed and pulse function.



Image: Visual representation of key features such as the Torx21 motor, Vortex blades, 360° secure jar lock, Tritan TX1001 jars, NSF certification, and warranty information.

Setup

1. **Unpack:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.
2. **Clean:** Before first use, wash all jars, lids, and blades with warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the motor unit on a clean, dry, and stable surface, away from the edge of the countertop. Ensure there is adequate ventilation around the unit.
4. **Assemble Jar:** Ensure the blade assembly is securely fitted into the jar. Place the ingredients into the appropriate jar. Do not overfill.
5. **Secure Lid:** Place the lid firmly on the jar.
6. **Attach Jar to Motor Unit:** Place the assembled jar onto the motor unit. Rotate the jar clockwise until it locks

securely into place. The 360° secure jar lock ensures proper placement before operation.

7. **Connect Power:** Plug the power cord into a suitable electrical outlet.

Operating Instructions

The Butterfly Xeno Pro features a knob control with 3-speed settings and a pulse function for precise control over your grinding and blending tasks.

1. **Prepare Ingredients:** Cut ingredients into smaller pieces if necessary to facilitate grinding.
2. **Load Jar:** Place the prepared ingredients into the chosen jar. Ensure the quantity does not exceed the maximum fill line.
3. **Secure Jar:** Place the lid on the jar and ensure it is properly sealed. Mount the jar onto the motor unit and twist clockwise until it locks.
4. **Select Speed:** Turn the control knob to the desired speed setting (1, 2, or 3). For short bursts of power, use the 'Pulse' function by turning the knob to 'P' and holding it briefly.
5. **Operate:** Allow the mixer grinder to run until the desired consistency is achieved. Avoid continuous operation for extended periods. Allow the motor to rest between cycles.
6. **Switch Off:** Once done, turn the control knob to the 'OFF' position. Unplug the appliance from the power outlet.
7. **Remove Jar:** Twist the jar counter-clockwise to unlock and lift it from the motor unit. Carefully remove the lid and pour out the contents.

Usage Guidelines:



Image: Guide illustrating recommended wattage for various grinding tasks (e.g., dips, chutneys, purees, smoothies for less than 750W; dry masala, ginger, coconut, rice & lentils for more than 750W). Also shows typical operating noise levels.

- For regular grinding tasks like dips, chutneys, purees, and smoothies, lower speeds or shorter durations may be sufficient.
- For tough grinding tasks such as dry masala, ginger, coconut, or rice and lentil batters, use higher speeds and ensure the ingredients are properly prepared.
- The appliance operates within 80-90 dB noise levels, which is comparable to a hair dryer.

Maintenance and Cleaning

Regular cleaning and maintenance will prolong the life of your Butterfly Xeno Pro Mixer Grinder.

1. **Unplug:** Always ensure the appliance is unplugged from the power outlet before cleaning.
2. **Clean Jars and Lids:** The Tritan jars and lids are dishwasher safe. Alternatively, wash them with warm soapy water using a soft brush or sponge. Rinse thoroughly and dry immediately to prevent water spots.
3. **Clean Blades:** Handle blades with extreme care due to their sharpness. Clean them under running water, using a brush if necessary to remove food particles.
4. **Clean Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the motor unit in water.
5. **Storage:** Store the mixer grinder and its accessories in a clean, dry place when not in use.

Troubleshooting

If you encounter any issues with your mixer grinder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in. Jar not properly locked onto the motor unit. Overload protection activated.	Ensure the power cord is securely plugged into a working outlet. Twist the jar clockwise until it clicks into the 360° secure lock. Switch off, unplug, remove some ingredients, and wait for 2-3 minutes for the motor to cool before restarting.
Burning smell during initial use.	New motor varnish evaporating.	This is normal for the first few uses. The smell will dissipate over time. Ensure good ventilation.
Motor runs but blades do not rotate.	Ingredients are too thick or jammed. Blade assembly not properly fitted.	Switch off, unplug, and remove some ingredients or add liquid. Ensure the blade assembly is securely tightened in the jar.
Leakage from jar.	Lid not properly secured. Jar overfilled. Gasket not properly seated or damaged.	Ensure the lid is firmly pressed down and sealed. Do not fill ingredients beyond the maximum fill line. Check the gasket for proper seating and any signs of damage. Replace if necessary.

Specifications

Brand	Butterfly
Model Name	Xeno
Model Number	M0981A00000
Wattage	750 Watts
Voltage	230 Volts
Number of Jars	4 (Eastman Tritan)
Material	Acrylonitrile Butadiene Styrene (ABS), Stainless Steel
Product Dimensions (D x W x H)	56D x 22W x 30H Centimeters
Item Weight	5600 Grams
Number of Speeds	3 + Pulse
Controls Type	Knob
Special Features	Adjustable Speed Control, Anti-Skid, Heavy Duty, Overload Protection, Rust Resistant
Dishwasher Safe Jars	Yes

Warranty Information

The Butterfly Xeno Pro 750W Mixer Grinder comes with the following warranty coverage:

- **Product Warranty:** 2 Years from the date of purchase.
- **Motor Warranty:** 5 Years from the date of purchase.

Please refer to the warranty card included with your product for detailed terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.



Image: Product packaging indicating warranty information.

Customer Support

For any assistance, queries, or service requests, please contact Butterfly customer support:

- **Phone:** +91 9362 01 9362 (9 AM - 6 PM, Monday - Saturday)
- **Email:** service@butterflyindia.com
- **WhatsApp:** 24/7 Support available via WhatsApp (refer to QR code for details).
- **Website:** Visit the official service page for more information:www.butterflyindia.com/service

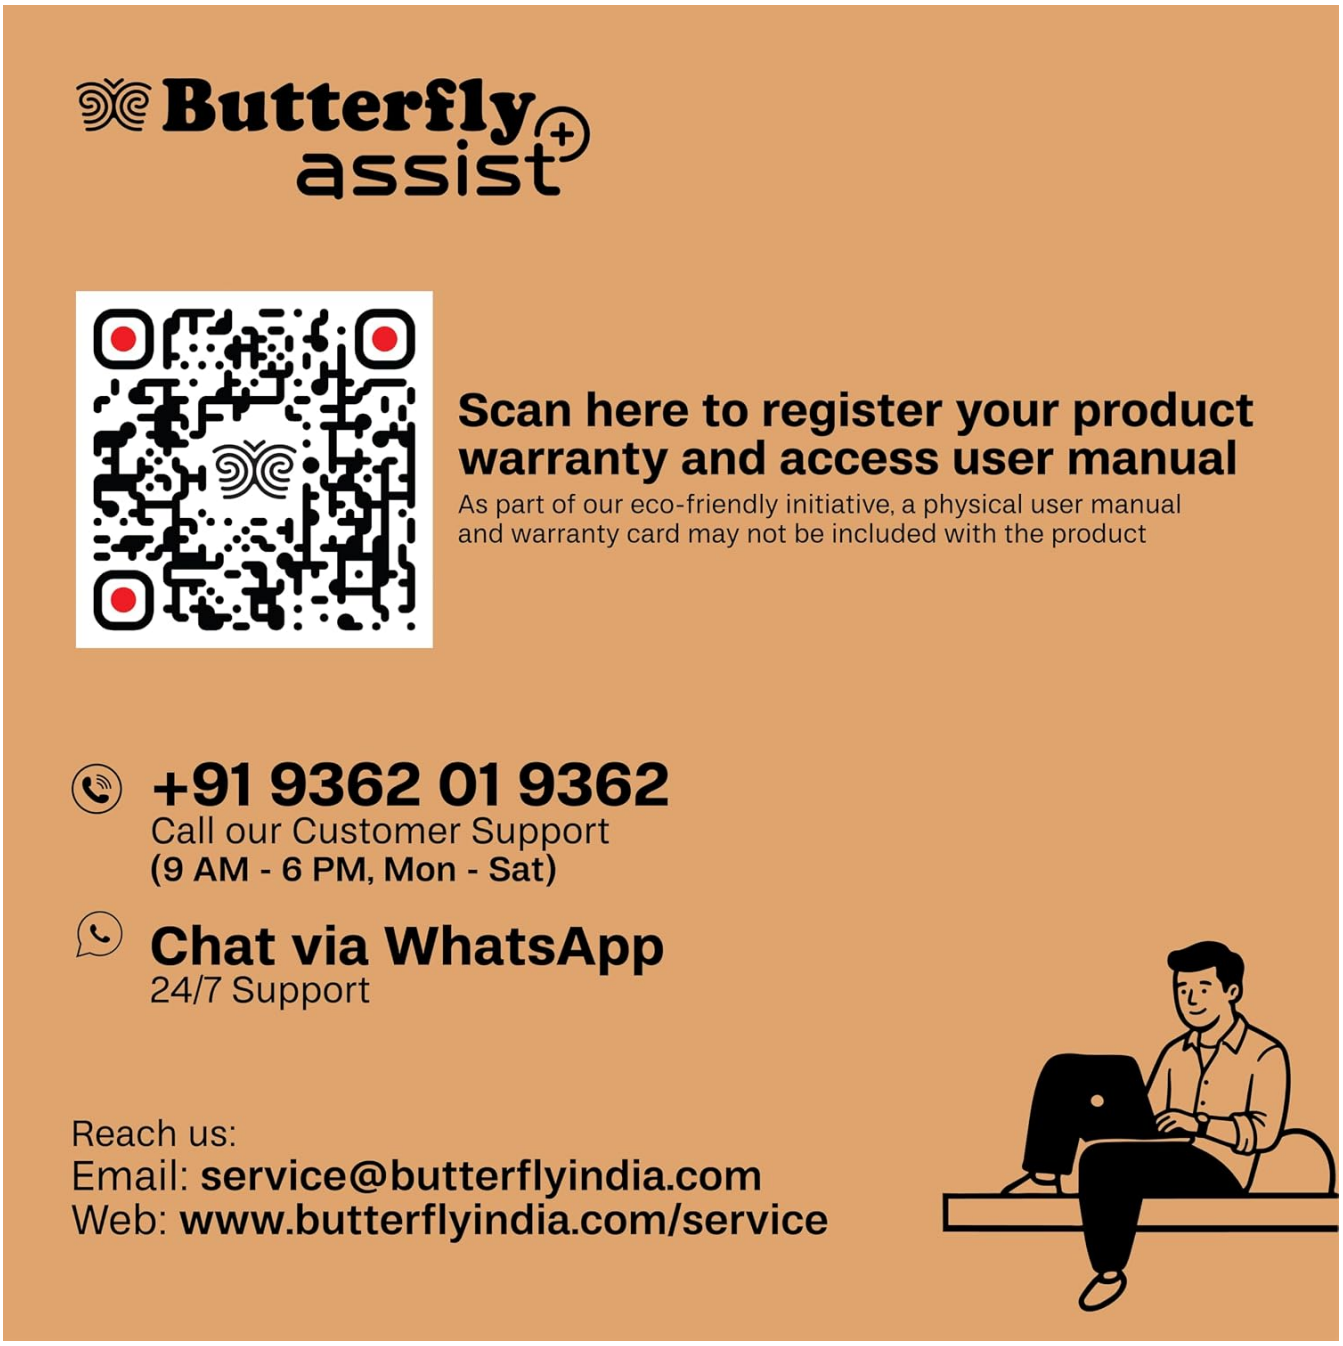

Image: Customer support details including phone number, email, website, and a QR code for product warranty registration and user manual access.

As part of our eco-friendly initiative, a physical user manual and warranty card may not be included with the product. Please use the provided QR code or website for digital access and warranty registration.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F8LK5XLZ

More documents and user manuals: **https://manuals.plus/**