Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LELO SONA 3 Cruise

LELO SONA 3 Cruise Sonic Massager Instruction Manual

Model: SONA 3 Cruise

Introduction

The LELO SONA 3 Cruise is an advanced sonic external massager designed for enhanced pleasure. It incorporates Cruise Control technology to maintain consistent intensity during use and features SmoothRise technology for seamless transitions between its ten pleasure settings. Crafted from super-soft silicone, it offers comfort and is suitable for uninterrupted experiences. For additional functionality, the device can connect to the LELO app, unlocking two exclusive modes and the Love Bridge feature for long-distance connection.



Image: The LELO SONA 3 Cruise device shown alongside its smartphone application interface and elegant product packaging.

What's in the Box

Upon opening your LELO SONA 3 Cruise package, you will find the following items:

- SONA 3 Cruise Sonic Massager
- Instruction Manual
- Moisturizer Sachet (5 ml / 0.17 fl. oz.)
- Warranty Registration Card
- USB Charging Cable
- Satin Storage Pouch

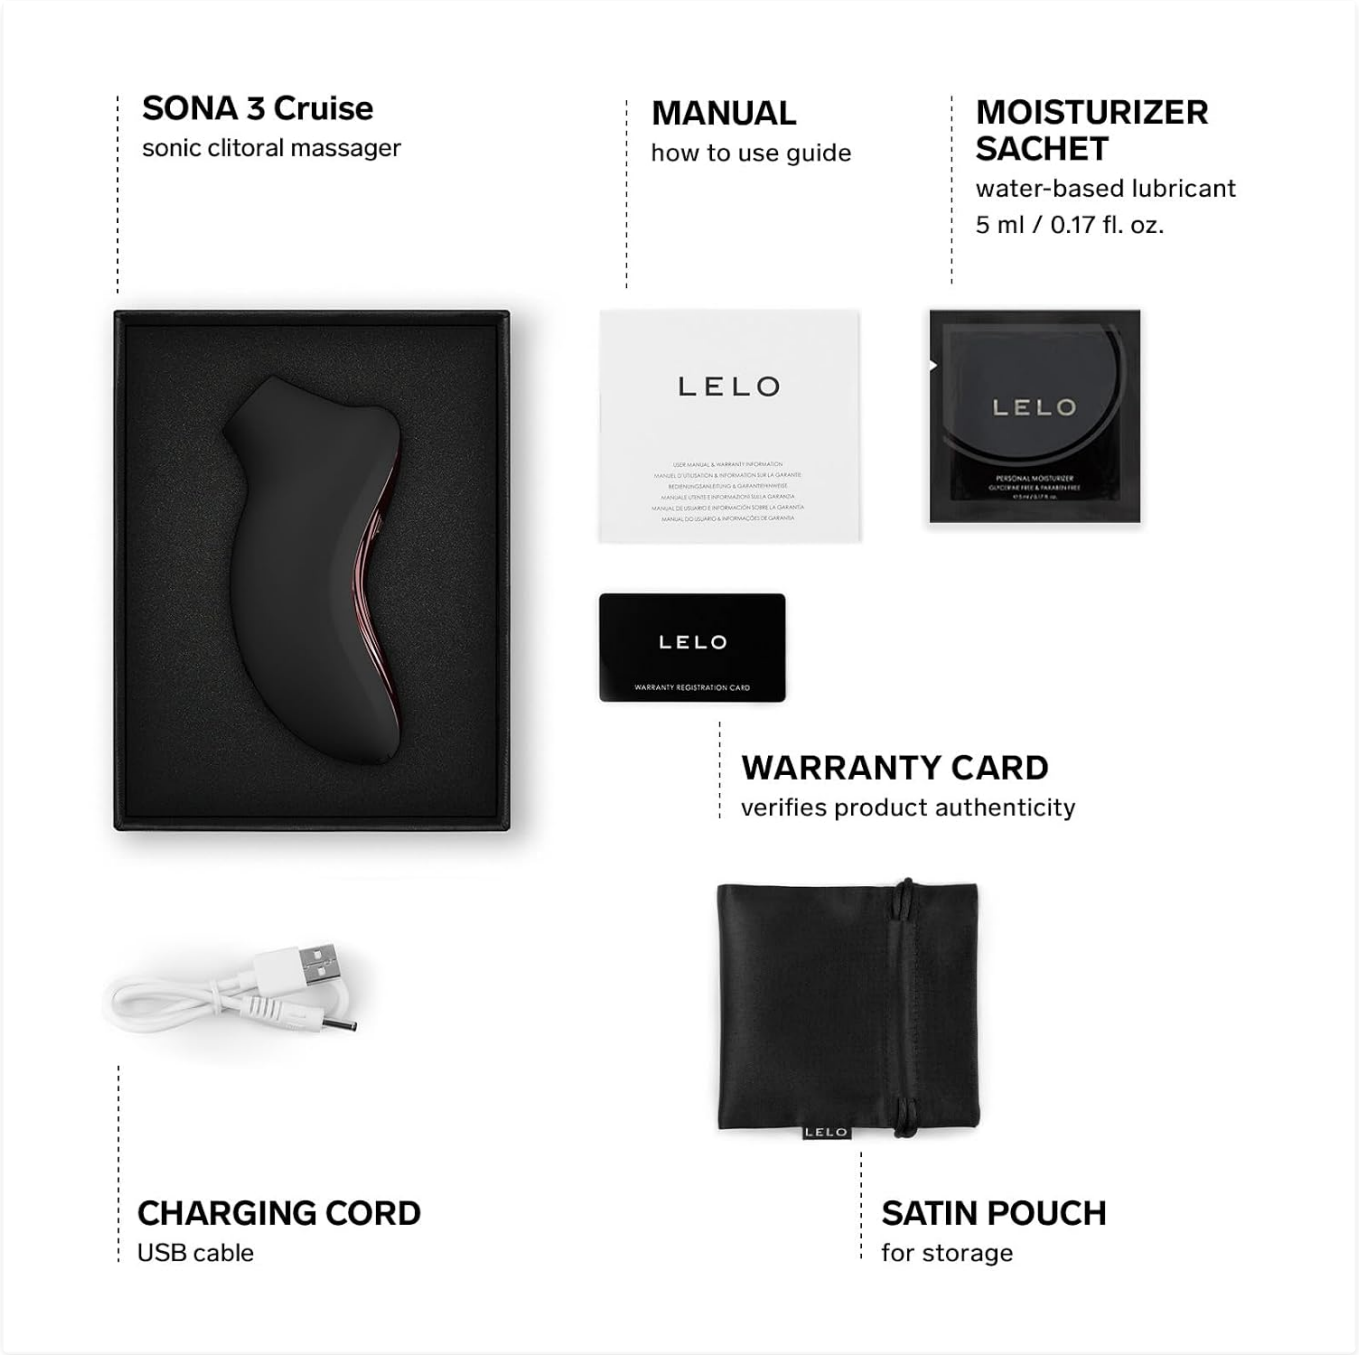


Image: A visual representation of all items included in the LELO SONA 3 Cruise product box, including the device, manual, lubricant, charging cable, warranty card, and storage pouch.

Key Features

The SONA 3 Cruise incorporates several advanced features for an optimized experience:

- **Sensonic & Cruise Control Technology:** Designed for deep and uninterrupted stimulation, automatically adjusting intensity when pressed against the body.
- **SmoothRise Technology:** Ensures smooth transitions between intensity levels without sudden changes.
- **App-Connected:** Connects to the LELO app via Bluetooth to unlock additional modes and features, offering a total of 12 vibration settings.
- **Sculpted for Pleasure:** Made from a single piece of premium silicone, conforming to body contours.
- **100% Waterproof:** Suitable for use in the bath or shower.
- **Extra-Soft Silicone:** Premium silicone material that feels warm to the touch.



Image: An infographic highlighting the key features of the LELO SONA 3 Cruise, including Sensonic & Cruise Control, SmoothRise, app connectivity, 12 settings, sculpted design, waterproof nature, and extra-soft silicone.

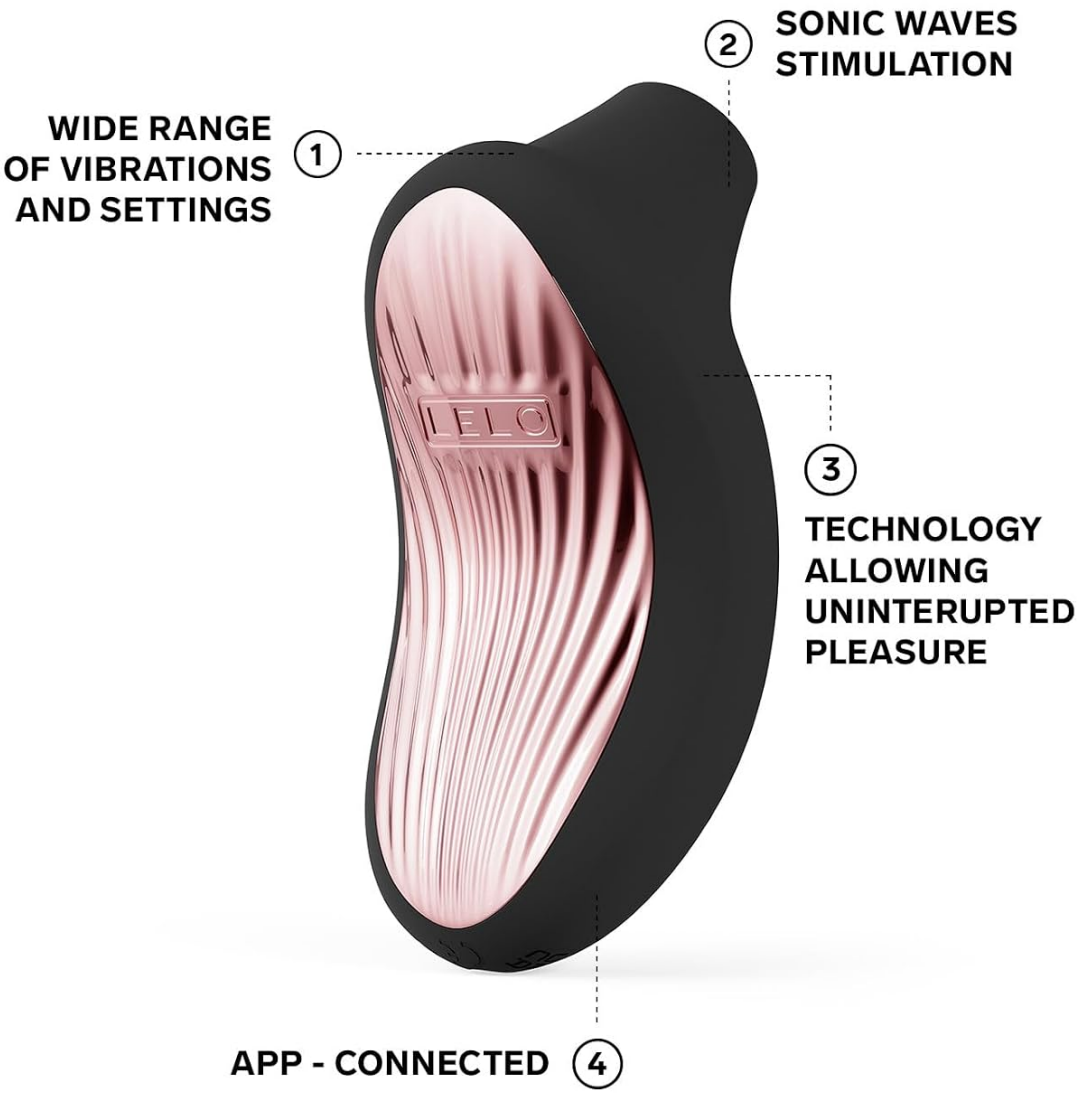


Image: A diagram illustrating the core technologies of the LELO SONA 3 Cruise, pointing out wide range of vibrations, sonic waves stimulation, technology for uninterrupted pleasure, and app connectivity.

Setup

Initial Charging

Before the first use, fully charge your SONA 3 Cruise for 2 hours. Connect the included USB charging cable to the device and a suitable USB power source. The device will indicate when charging is complete.

App Connection

To unlock additional modes and features, download the LELO app from your device's app store. Ensure your SONA 3 Cruise is charged and turned on, then follow the in-app instructions to connect your device via Bluetooth.

Operating Instructions



Image: A visual guide demonstrating the basic operational steps for the LELO SONA 3 Cruise, including power on/off, mode switching, and intensity adjustment.

Power On/Off

- **To Turn On:** Press the '+' button or the central power button.
- **To Turn Off:** Press and hold the central button.

Adjusting Settings

- **To Switch Modes:** Press the central button shortly.
- **To Adjust Intensity:** Press the '+' or '-' button.

Travel Lock

To activate or deactivate the travel lock, hold both the '+' and '-' buttons simultaneously for 3 seconds. This prevents accidental activation during transport.



Image: An overview of useful information for the LELO SONA 3 Cruise, including charging time, use time, travel lock function, standby duration, and waterproof rating.

Maintenance

Cleaning Instructions

To maintain hygiene and prolong the life of your SONA 3 Cruise, clean it thoroughly after each use. Use LELO Premium Cleaning Spray and gently wipe the device. If the cleaning spray is not available, lukewarm water and mild soap can be used. Ensure the device is completely dry before storage.

Troubleshooting

If you encounter any issues with your LELO SONA 3 Cruise, please consider the following:

- **Device Not Turning On:** Ensure the device is fully charged. Refer to the 'Initial Charging' section.
- **App Connectivity Issues:** Verify Bluetooth is enabled on your smartphone and the device is within range. Try

restarting both the device and the app.

- **Inconsistent Intensity:** Ensure the device is clean and free from debris that might interfere with sensors.

For persistent issues or further assistance, please refer to the 'Warranty & Support' section to contact LELO customer service.

Specifications

Brand	LELO
Model	SONA 3 Cruise
Color	Black
Material	Acrylonitrile Butadiene Styrene (ABS), Silicone
Water Resistance Level	Waterproof
Battery Type	1 Nonstandard Battery (included)
Charging Time	2 hours
Use Time	2 hours
Standby Time	90 days
Package Dimensions	7.28 x 6.22 x 2.52 inches
Item Weight	9.59 ounces
Manufacturer	LELO
ASIN	B0F9LMGW3N

Warranty & Support

Warranty Information

The LELO SONA 3 Cruise comes with a 1-year LELO warranty, covering manufacturing defects from the date of purchase. Additionally, LELO provides a 10-year quality guarantee, ensuring the product's long-term performance and durability.

Customer Support

For any questions, technical support, or warranty claims, please contact LELO customer service. You can find contact information on the official LELO website or through the warranty registration card included in your product package.

© 2025 LELO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F9LMGW3N

More documents and user manuals: **https://manuals.plus/**