Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun 52-B1000s

Braun Series 5 Electric Shaver 52-B1000s User Manual

Model: 52-B1000s

Introduction

This manual provides essential instructions for the safe and effective use, maintenance, and care of your Braun Series 5 Electric Shaver, model 52-B1000s. Please read all instructions carefully before using the appliance.



Image: Front view of the Braun Series 5 Electric Shaver.

Important Safety Information

This device is suitable for cleaning under running water and for use in the bath or shower. For safety, it operates wirelessly when used with water. Always disconnect the shaver from the mains power before using it with water. Keep the power supply, charging station, and cleaning station dry.

Your shaver is equipped with a charging cable featuring an integrated power supply for safety low voltage. Do not attempt to replace or alter any parts, as this poses a risk of electric shock. Use only the included Braun type 492 power supply.

Do not use the device if it or any accessory is damaged. The device must not be disassembled or opened. The rechargeable battery should only be replaced by an authorized Braun customer service center.

This appliance can be used by children aged 8 years and above, and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they have been given supervision or instruction concerning safe use and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance should not be performed by children without supervision.

Package Contents

Verify that all items are present in the package:

- 1 x Braun Series 5 Electric Shaver
- 1 x Travel Case
- 1 x Charger (Braun type 492 power supply)
- 1 x Cleaning Brush



Image: Contents of the Braun Series 5 package, including the shaver, charger, and cleaning brush.

Setup

Initial Charging

1. Ensure the shaver is switched off.
2. Connect the charger to the shaver's charging port.
3. Plug the charger into an electrical outlet.
4. Allow the shaver to charge fully before first use. A full charge provides up to 50 minutes of cordless shaving. A 5-minute quick charge is sufficient for one shave.

The battery indicator lights on the shaver will show the charging status.

Operating Instructions

Shaving

1. Press the power button to turn on the shaver.
2. For optimal results, hold the shaver at a right angle (90°) to your skin and stretch your skin with your free hand.
3. Shave against the direction of hair growth.



Image: A man demonstrating the use of the Braun Series 5 shaver on his face.

Wet & Dry Use

The Braun Series 5 shaver is 100% waterproof and can be used for both dry shaving and wet shaving with foam or gel, or even in the shower. Always ensure the shaver is disconnected from the power supply before wet use.

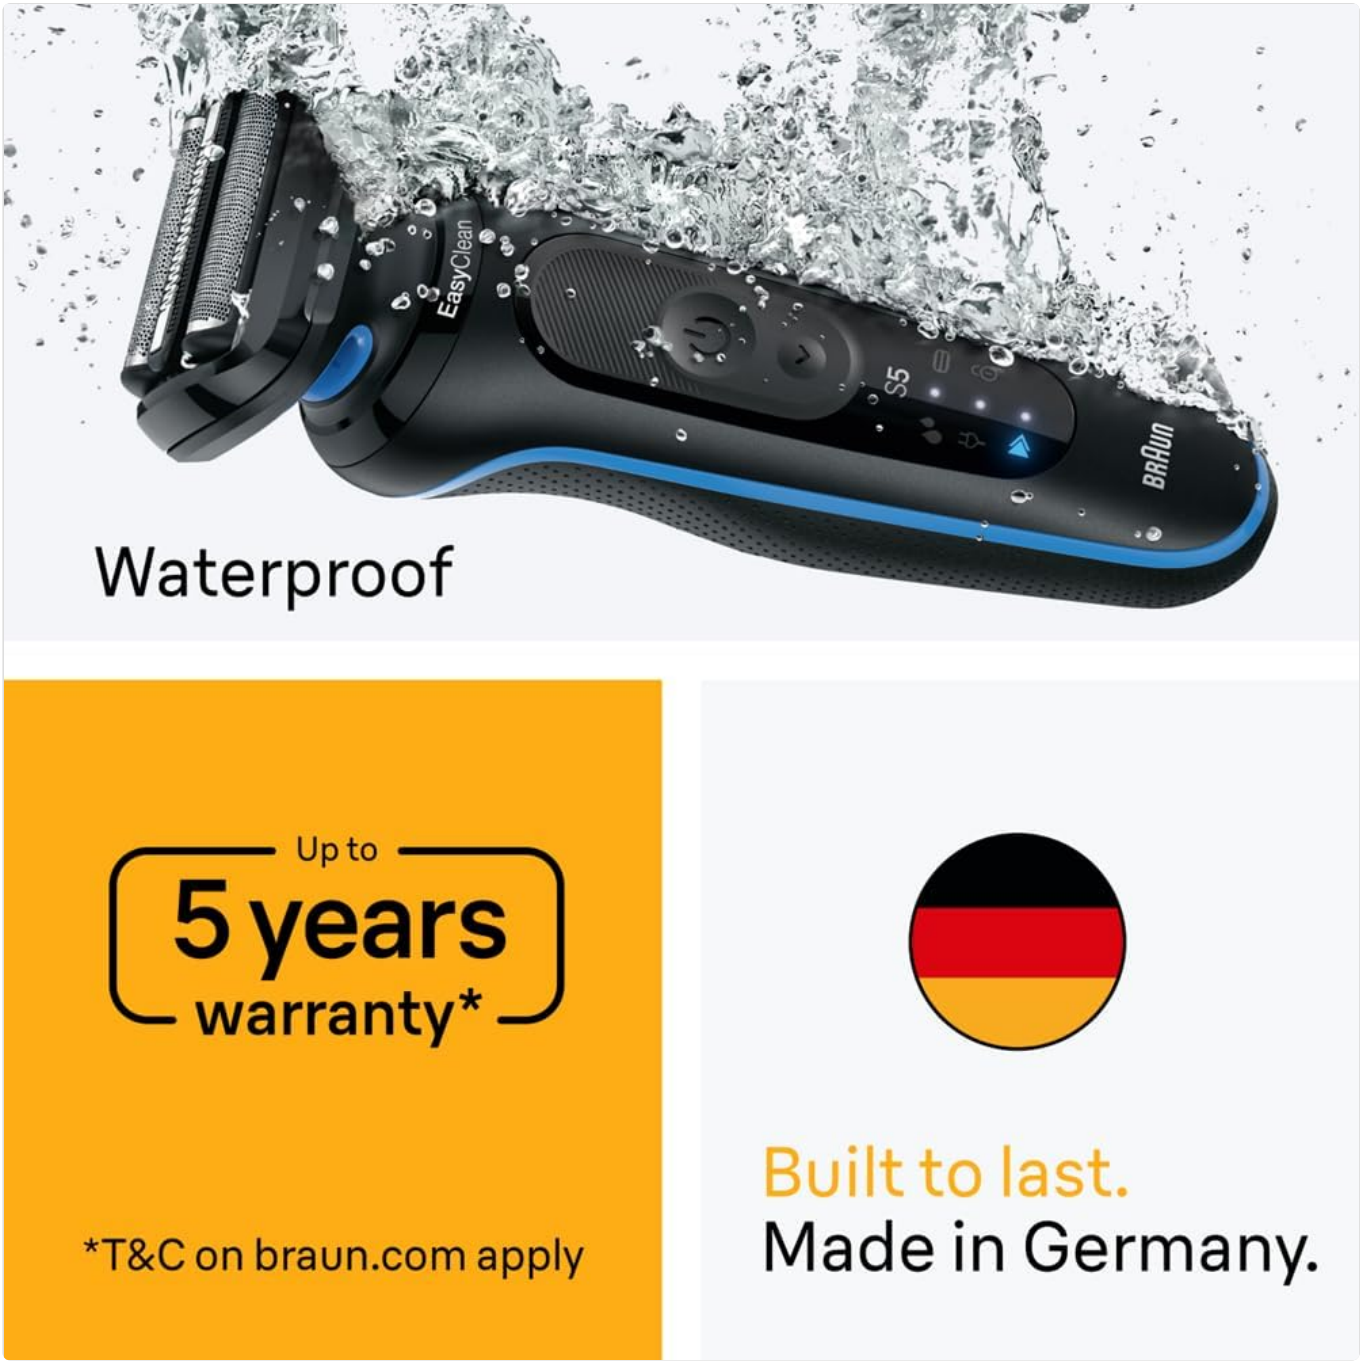

Image: The Braun Series 5 shaver being rinsed under running water, highlighting its waterproof design.

Shaving Modes

The shaver features two shaving modes:

- **Standard Mode:** Provides an optimal balance between speed and gentleness for everyday shaving.
- **Turbo Mode:** For an extra fast shave, ideal for denser hair or when time is limited. Activate by pressing the mode selection button.



Image: A close-up of the shaver's control panel, indicating the Turbo Mode setting.

Maintenance

Cleaning the Shaver Head

Regular cleaning ensures optimal performance and hygiene.

1. **Quick Cleaning (after each shave):**
    - Turn off the shaver.
    - Remove the shaver head.
    - Tap out any loose hair clippings.
    - Rinse the shaver head and the shaver's cutting elements under warm running water until clean.
    - Allow to air dry.
2. **Deep Cleaning (weekly or as needed):**

- Turn off the shaver.
- Remove the shaver head.
- Use the provided cleaning brush to remove stubborn hair particles from the cutting elements.*Do not use the brush on the foil itself, as this can damage it.*
- Rinse thoroughly under warm running water.
- Allow to air dry completely before reattaching the shaver head.

The shaver features an "EasyClean" system, allowing for quick cleaning without removing the shaver head. Simply rinse the shaver head under running water while the shaver is running.

Troubleshooting

- **Shaver not turning on:**
  - Ensure the battery is charged. Connect the shaver to the charger and allow it to charge for at least 5 minutes.
  - Check if the power button is fully pressed.
- **Reduced shaving performance:**
  - Clean the shaver head thoroughly as described in the Maintenance section.
  - The shaver head (foil and cutter block) may need replacement. Braun recommends replacing the shaver head every 18 months for optimal performance.
- **Shaver not charging:**
  - Ensure the charger is properly connected to both the shaver and the electrical outlet.
  - Verify that the electrical outlet is functional.
  - Check the charger and cable for any visible damage. Only use the original Braun charger.

Specifications

Model Name	Series 5
Model Number	52-B1000s (8700216646130)
Power Source	Battery Powered (Li-ion)
Battery Life	Up to 50 minutes
Quick Charge	5 minutes for one shave
Waterproof	Yes, 100% for wet & dry use
Blades	3 Flexible Blades (SkinFlex Technology)
Shaving Modes	Standard, Turbo
Country of Origin	Germany
Item Weight	0.3 Kilograms

Warranty and Support

The Braun Series 5 Electric Shaver comes with a manufacturer's warranty. Specific warranty terms and conditions may apply and can be found on the official Braun website (braun.com).
For technical support, service, or to inquire about replacement parts, please contact Braun customer service. Refer to the contact information provided in your product packaging or on the official Braun website.

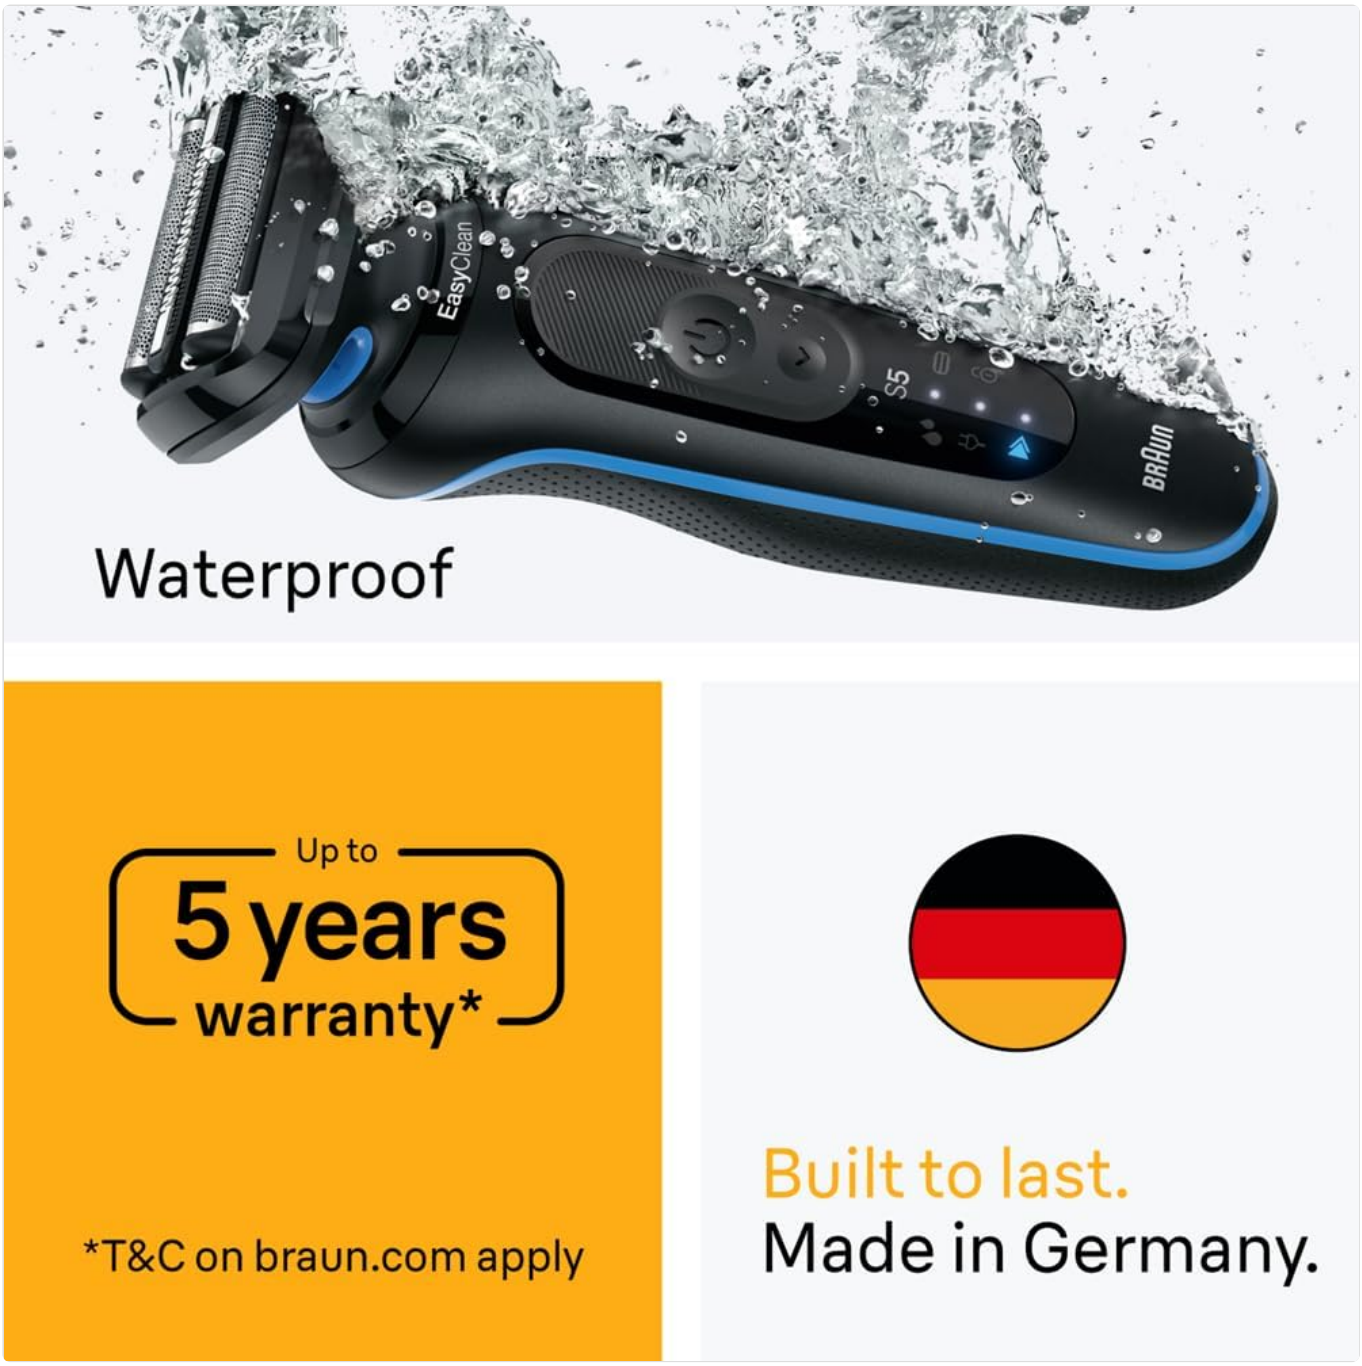

Image: The shaver highlighting its "Up to 5 years warranty" and "Made in Germany" features.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F9X5N5JV

More documents and user manuals: **https://manuals.plus/**