Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JOYROOM JR-PR1

JOYROOM Retractable Power Bank JR-PR1 User Manual

Brand: JOYROOM | Model: JR-PR1

1. Introduction

Thank you for choosing the JOYROOM Retractable Power Bank JR-PR1. This portable charger is designed to provide convenient and efficient power on the go for a wide range of electronic devices. Featuring a built-in retractable USB-C cable, 10000mAh capacity, and 22.5W fast charging capabilities, it aims to simplify your charging experience.

2. Key Features

- **Integrated Retractable USB-C Cable:** A 70cm (27.5-inch) Type-C cable with 7-position locking for adjustable length and hands-free charging. Features magnetic auto-rewind for easy storage.
- **Ultra-Compact Design:** Approximately 35% smaller and 20% lighter than comparable capacity chargers, making it highly portable.
- **Dual-Duty Fast Charging:** The built-in Type-C cable supports 22.5W fast charging output and 22.5W fast input for recharging the power bank itself.
- **Additional Ports:** Includes a dedicated extra Type-C port (22.5W output / 18W input) and a USB-A port (22.5W output) for versatile charging options.
- **10000mAh High Capacity:** Provides sufficient power to charge most smartphones multiple times.
- **Smart Digital Display:** Clear LED screen shows exact remaining battery percentage and charging status (input/output/fast charge indicator).
- **Universal Compatibility:** Supports Power Delivery (PD) for iPhone 15+ fast charging, Huawei SCP/FCP, QC3.0, Samsung AFC, and other Android protocols.



Figure 2.1: The JOYROOM power bank features a 70cm retractable USB-C cable for convenient, tangle-free charging.



Figure 2.2: The compact size of the power bank is demonstrated next to a credit card and smartphone, highlighting its portability.

Video 2.1: Official product video showcasing the JOYROOM Retractable Power Bank's design and retractable cable functionality.

3. Setup

3.1 Charging the Power Bank

1. **Using Built-in AC Prongs:** Flip out the integrated AC prongs located on the side of the power bank and plug it directly into a wall outlet. The digital display will show 'IN' and the battery percentage will flash, indicating it is charging.
2. **Using Type-C Input:** Alternatively, connect a USB-C cable to the 'IN/OUT Type-C' port on the side of the power bank and plug the other end into a compatible power adapter. The digital display will indicate charging status.

The LED digital display will show the current battery percentage. A green lightning icon indicates fast charging is active.



Figure 3.1: The main unit of the JOYROOM Retractable Power Bank, showing its digital display and compact form factor.

4. Operating Instructions

4.1 Charging Your Devices

1. **Using the Retractable USB-C Cable:** Gently pull the built-in USB-C cable from its housing until it reaches the desired length. The cable features a 7-position locking mechanism. Connect the USB-C end to your compatible device. The power bank's digital display will show 'OUT' and the battery percentage, along with a green lightning icon if fast charging.
2. **Using Additional Ports:** For devices requiring other connections, use your own compatible cable and plug it into the

dedicated 'IN/OUT Type-C' port or the 'OUT USB-A' port on the side of the power bank.

3. **To Retract the Cable:** Gently pull the cable slightly further, and it will automatically retract back into the power bank.

4.2 Low Current Mode

For charging low-power devices such as smartwatches, earbuds, or fitness trackers, activate the Low Current Mode to prevent overcharging or damage.

1. Connect your low-power device to the power bank.
2. Press and hold the power button on the side for 3 seconds.
3. Upon successful activation, the digit segments of the battery level display will scroll like a marquee.
4. This mode will automatically deactivate after 2 hours or can be manually disabled by pressing and holding the power button for 3 seconds.

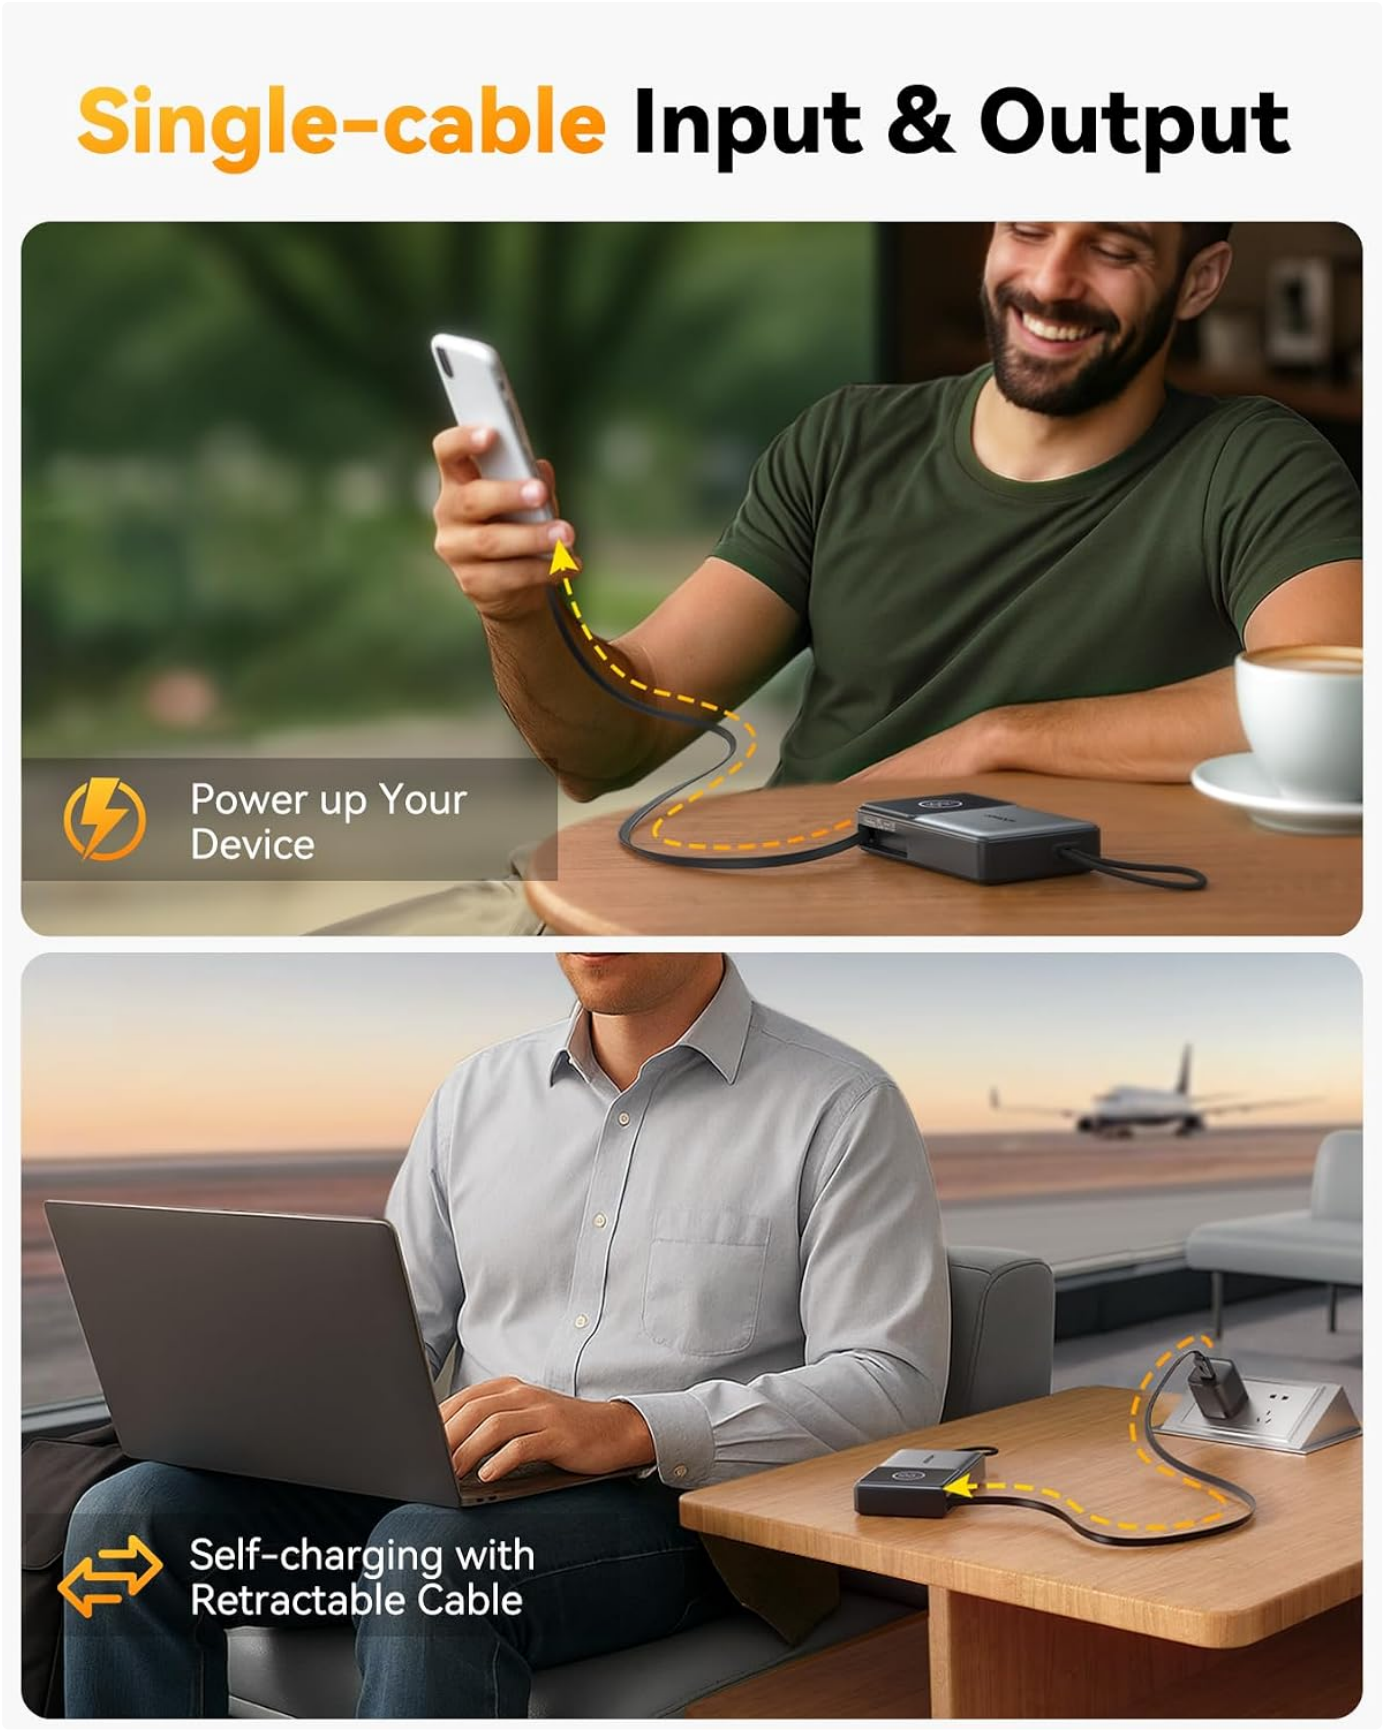

Figure 4.1: A smartphone being charged by the JOYROOM power bank using the built-in retractable cable.



Figure 4.2: Close-up view of the power bank's side, indicating the 'IN/OUT Type-C' and 'OUT USB-A' ports.

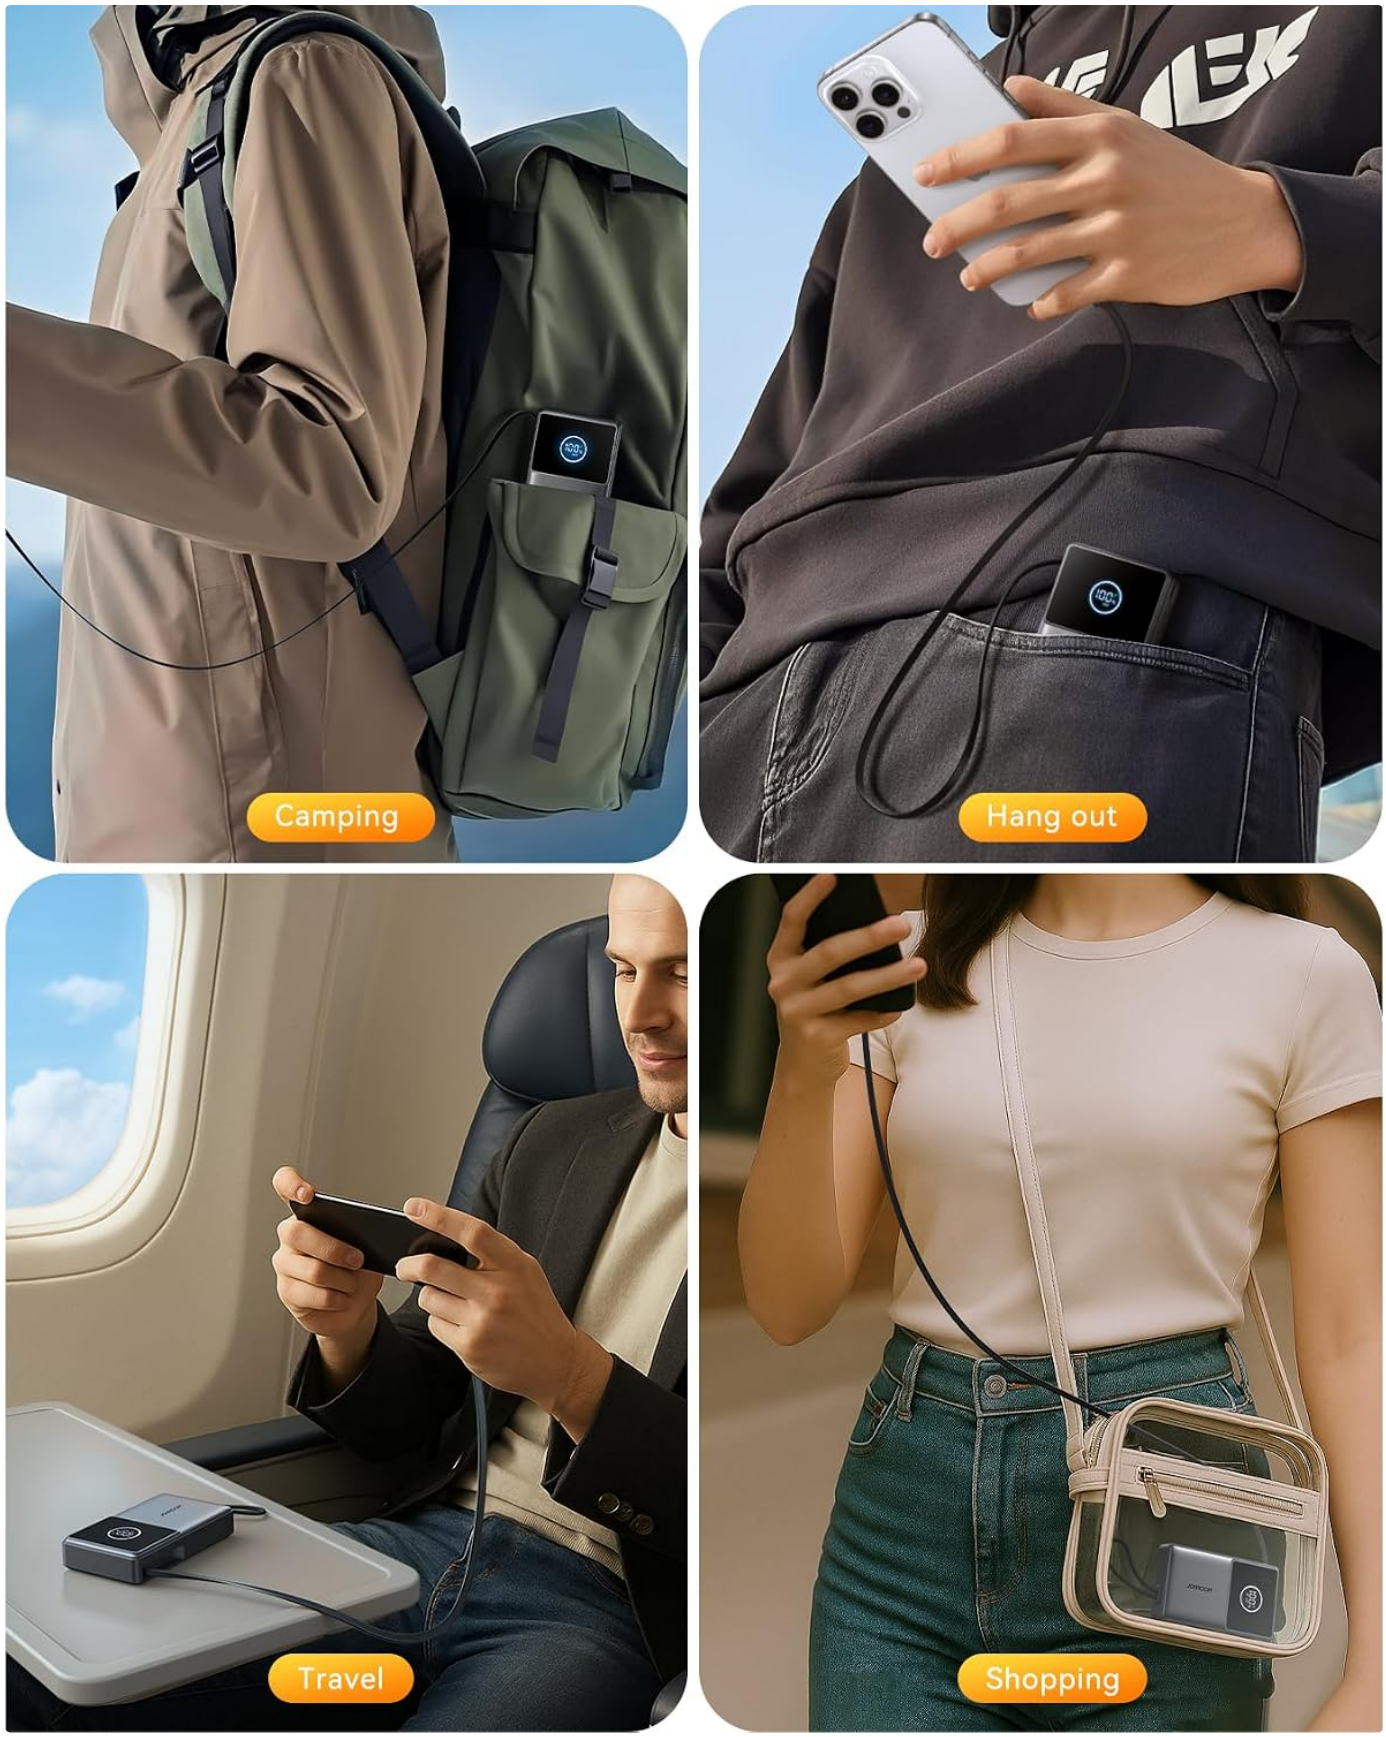

Figure 4.3: The LED digital display indicating battery percentage and charging status.

5. Specifications

Feature	Detail

Product Dimensions	3.94 x 2.28 x 0.98 inches
Item Weight	9.9 ounces
Battery Capacity	10000 Milliamp Hours
Item Model Number	JR-PR1
Special Features	Built-in Cable, Fast Charging, LED Indicator Lights, Pocket Size
Connector Type	USB Type C
Manufacturer	JOYROOM

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the power bank. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the power bank at least once every three months if not in regular use.

7. Troubleshooting

- **Device not charging:** Ensure the power bank is sufficiently charged. Check all cable connections to both the power bank and your device. Try a different cable or port.
- **Slow charging:** Verify that your device and the cable used support fast charging protocols. Ensure the power bank is not in Low Current Mode unless intended.
- **Digital display not working:** Press the power button on the side to activate the display. If it remains off, the power bank may be fully discharged or require service.

8. Warranty and Support

The JOYROOM Retractable Power Bank JR-PR1 comes with a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please visit the official JOYROOM website or contact their customer service department. Please retain your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F9XVN6B6

More documents and user manuals: **https://manuals.plus/**