Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sweetcrispy UBL-SD10FT-NVBU

Sweetcrispy 9.2ft 3-Tier Solar LED Patio Umbrella Instruction Manual

Model: UBL-SD10FT-NVBU | Brand: Sweetcrispy

Contents Setup Operation Safety Information Maintenance Troubleshooting Package Specifications Warranty & Support

1. Safety Information

Please read all instructions carefully before assembling and using your Sweetcrispy 9.2ft 3-Tier Solar LED Patio Umbrella. Retain this manual for future reference.

- **Secure Base:** Always use the umbrella with a stable and sufficiently weighted umbrella base. A recommended base weight of at least 100 lbs (45 kg) is advised to prevent tipping, especially in windy conditions.
- **Wind Conditions:** Do not use the umbrella in strong winds or severe weather. Close and secure the umbrella when not in use or during adverse weather to prevent damage or injury.
- **Clearance:** Ensure adequate clearance around the umbrella when opening, closing, or tilting to avoid obstructions or collisions.
- **Solar Panel:** The solar panel requires direct sunlight to charge the LED lights. Ensure it is not obstructed.
- **Children and Pets:** Keep children and pets away from the umbrella during operation to prevent accidents.
- **Assembly:** Follow all assembly steps precisely. Incorrect assembly can lead to instability and potential hazards.
- **Storage:** Store the umbrella in a dry, protected area during off-season or prolonged periods of non-use.

2. Package Contents

Verify that all components are present and undamaged before beginning assembly.

- 1 x Umbrella Canopy with Solar Panel and LED Lights
- 1 x Umbrella Pole (Upper Section)
- 1 x Umbrella Pole (Lower Section)
- 4 x Stakes (for securing the base, if applicable)

Note: Umbrella base is not included and must be purchased separately. A base weighing at least 100 lbs is recommended.

3. Setup Instructions

Follow these steps to assemble your Sweetcrispy Patio Umbrella.

3.1. Solar Panel Connection

1. Locate the solar panel at the top of the umbrella canopy. Carefully remove any protective film.
2. Access the battery connector inside the umbrella canopy near the solar panel. Connect the solar panel's wire to the battery connector.
3. Rotate the solar panel to securely attach it to the umbrella canopy.



Image: The 3-tier vented top with solar panel and LED lights. The solar panel charges the 32 LEDs during the day.

3.2. Pole Assembly

4. Firmly insert the upper umbrella pole (with the canopy attached) into the lower pole section until it clicks into place. Ensure the connection is secure.
5. Place the assembled umbrella pole into a suitable umbrella base (not included). Ensure the base is heavy enough

to support the umbrella (recommended ≥ 100 lbs).

▶ **Watch video online**

3-Tier Solar Patio Outdoor Umbrella Install Video

Video: This video demonstrates the assembly process for the 3-Tier Solar Patio Outdoor Umbrella, including connecting the solar panel and assembling the pole sections.

4. Operating Instructions

4.1. Opening the Umbrella

Slowly turn the crank handle clockwise to open the umbrella canopy. Continue turning until the canopy is fully extended and taut.

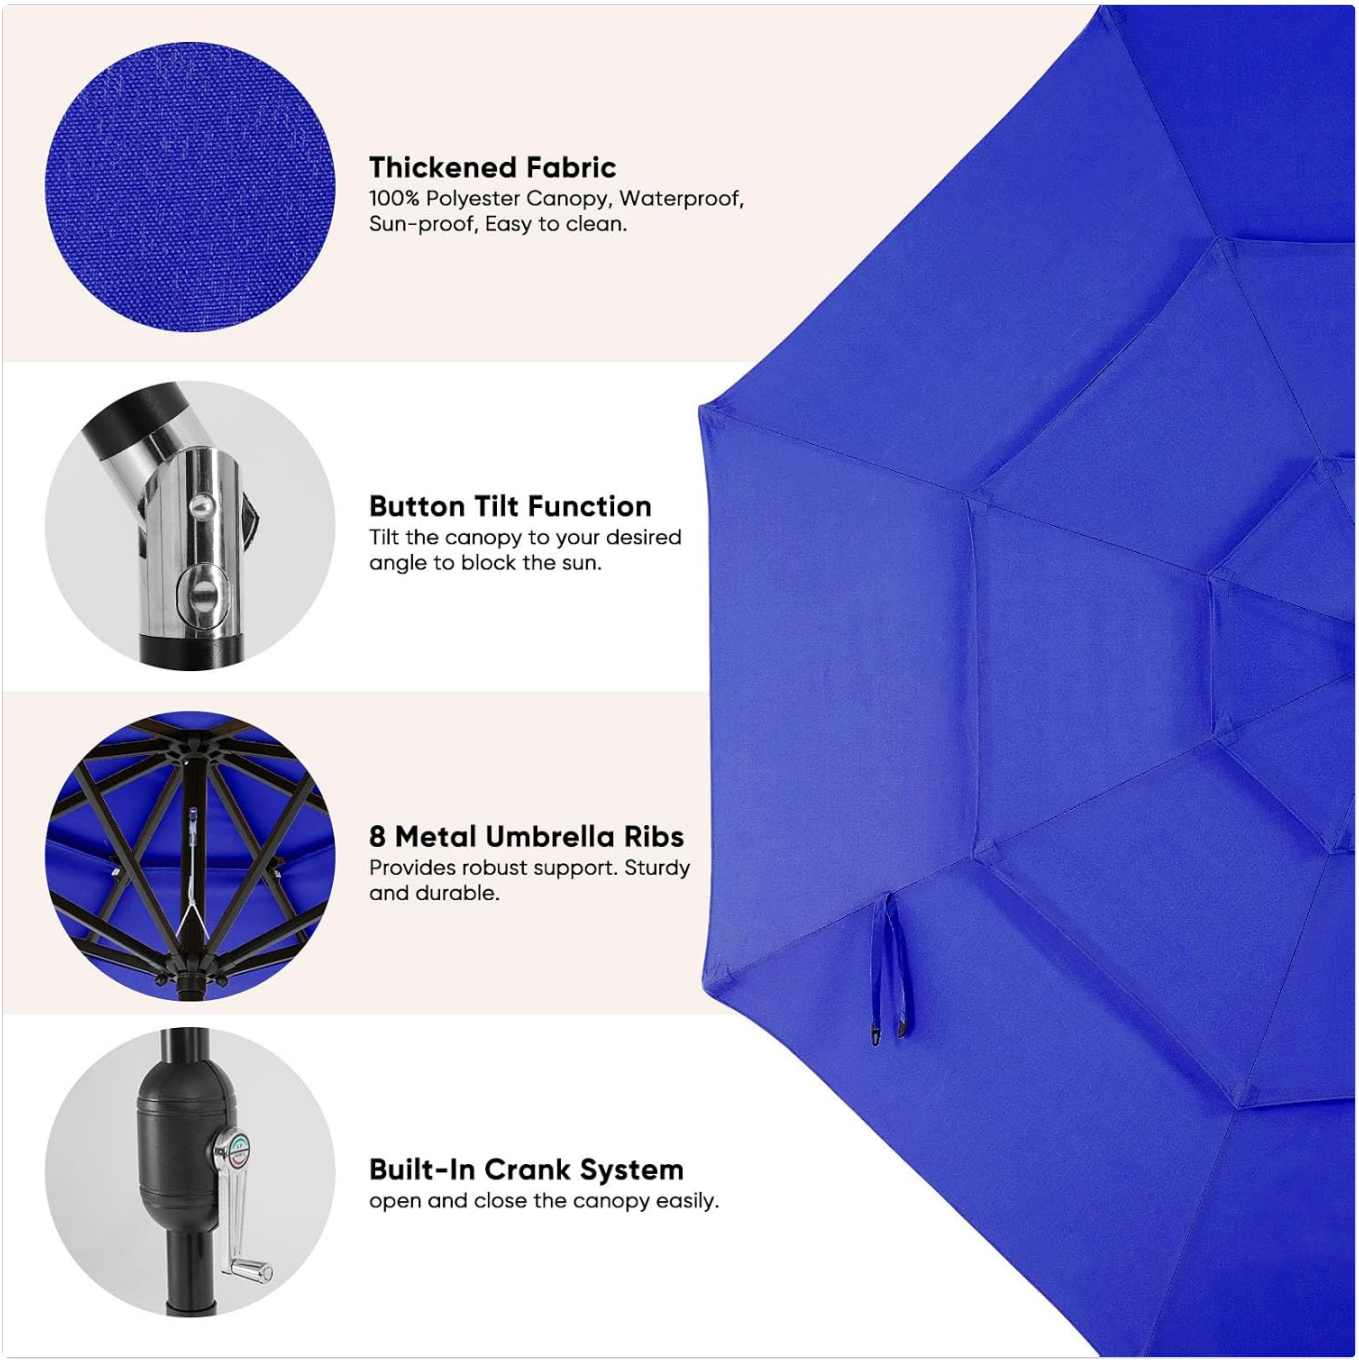


Image: Detail of the built-in crank system for effortless opening and closing, and the 8 metal umbrella ribs for robust support.

4.2. Using the LED Lights

Once the umbrella is open, locate the power switch for the LED lights on one of the umbrella ribs. Press the switch to turn the 32 LED lights on or off. The solar panel will charge the lights during the day for evening use.

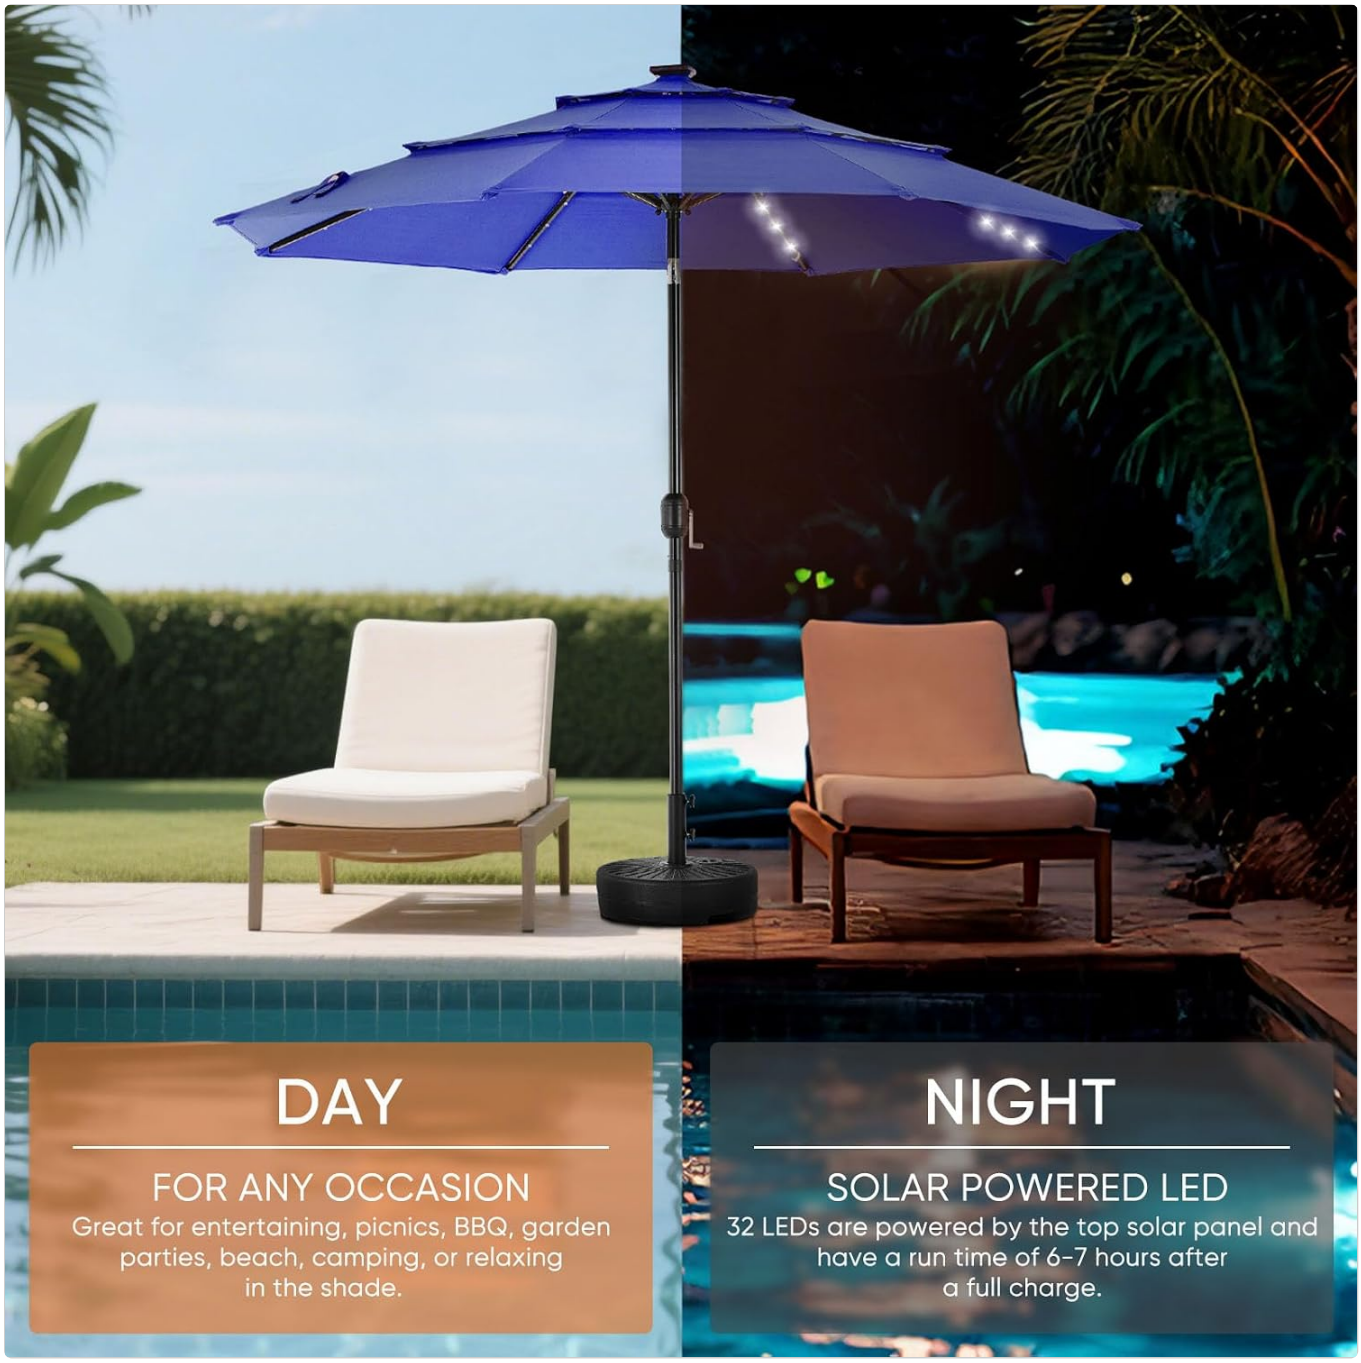


Image: The umbrella providing shade during the day and ambient lighting at night with its solar-powered LED lights.

4.3. Tilting the Umbrella

To adjust the tilt angle of the umbrella canopy, locate the push-button tilt mechanism on the pole. Press the button and gently push the canopy to your desired angle to block the sun. Release the button to lock the tilt in place. To return to the upright position, press the button again and push the pole upwards.



Image: The umbrella tilted at an angle to provide optimal sun protection, showcasing its tilt adjustment feature.

4.4. Closing the Umbrella

Slowly turn the crank handle counter-clockwise to close the umbrella canopy. Once fully closed, gather the canopy fabric and secure it with the attached umbrella straps to prevent it from unfurling.

▶ **Watch video online**
Sweetcrispy 3-Tier Solar LED Lighted Patio Outdoor Umbrella

Video: This video demonstrates the operation of the Sweetcrispy 3-Tier Solar LED Lighted Patio Outdoor Umbrella, including opening, closing, and using the tilt function.

5. Maintenance

- **Cleaning:** Wipe the umbrella canopy and frame with a damp cloth to remove dirt and debris. Use mild soap and water for stubborn stains, then rinse thoroughly.
- **Storage:** Store the umbrella in a dry, protected area when not in use, especially during bad weather or off-

season. Ensure the canopy is clean and dry before storage to prevent mold or mildew.

- **Inspection:** Periodically inspect all components, including the canopy, ribs, pole, crank mechanism, and solar panel, for any signs of wear or damage. Replace damaged parts immediately.
- **Solar Panel Care:** Keep the solar panel clean and free of dust or obstructions to ensure efficient charging of the LED lights.

6. Troubleshooting

Problem	Possible Cause	Solution
Umbrella does not open/close smoothly.	Mechanism obstructed or dirty.	Check for any obstructions. Clean the crank mechanism and pole with a damp cloth. Apply a silicone-based lubricant if necessary.
LED lights are not working.	Solar panel not charged, switch off, or faulty connection.	Ensure the solar panel receives direct sunlight for at least 7 hours. Check if the LED light switch is in the "ON" position. Verify the solar panel connection is secure.
Umbrella is unstable or tips over.	Insufficient base weight or strong winds.	Ensure you are using an umbrella base with a minimum weight of 100 lbs. Close the umbrella in windy conditions.
Canopy fabric is dirty or stained.	Exposure to elements.	Wipe with a damp cloth and mild soap. Rinse thoroughly and allow to air dry completely before closing or storing.

7. Specifications



Image: Visual representation of the umbrella's dimensions, indicating a 9.19 ft width and 8.23 ft height.

Feature	Detail
Model Number	UBL-SD10FT-NVBU
Product Dimensions	110.63 x 110.63 x 98.43 inches (9.2ft diameter)
Item Weight	15.63 Pounds
Canopy Material	100% Polyester (UV protection, water-resistant)
Frame Material	Stainless Steel (Powder Coated)
Ribs	8 Iron Ribs
Canopy Type	3-Tier Vented Top
Lighting	32 Solar-Powered LED Lights

Feature	Detail
Opening Mechanism	Crank Lift
Tilt Mechanism	Push Button Auto Tilt
Care Instructions	Wipe With Damp Cloth, Store Away During Bad Weather
Recommended Base Weight	≥ 100 lbs (not included)

8. Warranty and Support

For warranty information or technical support, please contact Sweetcrispy customer service. Keep your purchase receipt and model number (UBL-SD10FT-NVBU) handy for faster service.
Contact information can typically be found on the product packaging or the Sweetcrispy official website.

© 2025 Sweetcrispy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F9XYFFK1

More documents and user manuals: **https://manuals.plus/**