Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TOJASDN TOJASDN-8

TOJASDN 10000 Games in 1 Arcade Game Console User Manual

Model: TOJASDN-8

Introduction

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your TOJASDN 10000 Games in 1 Arcade Game Console. Please read this manual thoroughly before using the product to ensure proper function and longevity.

Safety Information

- Do not expose the console to water or excessive moisture.
- Avoid placing the console in direct sunlight or near heat sources.
- Use only the provided power adapter.
- Keep out of reach of small children due to small parts.
- Disconnect power during lightning storms or when unused for long periods.

Package Contents

Verify that all items listed below are included in your package:

- 1 x TOJASDN Arcade Game Console
- 1 x Power Adapter
- 1 x HDMI Cable (3 meters)
- 1 x VGA Cable (3 meters)
- 2 x Spare Buttons
- 1 x USB Cable
- 1 x USB Converter
- 1 x User's Guide (this manual)



Image: Contents of the TOJASDN Arcade Game Console package. This includes the main console unit, a power adapter, an HDMI cable, a VGA cable, two spare buttons, a USB cable, a USB converter, and the instruction manual.

Setup

1. **Connect to Display:**

   Connect the console to your TV, PC monitor, or projector using either the provided HDMI cable or VGA cable. Ensure the display input is set to the corresponding port.

2. **Power Connection:**

   Plug the power adapter into the console's power input port, then connect the adapter to a power outlet.

3. **Additional Players (Optional):**

   For 3 or 4 players, connect an external USB gamepad via a USB hub to the console's USB port. The console also supports connecting a PS3 controller.

Operating Instructions

Basic Operation

- **Power On/Off:** Press the power button located on the console to turn it on or off.
- **Navigation:** Use the joysticks and buttons to navigate through the game menus.

- **Game Selection:** Select a game from the list and press the appropriate button to start.

Key Features



Image: Overview of the TOJASDN Arcade Game Console's features. This includes functionalities like saving and pausing games, managing game lists (smart, recently played, favorite, classification), searching for games, adding more games via WiFi, recording high scores, supporting 3-4 players online, hiding games, 1920x1080P output, one-key language switching, and customizable buttons.

- **Save/Pause Game:** The system supports saving game progress and pausing games. Refer to on-screen prompts for specific button combinations.
- **Game Lists:** Access various game lists such as "Recently Played," "Favorite List," and "Game Classification" for easy navigation.
- **Search Games:** Use the search function to quickly find specific titles among the pre-installed games.
- **WiFi Function (Add More Games):**

  Connect the console to a WiFi network to access the game market and download additional games. Over 20,000 new games are available online.
- **Multiplayer Gaming:** The console supports two players directly. For 3-4 players, connect additional USB

gamepads via a USB hub.

- **Language Switch:** A one-key function allows switching the system language.
- **Customizable Buttons:** Buttons can be customized to suit individual preferences.

Button Layout and Customization

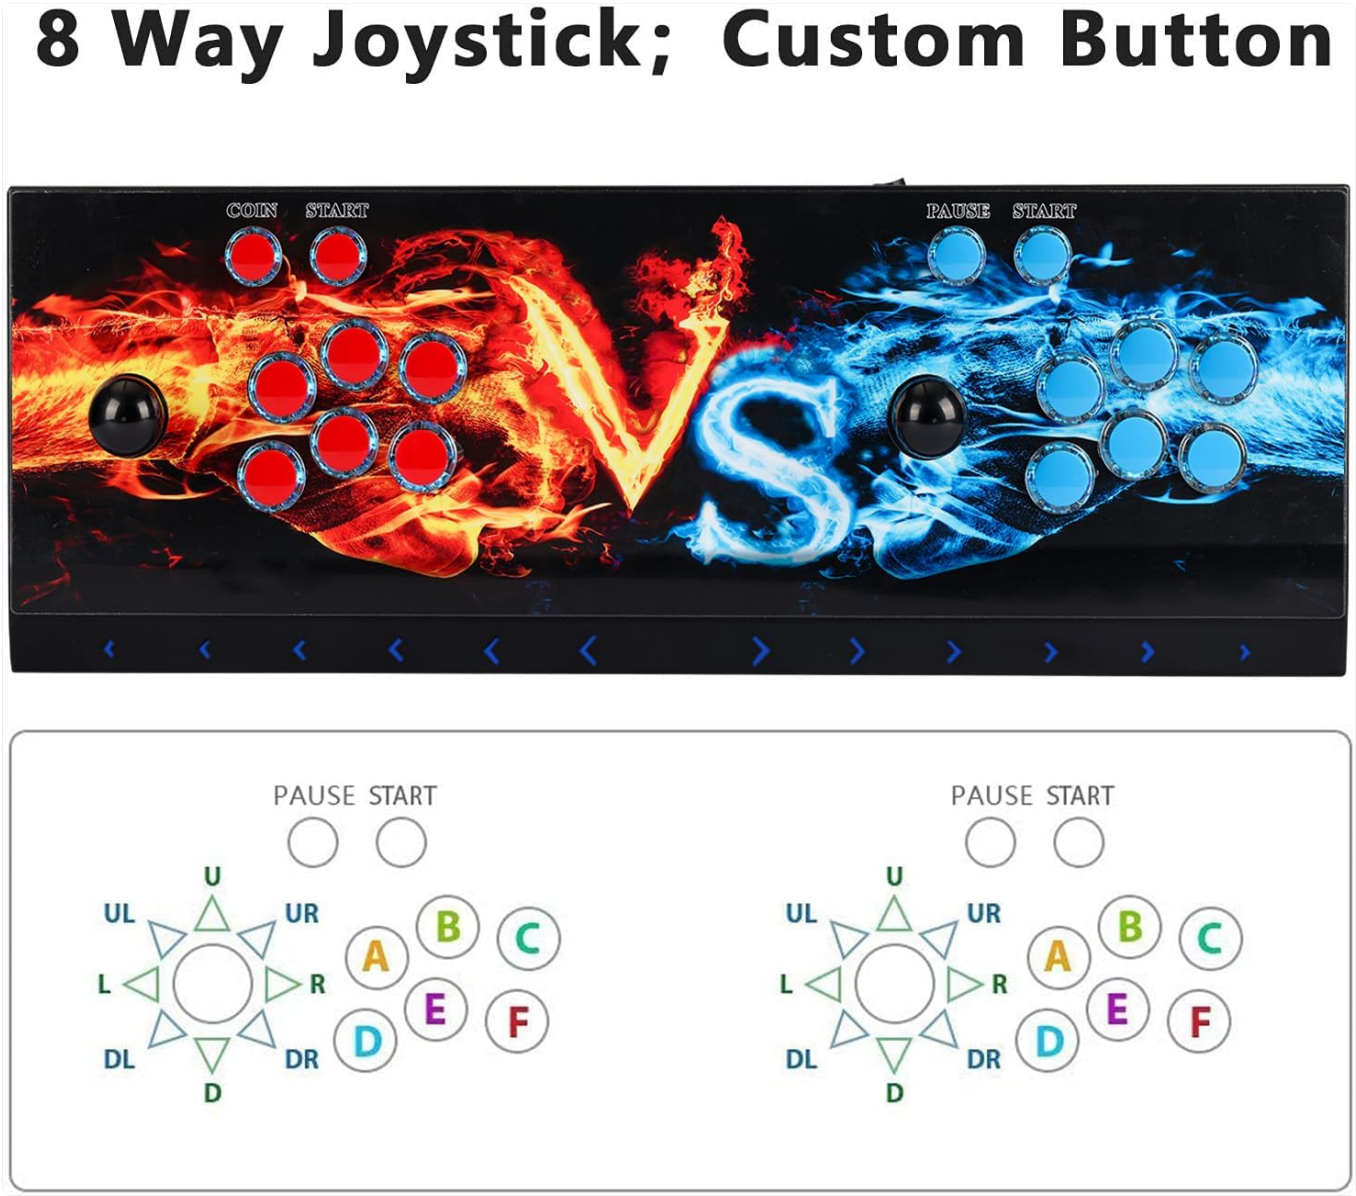


Image: Detailed view of the console's 8-way joysticks and button configuration. It illustrates the standard button layout for two players and provides a diagram for customizing button assignments, showing directional inputs and action buttons.

The console features an 8-way joystick and a standard arcade button layout for each player. To customize button assignments, navigate to the system settings menu and follow the on-screen instructions for button remapping. This allows you to configure the A, B, C, D, E, F buttons and joystick directions (Up, Down, Left, Right, Up-Left, Up-Right, Down-Left, Down-Right) to your preference.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the console's surface. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Management:** Ensure cables are not tangled or bent sharply to prevent damage.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely connected to the console and a working power outlet.
No display on screen	Incorrect video input selected on display or loose HDMI/VGA cable.	Verify the display's input source matches the console's connection. Check HDMI/VGA cable connections.
Cannot connect to WiFi	Incorrect password, weak signal, or router issue.	Double-check WiFi password. Move console closer to router. Restart router.
Controller input not responding	Loose connection or faulty controller.	Ensure USB gamepads are securely connected. Test with another controller if available.

Specifications

- **Model:** TOJASDN-8
- **Platform:** TV Plug & Play
- **Dimensions (L x W x H):** 24.8" x 8.2" x 2.1" (62.99 cm x 20.83 cm x 5.33 cm)
- **Material:** Metal
- **Video Output:** Full HD 1280*720 (HDMI, VGA)
- **Connectivity:** WiFi, USB
- **Multiplayer Support:** 2 players directly, up to 4 players with external USB gamepads.
- **Pre-installed Games:** 10000+
- **Online Games:** 20000+ available for download via WiFi.



Image: Front view of the TOJASDN Arcade Game Console with key dimensions indicated. The console measures approximately 25.1 inches in length, 8.6 inches in width, and 2.2 inches in height.

Support

For any questions, suggestions, or technical assistance, please contact the seller, DSL.Store, directly through the platform where you purchased the product. They aim to respond within 24 hours.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FBLFD3QY

More documents and user manuals: **https://manuals.plus/**