Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HIROHRTV safe box

User Manual: HIROHRTV Large Double-door Digital Security Safe

Model: safe box | UPC: 726727530643

1. Introduction

Thank you for choosing the HIROHRTV Large Double-door Digital Security Safe. This safe is designed to provide advanced protection for your valuables with cutting-edge security features, including a digital keypad, hidden code function, and robust steel construction. This manual will guide you through the setup, operation, and maintenance of your new safe, ensuring optimal performance and security.

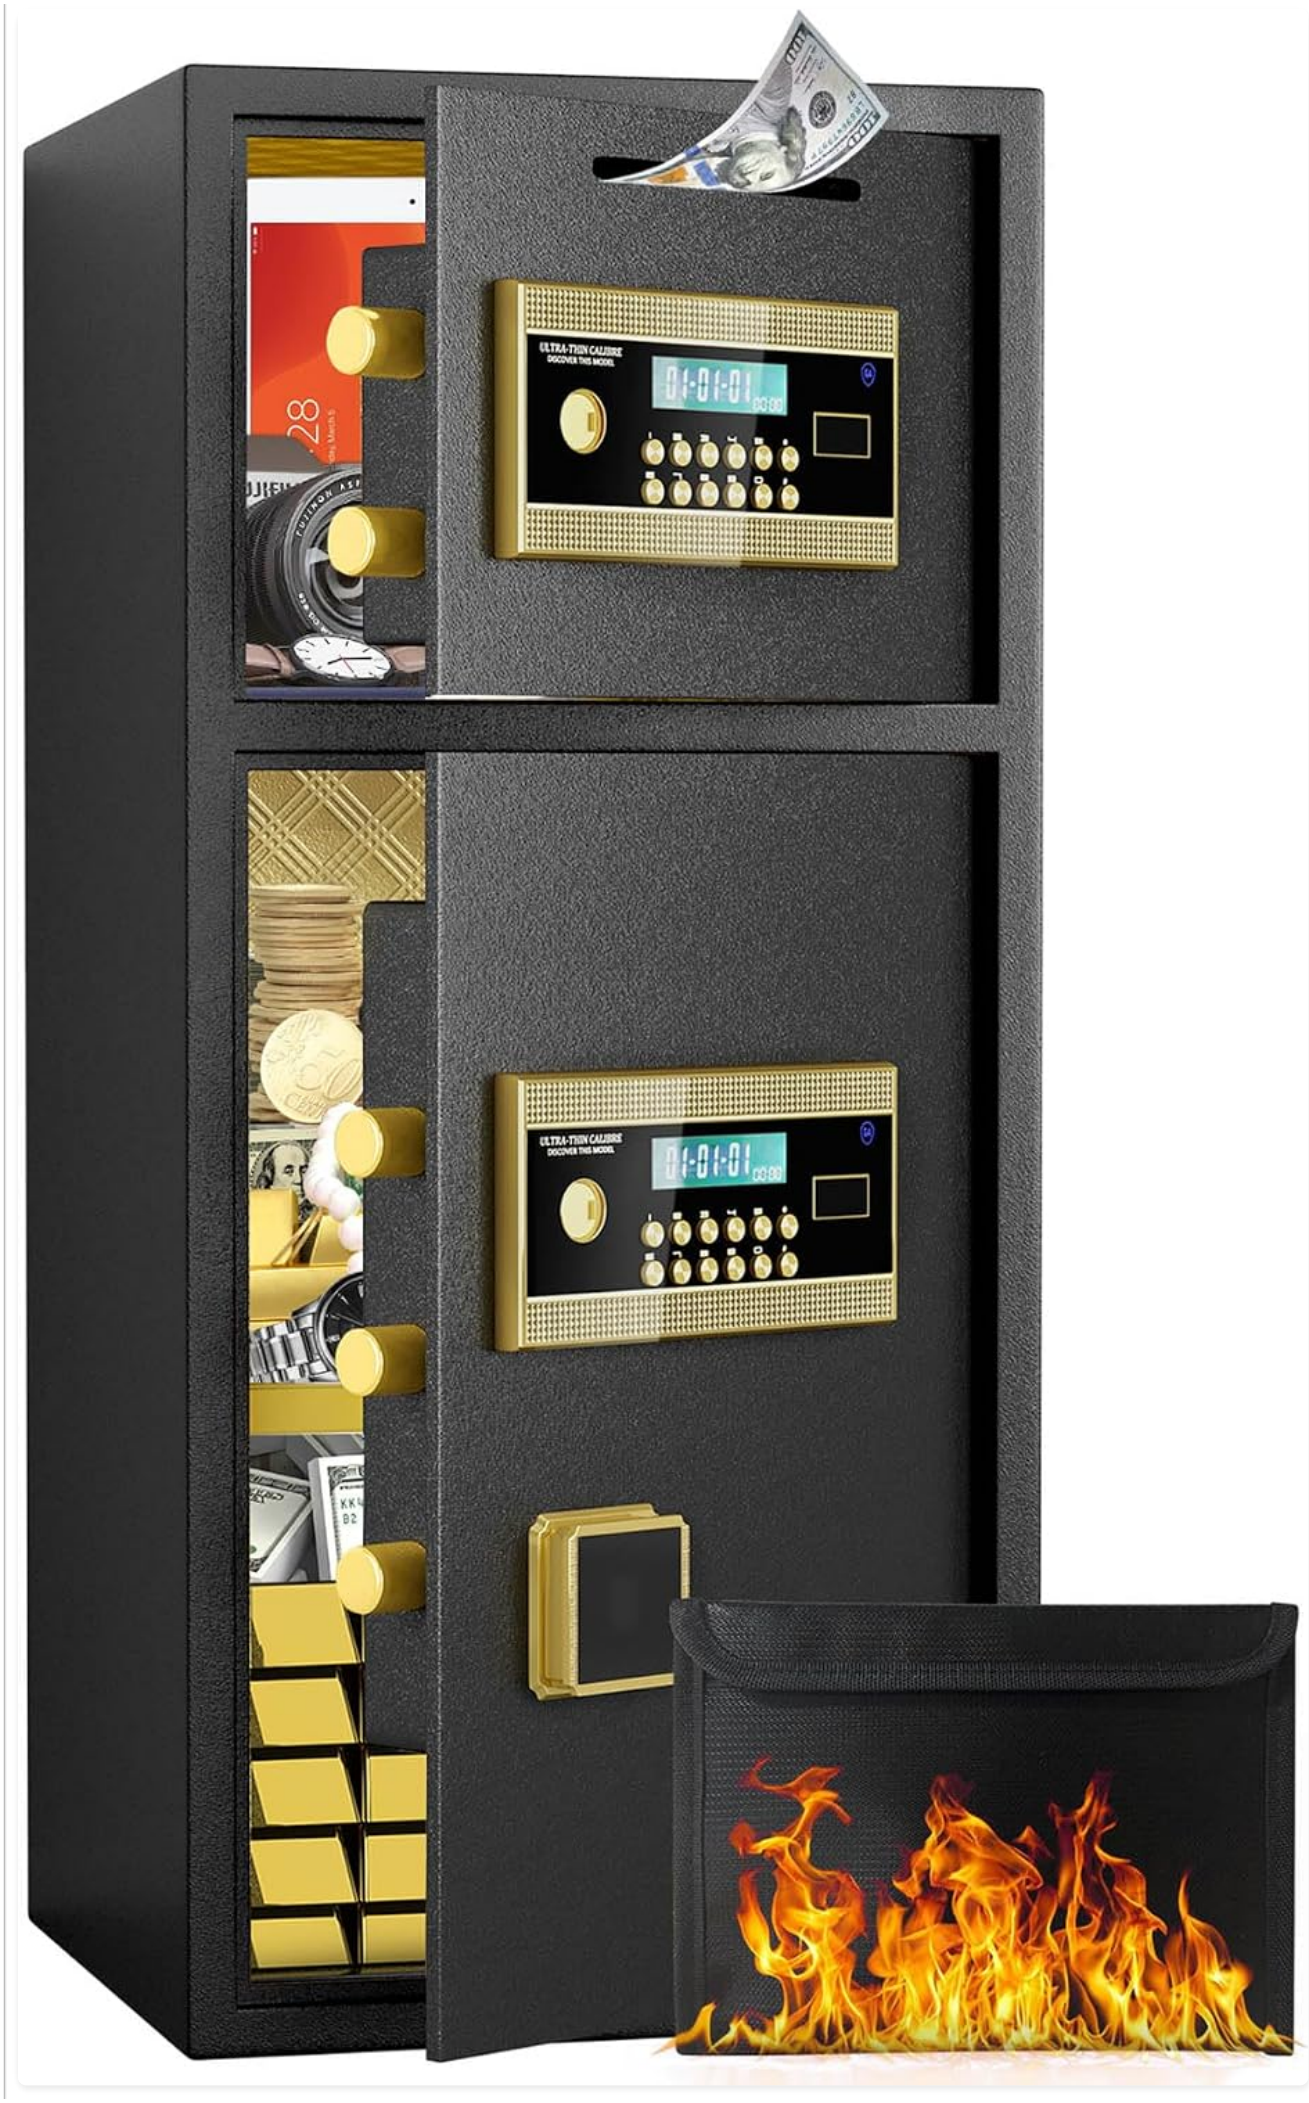
ULTRA-THIN CALIBRE
DISCOVER THIS MODEL
01-01-01
ULTRA-THIN CALIBRE
DISCOVER THIS MODEL
01-01-01

Image: The HIROHRTV Large Double-door Digital Security Safe, showcasing its spacious interior compartments and the included fireproof document bag.

2. Important Safety Information

- Always keep the emergency keys in a secure location away from the safe. Do not store them inside the safe.
- Ensure the safe is securely mounted to a wall or floor to prevent unauthorized removal.
- Do not share your password with unauthorized individuals. Change your password regularly.
- Avoid placing the safe in areas prone to extreme temperatures or high humidity.
- Keep the safe door closed and locked when not in use.

3. Product Features

3.1 Advanced Security with Hidden Code Function

This digital safe offers enhanced protection. The unique hidden code function allows you to mask your password entries by pressing "#" then "*" in the off-screen state, displaying zeros instead of actual numbers. This technology automatically resets after opening, providing an additional layer of security against unauthorized access. The safe also features a dual alarm system that alerts you to potential threats, such as violent vibration or incorrect password attempts.



Image: Illustration of the safe's anti-theft system, highlighting alerts for violent vibration and three incorrect password attempts.

3.2 Spacious Storage

With 6.5 cubic feet of interior space, this double-door safe provides ample room for organizing and storing a wide range of items. It features generous upper and lower compartments, making it ideal for documents, cash, jewelry, and other valuables. The removable shelf in the upper compartment allows for flexible storage configurations.



Image: Demonstrates the removable shelf feature, showing how items can be stored with or without the shelf for increased capacity.

3.3 Superior Construction

Crafted from thickened all-steel materials, this commercial-grade safe offers exceptional protection against corrosion and rust. The one-piece steel construction ensures extraordinary sturdiness and long-lasting performance. Its anti-pry design and micro-gap construction make it extremely difficult for unauthorized access.

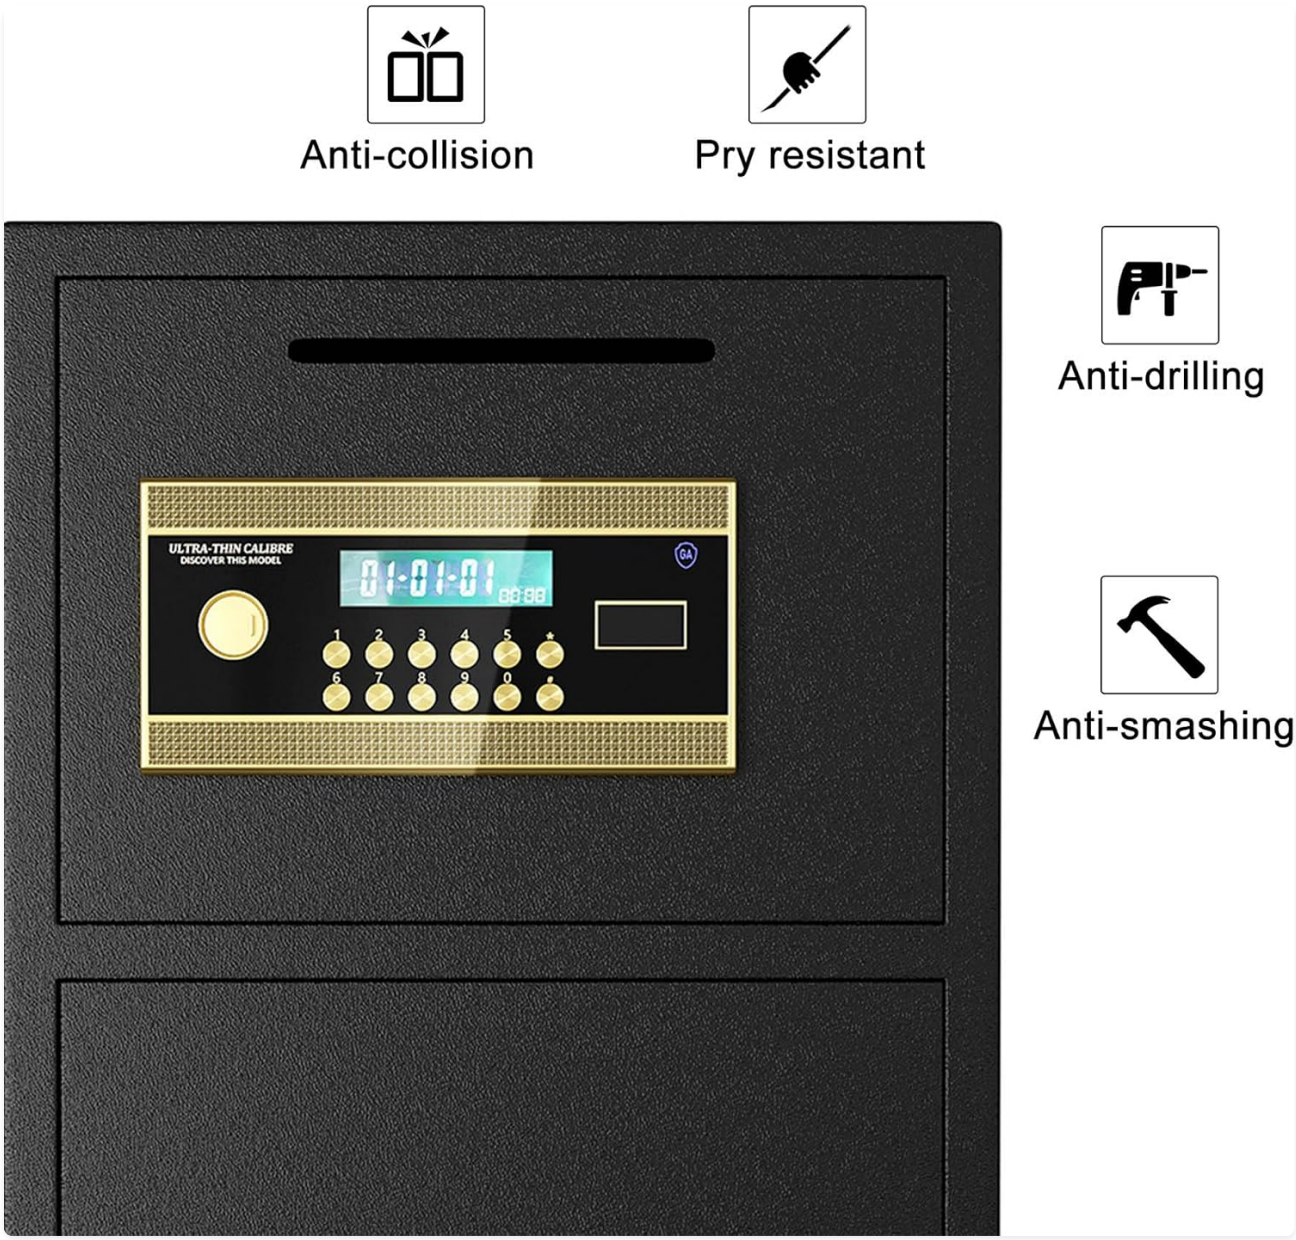

Image: Highlights the safe's robust security features, including anti-collision, pry resistance, anti-drilling, and anti-smashing capabilities.

3.4 Convenient Coin Slot and Document Storage

The specially designed coin slot ensures smooth and convenient operation, carefully engineered to accommodate coins and documents effortlessly. This feature is ideal for businesses that handle cash regularly, allowing deposits without providing access to the main compartment. The included fireproof and waterproof bag provides additional protection for critical documents.

3.5 Versatile Mounting Options

This safe comes with pre-drilled holes for secure installation. It can be used as a wall safe with 4 mounting holes in the back or as a floor safe with 2 holes in the bottom, offering flexibility based on your space and security needs. Mounting provides extra stability and prevents removal of the entire safe.

4. Package Contents

Please check the package carefully to ensure all items are present:

- HIROHRTV Double-door Digital Security Safe

- Emergency Keys (2 sets)
- External Battery Box
- Mounting Bolts (6 pieces)
- Fireproof and Waterproof Document Bag
- Instruction Manual
- Floor Protection Pads (4 pieces)



Image: All components included with the HIROHRTV safe, such as keys, mounting hardware, external battery box, and the fireproof bag.

5. Setup and Installation

5.1 Unpacking

Carefully remove the safe from its packaging. Inspect for any damage. Keep all packaging materials until you are satisfied with the product.

5.2 Initial Power-Up and Battery Installation

The safe requires 4 AA batteries (not included) for the digital keypad. Locate the battery compartment on the inside of the safe door. Insert the batteries, ensuring correct polarity. If the batteries are low, the LCD screen will display a low battery warning.

5.3 Mounting Options

For maximum security, it is highly recommended to mount the safe to a wall or floor. The safe has pre-drilled holes:

- **Wall Mount:** 4 holes in the back.
- **Floor Mount:** 2 holes in the bottom.

Use the provided mounting bolts to secure the safe to a solid surface. Ensure the surface can support the weight of the safe and its contents.



Image: Detailed dimensions of the safe, including external measurements and internal compartment sizes, useful for planning installation.

6. Operating Instructions

6.1 Understanding the Control Panel

The control panel features an LCD screen displaying date, time, and battery consumption. It includes a master keyhole, password keypad, external battery jack, and emergency keyhole.



Image: Close-up of the safe's control panel, detailing the master keyhole, password keypad, external battery jack, and emergency keyhole, along with the three methods to open the safe.

6.2 Setting Your Password

1. With the door open, press the internal reset button (usually a small red button on the inside of the door).
2. The keypad will beep, and the screen will prompt you to enter a new password.
3. Enter your desired 4-8 digit password, then press "#" or "E" to confirm.
4. Test the new password with the door open before closing it.

6.3 Using the Hidden Code Function

To activate the hidden code function, press "#" then "*" before entering your password. The screen will display zeros instead of the actual numbers you press, enhancing security against shoulder surfing.

6.4 Opening the Safe

There are three primary ways to open the safe:

- **Password Opening:** Enter your password on the keypad, then turn the knob.

- **External Battery Box + Password:** If internal batteries are dead, connect the external battery box to the external battery jack, then enter your password and turn the knob.
- **Master Key + Emergency Key:** Insert the master key into the master keyhole and the emergency key into the emergency keyhole, then turn both keys simultaneously and turn the knob.

6.5 Using the Coin Slot

The coin slot located on the upper door allows for quick and secure deposits of coins, cash, or small documents without needing to open the main safe door. Simply insert items into the slot.

7. Maintenance

7.1 Battery Replacement

When the LCD screen indicates a low battery warning, replace all 4 AA batteries promptly. Use high-quality alkaline batteries for best performance. If batteries are completely depleted, use the external battery box or emergency keys to open the safe.

7.2 General Care

Clean the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents. Periodically check the door hinges and locking bolts for smooth operation. Do not lubricate the lock mechanism.

8. Troubleshooting

8.1 Dual Alarm System

The safe is equipped with a dual alarm system. An alarm will sound if:

- The safe experiences violent vibration or impact.
- An incorrect password is entered 3 consecutive times.

To silence the alarm, enter the correct password or use the emergency key.

8.2 Common Issues and Solutions

Problem	Possible Cause	Solution
Safe does not open with password.	Incorrect password entered; low batteries.	Re-enter correct password; replace batteries or use external battery box.
Keypad is unresponsive.	Dead batteries; connection issue.	Replace batteries; ensure external battery box is properly connected.
Alarm sounds frequently.	Safe is being moved or tampered with; sensitive vibration setting.	Ensure safe is stable; check for accidental impacts.

9. Specifications

Feature	Detail
Brand	HIROHRTV

Feature	Detail
Model Number	safe box
Product Dimensions	13.8"D x 13.8"W x 25.59"H
Capacity	6.5 Cubic Feet
Lock Type	Electronic Combination Lock
Special Features	Dual Alarm, Hidden Code, Coin Slot
Mounting Type	Floor Mount (also wall mountable)
Material	All-steel construction
UPC	726727530643

10. Warranty and Support

Warranty information for this product is not specified in the provided product details. Please refer to the documentation included with your purchase or contact HIROHRTV customer support directly for warranty terms and conditions.

For technical support, troubleshooting assistance, or any other inquiries, please visit the official HIROHRTV website or use the contact information provided with your purchase. Always provide your model number and UPC when contacting support.

© 2025 HIROHRTV. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FCYCJSM5

More documents and user manuals: **https://manuals.plus/**