Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VAUNO EN8835-1

VAUNO Digital Alarm Clock Radio EN8835-1 WH User Manual

1. Introduction

Thank you for purchasing the VAUNO Digital Alarm Clock Radio, model EN8835-1 WH. This device combines a digital alarm clock with an FM radio, offering features such as dual alarms, adjustable brightness, and a snooze function. Designed for ease of use, it is suitable for various indoor environments including bedrooms, offices, and classrooms. Please read this manual carefully to ensure proper setup and operation.

2. Package Contents

- VAUNO Digital Alarm Clock Radio (EN8835-1 WH)
- USB Power Cable (1 meter/40 inches)
- User Manual

Note: A DC power adapter and 3 AAA batteries are not included and must be purchased separately.

3. Product Overview

3.1 Controls and Ports

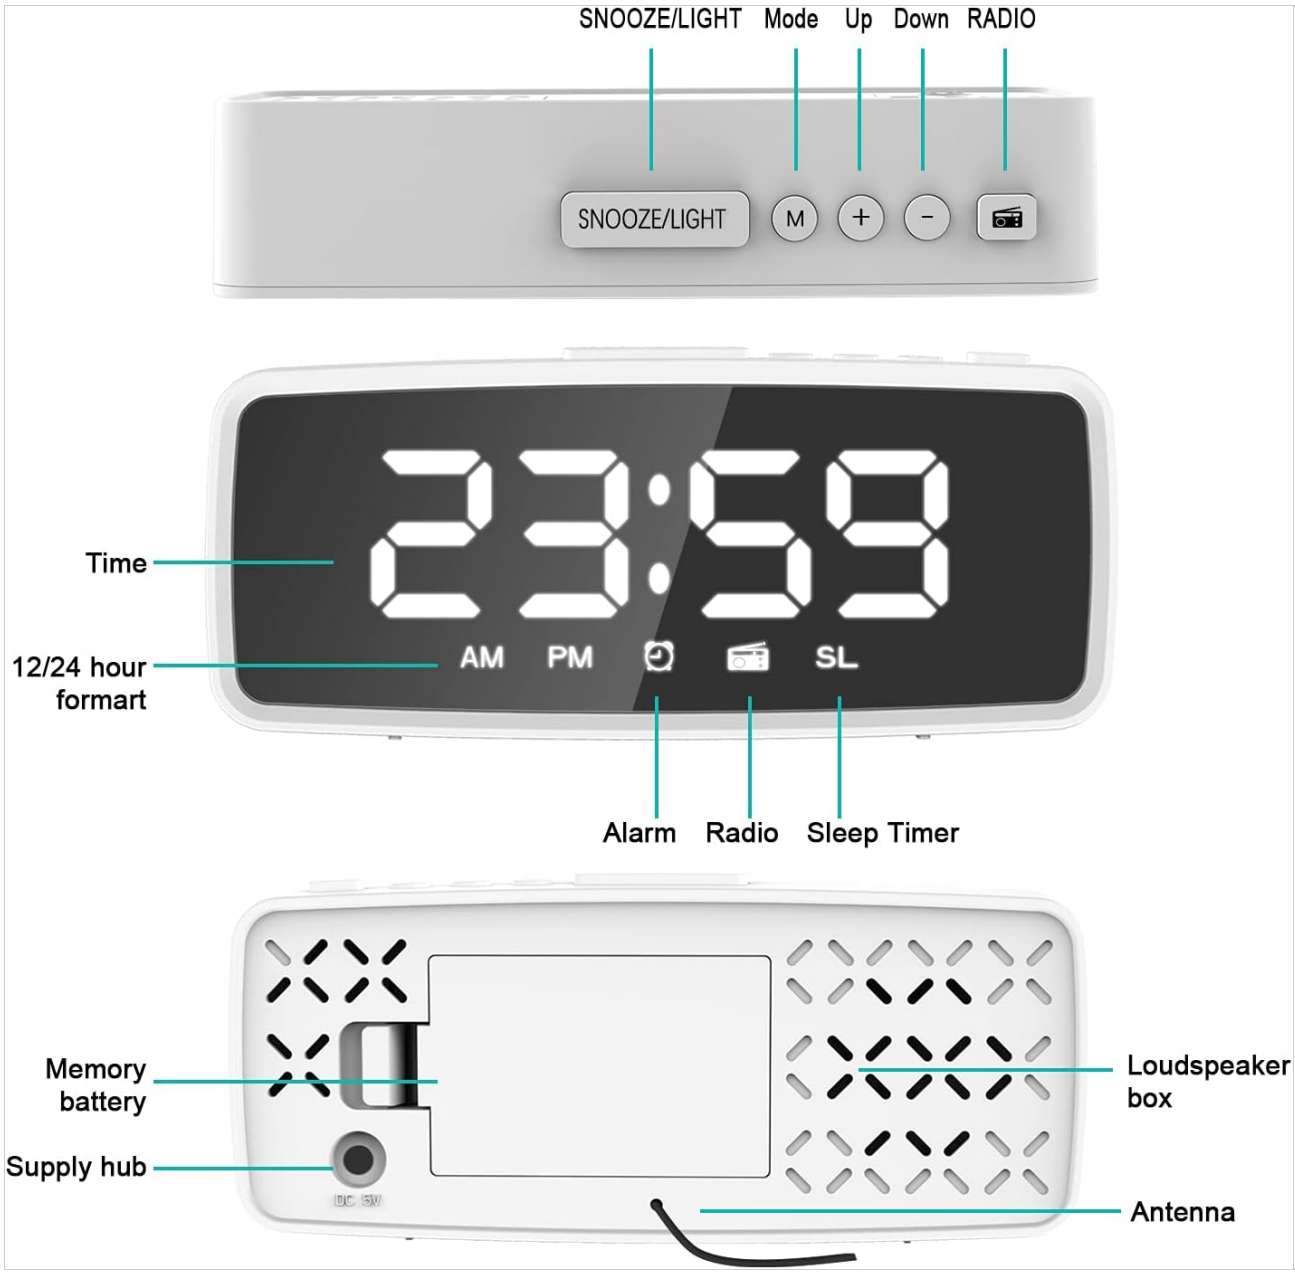

The image above illustrates the control buttons located on the top of the clock and the ports on the rear. The top panel includes buttons for SNOOZE/LIGHT, Mode, Up, Down, and RADIO. The rear panel features the Memory Battery compartment, DC 5V Supply Hub, Loudspeaker box, and Antenna.

3.2 Dimensions



The clock measures approximately 13.5 cm (5.3 inches) in width and 6 cm (2.6 inches) in height, making it compact and suitable for various spaces.

4. Power Supply



The alarm clock supports two power supply modes:

- **Corded Electric (Primary)**: Connect the provided USB power cable to the DC 5V Supply Hub on the back of the clock and plug it into a USB power adapter (not included). This mode ensures continuous display and full functionality.
- **Battery Backup (Secondary)**: Install 3 AAA batteries (not included) into the Memory Battery compartment. These batteries serve as a backup to retain time and alarm settings during a power outage. When operating solely on batteries, the display will automatically turn off after 10 seconds of inactivity to conserve power.

Recommendation: For optimal performance and to prevent loss of settings, it is highly recommended to use both the corded electric power and install backup batteries simultaneously.

5. Initial Setup

5.1 Setting the Time

1. Ensure the clock is powered on.
2. Press and hold the **Mode** button until the hour digits begin to flash.
3. Use the **Up** or **Down** buttons to adjust the hour.
4. Press the **Mode** button again to switch to minute adjustment. Use the**Up** or **Down** buttons to set the minutes.
5. Press the **Mode** button a third time to confirm the time setting.

5.2 12/24 Hour Format

While the hour digits are flashing during time setting, press the**Mode** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

6. Operating Instructions

6.1 Brightness Adjustment



The clock features 3 levels of display brightness: Bright, Medium, and Dim. To adjust the brightness, short press the **SNOOZE/LIGHT** button. Each press cycles through the brightness levels.

Night Mode

The clock can automatically adjust its brightness during a preset night period. Refer to the full manual for detailed instructions on setting the night mode period.

6.2 Alarm Settings


Wake up to radio/Buzzer optional
Radio
Buzzer
Two alarm modes are optional
9:00
AM
SL



The clock supports dual alarms (Alarm 1 and Alarm 2).

1. **Setting Alarm Time:** Press the **Mode** button repeatedly until 'AL1' or 'AL2' appears on the display. Hold the **Mode** button until the alarm hour flashes. Use **Up** or **Down** to set the hour, then press **Mode** to set minutes. Press **Mode** again to confirm.
2. **Activating/Deactivating Alarm:** After setting the alarm time, short press the **Mode** button to toggle the alarm ON/OFF. An alarm icon will appear when active.
3. **Alarm Sound:** You can choose between a buzzer or FM radio as the alarm sound. Refer to the full manual for specific steps to select the alarm source.
4. **Snooze Function:** When the alarm sounds, press the large **SNOOZE/LIGHT** button on top to activate snooze. The alarm will pause for 5-60 minutes (adjustable, refer to manual) and sound again. To turn off the alarm completely, press any other button.

6.3 FM Radio Operation

Manual / Auto Fm Radio

easy tuning to get your favourite radio station



0-15Radio Volume

FM76.0---108.0MHz

5-90min Sleep Timer

FM Radio with Sleeper Timer



Radio Volume
0-15 Levels

FM Radio
76.0-108.0 MHZ

Sleep Timer
OFF- 90 Minutes

The clock features an FM radio with a frequency range of 76-108 MHz.

1. **Turning On/Off:** Press the **RADIO** button to turn the FM radio on or off.
2. **Auto Scan and Store:** When the radio is on, press and hold the **RADIO** button to automatically scan for available stations and store them.
3. **Manual Tuning:** Use the **Up** or **Down** buttons to manually tune to a specific frequency.
4. **Adjusting Volume:** The radio has 15 adjustable volume levels. Use the **Up** or **Down** buttons while the radio is playing to adjust the volume.
5. **Sleep Timer:** To set a sleep timer, press the **Mode** button while the radio is playing. Use the **Up** or **Down** buttons to set the sleep timer duration from 5 to 90 minutes. The radio will automatically turn off after the set time.

6.4 Mirror Display Feature



The clock's display surface is designed with a reflective finish, allowing it to function as a mirror when the display is off or at a low brightness setting.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the clock's surface. Avoid abrasive cleaners or solvents that may damage the finish.
- **Battery Replacement:** If using battery backup, replace the 3 AAA batteries when the backup function is no longer reliable. Ensure correct polarity when inserting new batteries.
- **Storage:** If storing the clock for an extended period, remove the AAA batteries to prevent leakage.

8. Troubleshooting

Problem	Possible Cause	Solution
Display is blank or flickering.	No power, loose connection, or batteries depleted (if on battery power only).	Check power cable connection. Ensure DC adapter is working. Replace AAA batteries if operating on battery power.
Alarm does not sound.	Alarm not activated, alarm volume too low, or incorrect alarm time set.	Verify alarm is ON (alarm icon displayed). Check alarm volume settings. Re-set alarm time.
FM Radio reception is poor.	Weak signal, antenna not extended, or interference.	Extend the antenna fully. Reposition the clock for better reception. Try auto-scanning for stations again.
Time/settings reset after power outage.	No backup batteries installed or batteries are depleted.	Install fresh AAA batteries for backup. Ensure batteries are not depleted.

9. Specifications

Feature	Specification
Model Number	EN8835-1 WH
Brand	VAUNO
Display Type	Digital LED
Product Dimensions (W x H)	5.3 inches x 2.6 inches (13.5 cm x 6 cm)
Item Weight	5.44 ounces
Power Source	Corded Electric (DC 5V, adapter not included)
Battery Backup	3 x AAA batteries (not included)
Brightness Levels	3 (Bright, Medium, Dim) + Night Mode
Alarm Type	Dual Alarms (Buzzer or FM Radio)
Snooze Duration	Adjustable (5-60 minutes)
FM Radio Frequency	76-108 MHz
Radio Volume Levels	15 Levels
Sleep Timer	Adjustable (5-90 minutes)

Feature	Specification
Material	Plastic

10. Warranty and Support

This product comes with a standard manufacturer's warranty. For specific warranty details, technical support, or customer service inquiries, please refer to the contact information provided with your purchase documentation or visit the official VAUNO website. Please retain your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question