RCA 119KZ-GD

RCA Digital Picture Frame 10.1 Inch WiFi (Model 119KZ-GD) User Manual

Model: 119KZ-GD

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your RCA 10.1-inch WiFi Digital Picture Frame. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

Image: The RCA 10.1-inch WiFi Digital Picture Frame in gold, showcasing a vibrant image of a child. A smartphone next to it displays the Uhale app, illustrating remote photo sharing capabilities.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Box (Packaging)
- 1 x Digital Photo Frame
- 1 x DC Adapter
- 1 x Stand
- 1 x User Manual (this document)
- 2 x Screws (for wall mounting)

Package List

1. 1× Box
2. 1× Digital photo frame
3. 1× DC adapter
4. 1× Stand
5. 1× User Manual
6. 2× screw

Image: An overhead view of the RCA Digital Picture Frame package contents, neatly laid out. This includes the frame, power adapter, stand, a printed user manual, and two screws.

SETUP GUIDE

1. Powering On

1. Connect the DC adapter to the power port on the back of the digital picture frame.
2. Plug the DC adapter into a standard electrical outlet.
3. The frame will automatically power on and display the initial setup screen.

2. Connecting to Wi-Fi

1. On the initial setup screen, select your preferred language.
2. Follow the on-screen prompts to connect the frame to your local Wi-Fi network. You will need your Wi-Fi network name (SSID) and password.
3. Ensure the frame is within range of your Wi-Fi router for a stable connection.

3. Installing the Uhale App for Remote Sharing

The Uhale app allows you to share photos and videos to your frame remotely from your smartphone.

1. Download the "Uhale" app from your smartphone's app store (Google Play Store for Android or Apple App Store for iOS).
2. Open the Uhale app and create an account or log in.
3. Follow the in-app instructions to pair your smartphone with your RCA Digital Picture Frame. This typically involves scanning a QR code displayed on the frame or entering a unique frame ID.

Image: The Uhale app on a smartphone, demonstrating wireless photo and video sharing to the RCA Digital Picture Frame. The frame displays a family photo, indicating successful content transfer.

4. Adding Photos/Videos via SD Card or USB Drive

You can also transfer media directly using an SD card or USB flash drive.

1. Download photos and videos to a USB flash drive or SD card from your computer.
2. Insert the U disk (USB drive) or SD card into the corresponding slot on the digital photo frame.

3. Navigate to the media import section on the frame's touch screen.

4. Select the photos/videos you wish to play directly or copy them to the frame's internal memory.

Note: Please ensure the SD card and USB drive are formatted to FAT32 before use for compatibility.

Image: A visual guide illustrating the process of transferring photos and videos from a laptop to the RCA Digital Picture Frame using either an SD card or a USB drive. The frame is shown displaying a photo, with slots for both media types visible.

5. Mounting Options

The frame can be placed on a desktop using the included stand or mounted on a wall.

- **Desktop Placement:** Attach the included support frame/stand to the back of the digital picture frame. Place it on a flat, stable surface.
- **Wall Mounting:** Use the wall hanging hole on the back of the frame. Securely install the provided screws into your wall, ensuring they can support the frame's weight, then hang the frame.
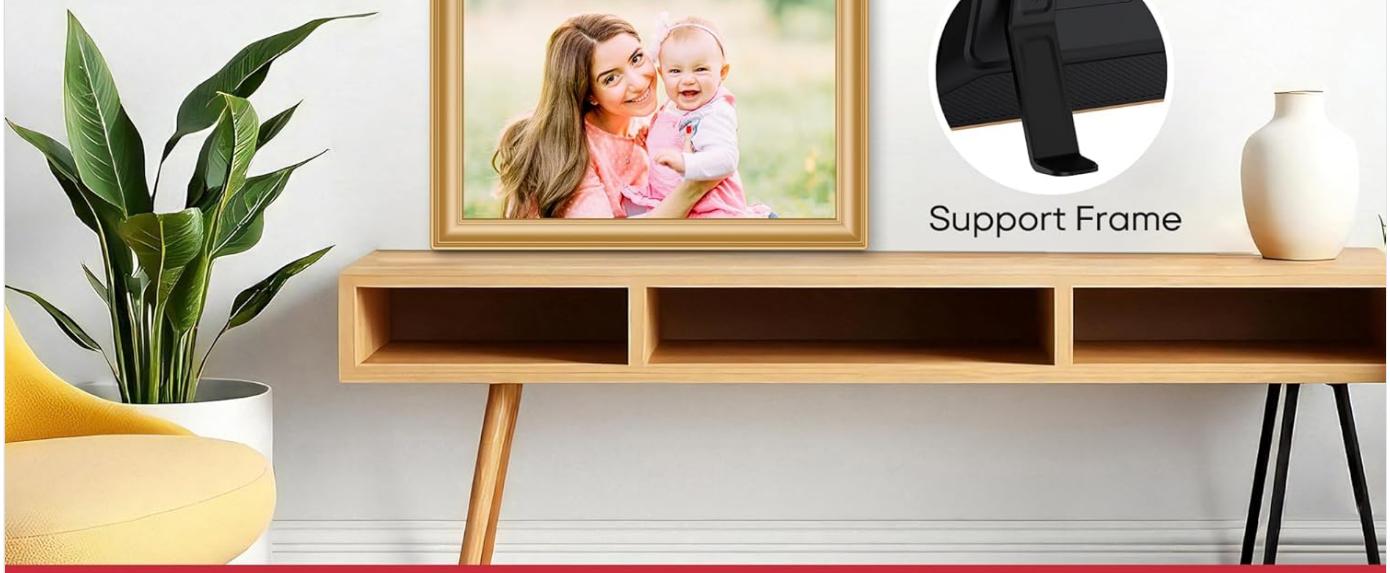
Image: Demonstrates the versatility of the RCA Digital Picture Frame, showing it both resting on a table with its support stand and mounted vertically on a wall using the integrated hanging hole.

OPERATING INSTRUCTIONS

1. Touch Screen Navigation

The RCA Digital Picture Frame features a 10.1-inch HD touch screen for intuitive control.

- Tap icons to select options or open menus.
- Swipe left or right to navigate through photos and videos.
- Pinch to zoom in or out on images (if supported by the current view).

Image: The 10.1-inch HD touch screen of the RCA Digital Picture Frame, showcasing a high-resolution image. Feature icons around the frame highlight its IPS display, 1280x800 resolution, and wide 178-degree viewing angle.

2. Display Settings

- **Auto-Rotate:** The frame automatically adjusts the display orientation (landscape or portrait) based on how it is positioned.
- **Sleep Mode/Bedtime:** Access the settings menu to schedule specific times for the frame to automatically turn off its display (e.g., during nighttime hours) and power back on.
- **Shuffle Photos:** In the settings, you can choose to display photos in a random order rather than sequentially.

3. Managing Photos and Videos

The frame comes with 32GB of built-in memory, capable of storing over 60,000 pictures. Memory can be expanded up to 64GB using an SD card or USB drive.

- **Viewing Media:** Access the "Gallery" or "Photos" section from the main menu to browse your stored media.
- **Deleting Media:** Select individual photos or videos and choose the delete option from the menu.

- **Creating Albums:** Organize your media into custom albums for easier viewing.

Image: The RCA Digital Picture Frame showcasing a central image of a child, flanked by multiple other family photos, emphasizing its 32GB built-in memory and ability to store a large volume of images.

4. Multi-User Connection

Multiple users can connect to a single frame via the Uhale app, allowing family and friends to share photos and videos from different locations.

1. From the Uhale app, invite others to connect to your frame by sharing the frame's unique code or QR code.
2. Accepted users can then send photos and videos directly to your frame.
3. Manage connected users and their permissions through the frame's settings or the Uhale app.
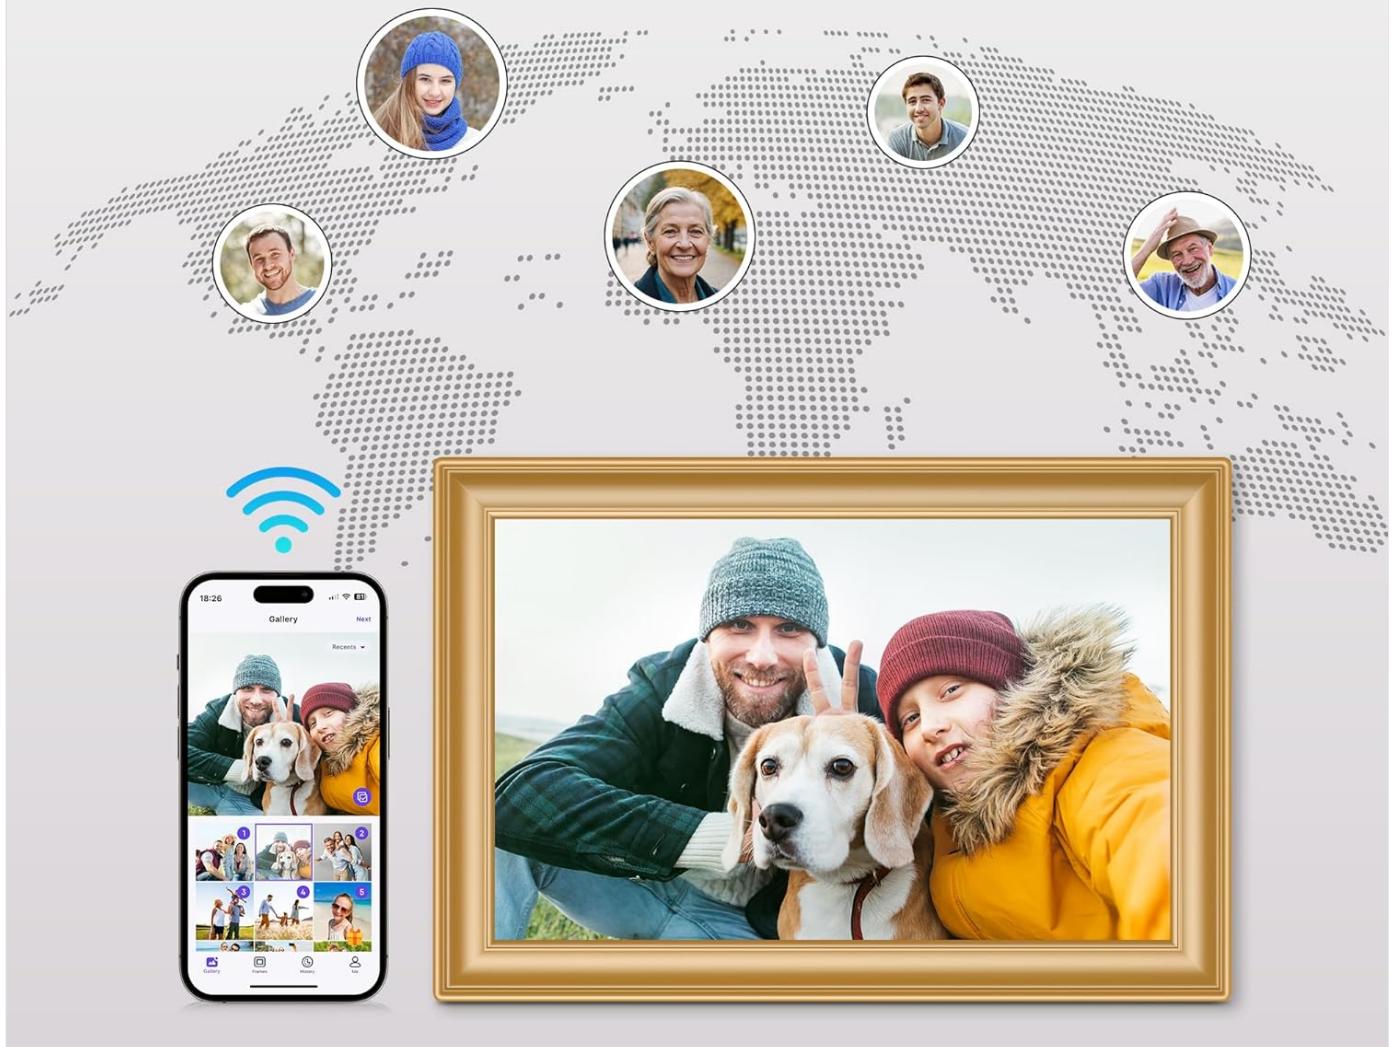
Image: The RCA Digital Picture Frame displaying a family photo, accompanied by a smartphone showing the Uhale app. Surrounding the frame are multiple user profile icons on a world map, illustrating the multi-user connection feature for sharing photos and videos.

5. Sending Instant or Timed Wishes

The Uhale app allows you to send personalized messages or "wishes" to the frame, either instantly or scheduled for a specific time.

1. Within the Uhale app, select the "Wishes" or "Messages" feature.
2. Choose a template or compose your message.
3. Select whether to send it immediately or schedule it for a future date and time.
4. The message will appear on the digital picture frame at the designated time.
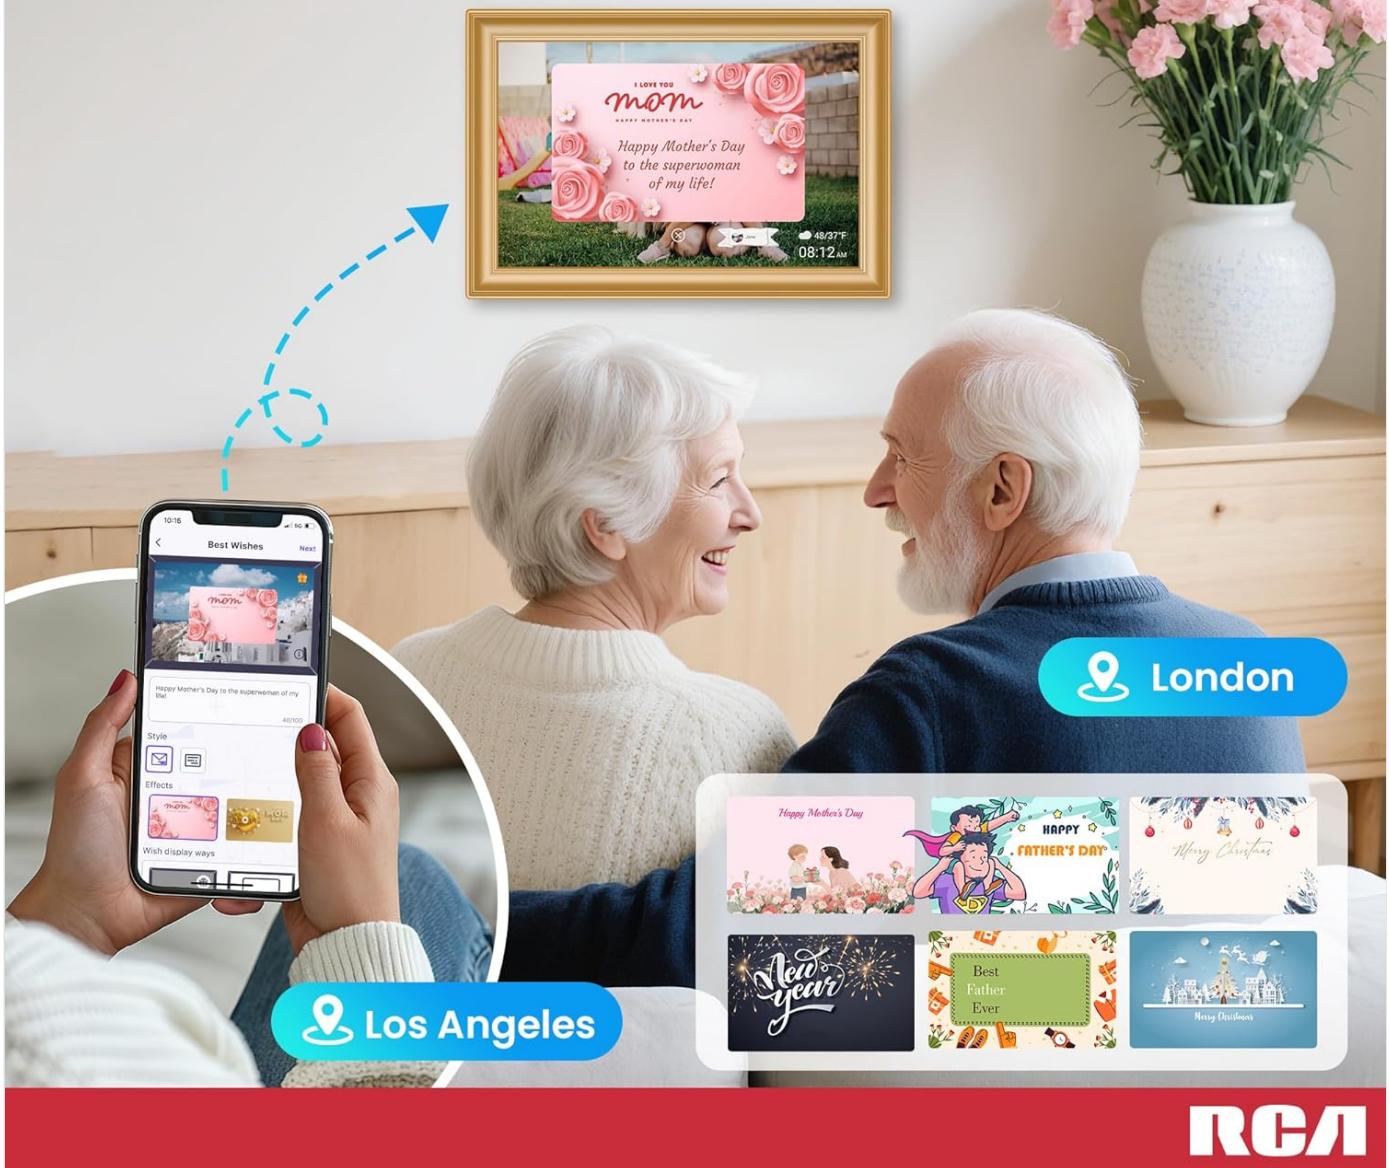
Image: A smartphone displaying the Uhale app's interface for creating and sending personalized messages or "wishes." The RCA Digital Picture Frame in the background shows an example message, "Happy Mother's Day," demonstrating the feature.

MAINTENANCE

Cleaning the Frame

- Always unplug the frame before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and frame.
- For stubborn smudges on the screen, lightly dampen the cloth with water or a screen-safe cleaning solution. Do not spray liquid directly onto the screen.
- Avoid using abrasive cleaners, solvents, or aerosol sprays, as these can damage the surface.

Storage

- Store the frame in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, it is recommended to pack it in its original packaging to protect it from dust and

physical damage.

TROUBLESHOOTING

If you encounter issues with your RCA Digital Picture Frame, refer to the following common solutions:

Problem	Possible Solution
Frame does not power on.	- Ensure the power adapter is securely connected to both the frame and a working electrical outlet. - Try a different outlet. - Verify the power adapter is the original one provided with the frame.
Cannot connect to Wi-Fi.	- Check that your Wi-Fi router is on and functioning. - Ensure you are entering the correct Wi-Fi password. - Move the frame closer to the Wi-Fi router. - Restart the frame and your Wi-Fi router.
Photos/videos not displaying from SD card/USB.	- Ensure the SD card or USB drive is inserted correctly and fully. - Verify the media is in a supported format (e.g., JPEG for photos, MP4 for videos). - Confirm the SD card or USB drive is formatted to FAT32. - Try a different SD card or USB drive.
Uhale app cannot connect to the frame.	- Ensure both your smartphone and the frame are connected to the internet. - Verify the frame ID or QR code is entered/scanned correctly. - Restart both the app and the frame. - Check for app updates.
Screen is unresponsive.	- Restart the frame by unplugging and replugging the power adapter. - Ensure the screen is clean and free of debris.

SPECIFICATIONS

Feature	Detail
Model Number	119KZ-GD
Screen Size	10.1 Inches
Resolution	1280*800 HD
Display Type	IPS Touch Screen
Internal Memory	32GB (stores over 60,000 pictures)

Feature	Detail
Expandable Memory	Up to 64GB (via SD card or USB drive)
Connectivity	WiFi
Compatible Devices	Smartphone (via Uhale App)
Product Dimensions	6.85 x 10.24 x 0.99 inches
Item Weight	1.06 pounds
Color	Gold

SUPPORT INFORMATION

For further assistance or inquiries, please refer to the following support details:
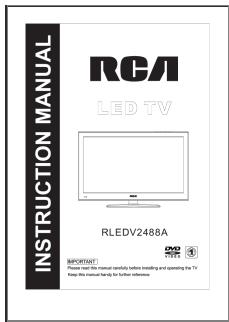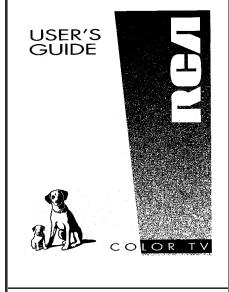
- **Customer Service Response:** Quick replies typically within 24 hours.
- **Returns and Exchanges:** Eligible for return or exchange within 30 days of purchase.
- **Technical Support:** Lifetime technical support is provided for this product.

Please visit the official RCA support website or contact their customer service for specific contact methods.

Related Documents - 119KZ-GD

[RCA iRB24 LED TV User Manual - Setup and Operation Guide](#)
Get started with your RCA iRB24 LED TV. This user manual covers installation, remote control, picture and sound settings, channel tuning, and troubleshooting for your RCA television.

[RCA Ultra HD Smart TV Safety Precautions and Getting Started Guide](#)
Comprehensive safety precautions, important instructions, accessories list, and getting started guide for RCA Ultra HD Smart TVs, including remote control and battery information.

INSTRUCTION MANUAL **RCA** LED TV RLEDV2488A IMPORTANT! Please read this manual carefully before installing and operating the TV. Keep this manual handy for further reference. DVD	[RCA RLEDV2488A LED TV Instruction Manual](#) Comprehensive instruction manual for the RCA RLEDV2488A LED TV, covering setup, operation, picture and sound settings, channel management, parental controls, troubleshooting, and specifications.
尺寸：105*148MM 80页书纸 黑白印刷	[RCA RPJ275 1080p Full HD Projector User Manual](#) Comprehensive guide for the RCA RPJ275 projector, covering setup, operation of photo, music, and movie modes, troubleshooting, specifications, and warranty information.
USER'S GUIDE RCA COLOR TV	[RCA Color TV User's Guide: Setup, Operation, and Troubleshooting](#) Comprehensive user's guide for RCA Color TV models, covering setup, remote control operation, picture and sound adjustments, advanced features, troubleshooting, and warranty information.
RCA DRD222RD DIGITAL DIRECTV System Second-Room Receiver	[RCA DRD222RD DIRECTV Receiver: Features, Specifications, and Guide](#) Detailed overview of the RCA DRD222RD DIRECTV System Second-Room Receiver, including its accelerated 32-bit processor, SurfGuide™, interactive features, remote control, dimensions, and back panel connections. Learn about its specifications and warranty.