Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Dpofirs Dpofirsfcab4to3z6-11

Dpofirs 4K 64MP Vlogging Camera User Manual

Model: Dpofirsfcab4to3z6-11
Brand: Dpofirs

Introduction

Welcome to the user manual for your Dpofirs 4K 64MP Vlogging Camera. This manual provides detailed instructions on setting up, operating, maintaining, and troubleshooting your camera to ensure optimal performance.

This camera is designed for high-quality photo and video capture, featuring a CMOS sensor for exceptional clarity and vibrant color reproduction. It supports 4K video recording and 64MP still images, making it ideal for vlogging, photography, and use as a webcam.

Package Contents

Please verify that all items are present in your package:

- 1 x Dpofirs 4K Digital Camera
- 1 x Supply Cord (USB cable)
- 1 x Portable Hand Rope
- 1 x Portable Bag
- 1 x User Manual (this document)



Image: The Dpofirs 4K Vlogging Camera shown with its included accessories: a USB charging cable, a portable hand rope, and a soft carrying bag.

Camera Overview

Front View



Image: Front view of the Dpofirs 4K Vlogging Camera, highlighting the lens, LED flash, and power button.

Rear View



Image: Rear view of the Dpofirs 4K Vlogging Camera, showing the 2.88-inch HD screen and various control buttons for navigation and settings.

Key Features

- 4K 64MP Digital Camera with CMOS sensor
- 2.88 Inch Ultra HD Screen
- 18x Digital Zoom
- Built-in LED Flash
- Autofocus capability
- High Speed Burst Mode
- Timed Photo Taking (2s, 5s, 10s options)
- Filters for creative effects
- Supports up to 64GB Memory Card (Class 10, not included)
- Built-in 2500mAh Lithium Ion Battery

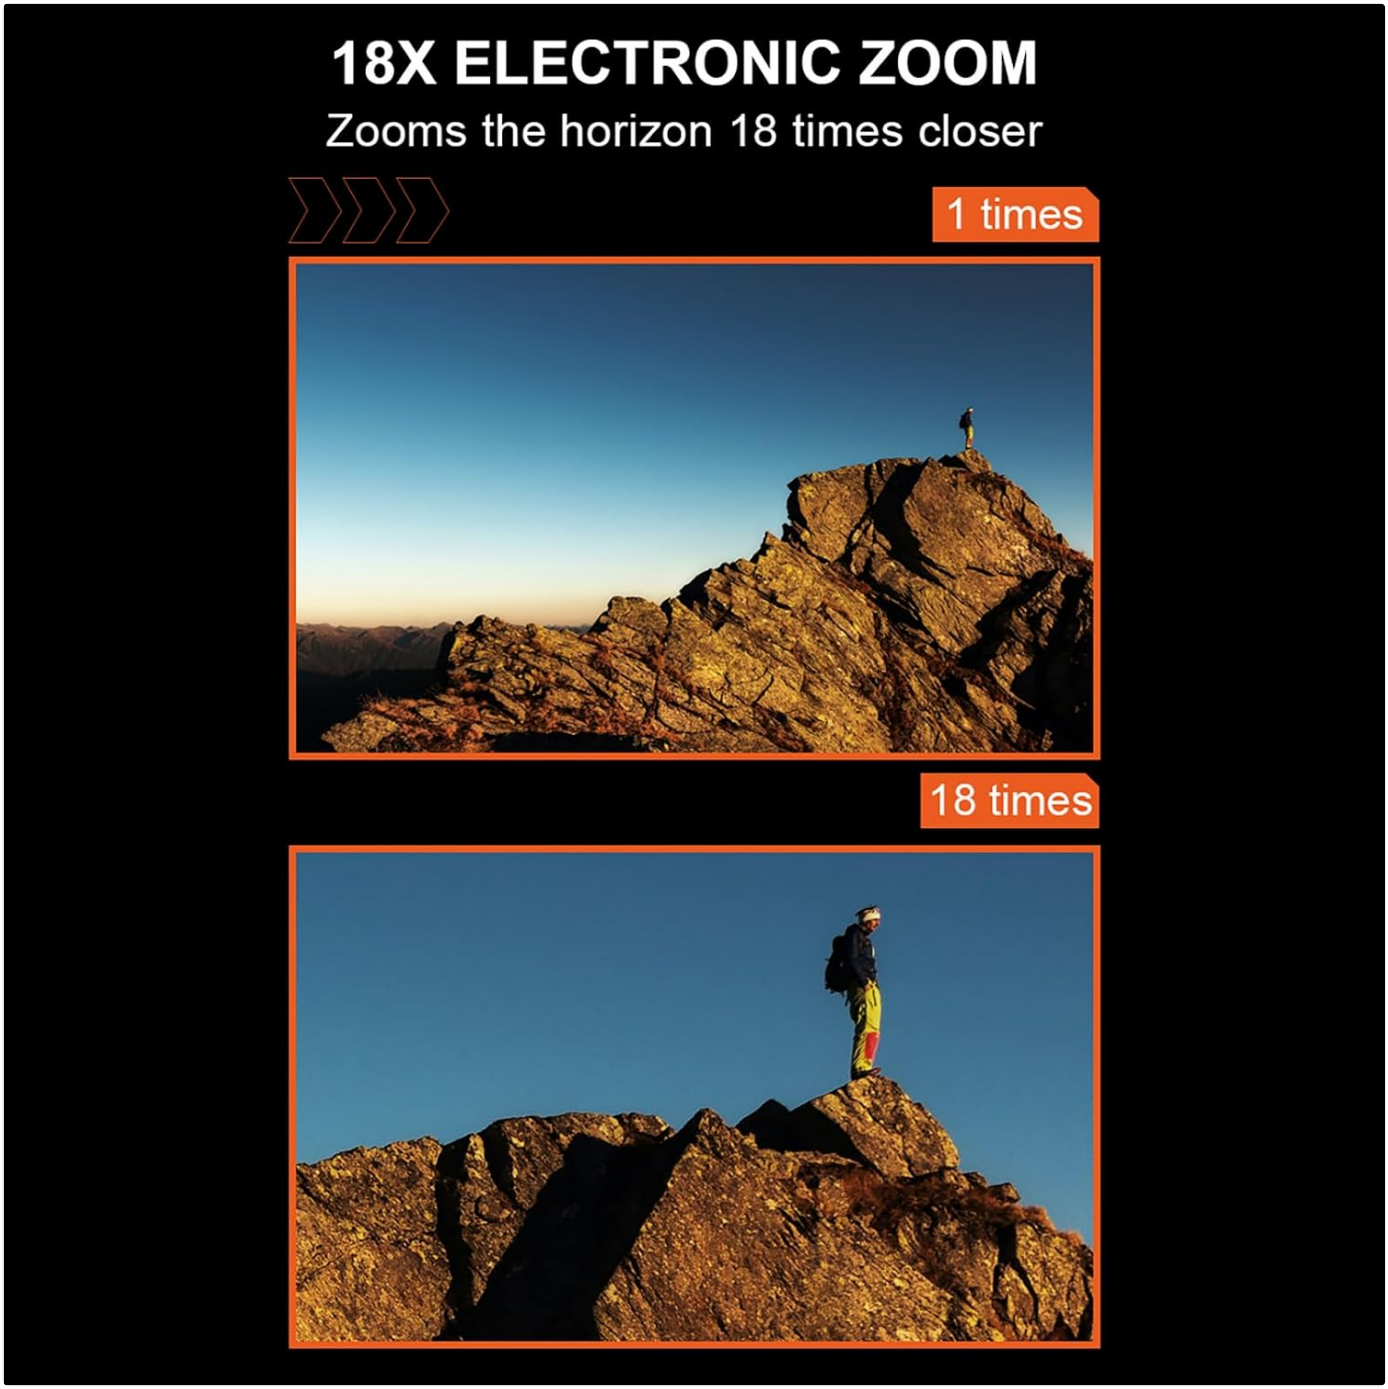

Image: Visual representation of the camera's key features, including 4K Ultra HD resolution, smart autofocus, long battery life, time-lapse recording, electronic image stabilization, vlog selfie mode, 18x zoom, timed photo options, and creative filters.

Setup

Charging the Battery

The camera comes with a built-in 2500mAh Lithium Ion Battery. Before first use, fully charge the battery.

1. Connect the supplied USB cord to the camera's charging port.
2. Connect the other end of the USB cord to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate.
4. Charging time is approximately 3.5-4 hours for a full charge. The indicator light will change or turn off when charging is complete.

Inserting a Memory Card

The camera supports up to a 64GB Class 10 memory card (not included). A memory card is required to save photos and videos.

1. Locate the memory card slot on the side of the camera.
2. Gently insert the memory card into the slot with the gold contacts facing the correct direction (refer to the diagram near the slot if available).
3. Push the card in until it clicks into place. To remove, push the card again until it springs out.

Operating Instructions

Powering On/Off

Press and hold the **Power** button (usually located on the top or front of the camera) to turn the camera on or off.

Basic Photo Capture

1. Turn on the camera.
2. Frame your shot using the 2.88-inch HD screen.
3. The camera features autofocus. Allow the camera to focus on your subject.
4. Press the **Shutter** button (typically on top) to take a photo.

Video Recording

1. Turn on the camera.
2. Switch to video mode (if applicable, usually via a mode button or menu option).
3. Press the **Record** button (often marked with a red dot or video camera icon) to start recording.
4. Press the **Record** button again to stop recording.

Zoom Function

The camera features 18x digital zoom. Use the **W** (Wide) and **T** (Telephoto) buttons, typically located near the screen, to zoom in and out.



Image: Demonstration of the 18x electronic zoom capability, illustrating how distant subjects can be brought significantly closer.

Using the LED Flash

The built-in LED flash provides illumination in low-light conditions. The flash can be activated or set to auto mode via the camera's menu or a dedicated flash button (often marked with a lightning bolt icon).

Timed Photos (Self-Timer)

To set a self-timer for photos (2s, 5s, or 10s delay):

1. Navigate to the camera settings or photo mode options.
2. Select the self-timer option and choose your desired delay.
3. Press the shutter button; the camera will count down before taking the photo.

Webcam Functionality

This camera can also function as a webcam. Connect the camera to your computer using the supplied USB cord. The camera should be recognized as a webcam device. Refer to your computer's operating system or video conferencing

software settings for selecting the camera.

Maintenance

Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- Do not use organic solvents (e.g., alcohol, thinner) to clean the camera.

Battery Care

- Store the camera in a cool, dry place when not in use.
- Avoid exposing the battery to extreme temperatures.
- If storing for an extended period, charge the battery to about 50% capacity.

Storage

When not in use, store the camera in its portable bag to protect it from dust and scratches.

Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted.	Charge the battery fully.
Cannot take photos/videos.	No memory card inserted or card is full/corrupted.	Insert a compatible memory card. Delete unnecessary files or format the card (this will erase all data).
Images are blurry.	Lens is dirty; camera not focusing; insufficient light.	Clean the lens. Ensure autofocus is enabled. Use the LED flash in low light.
Camera freezes or becomes unresponsive.	Software glitch; low battery.	Remove and reinsert the battery (if possible) or hold the power button for 10 seconds to force a shutdown. Recharge battery.

Specifications

Feature	Detail

Feature	Detail
Item Type	4K Digital Camera
Material	ABS, Electronic
WIFI (APP)	Support
Digital Zoom	18x Digital Zoom
LCD Screen	2.88 Inch Ultra HD Screen
Lens Material	Refractive Wide Angle Lens
Working Time (Photos)	Approx. 2-3 Hours
Working Time (Videos)	Approx. 1.5-2 Hours
Charging Time	3.5-4 Hours
Product Features	Photo Taking, HD Video Recording, Filters, Timed Photo Taking, Autofocus
Card Slot Type	Supports up to 64GB Memory Card (Class 10)
Language Support	English (Default), Simplified Chinese, Traditional Chinese, Japanese, Korean, Russian, German, French, Italian, Spanish, Portuguese, Thai
Battery Type	Built-in 2500mAh Lithium Ion Battery
Model Number	Dpofirsfcab4to3z6-11

Warranty and Support

Warranty Information

This product comes with a manufacturer warranty for 90 days from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

Customer Support

For technical support, troubleshooting assistance, or warranty inquiries, please contact Dpofirs customer service. Refer to the product packaging or the official Dpofirs website for the most current contact information.

You can also visit the official Dpofirs store on Amazon for more information:Dpofirs Amazon Store

© 2024 Dpofirs. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FDR2FXQZ

More documents and user manuals: **https://manuals.plus/**