Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Dpofirs Dpofirsgkmuqz3xce

Dpofirs E Book Reader Instruction Manual

Model: Dpofirsgkmuqz3xce

Product Overview

The Dpofirs E Book Reader is a portable electronic device designed for reading and writing, featuring a 5-inch inkless touch screen. It operates on Android 5.1, offering 1GB RAM and 8GB ROM, allowing for third-party applications and seamless internet browsing via Wi-Fi and Bluetooth.



Image: The Dpofirs E Book Reader, shown with its protective cover, displaying an e-book on its screen.

This device supports multiple document formats and includes features such as night mode, bookmarking, and adjustable font sizes for a personalized reading experience. It also boasts a 5MP camera with flash and built-in speakers for multimedia functions like taking photos, video calls, and playing sounds.

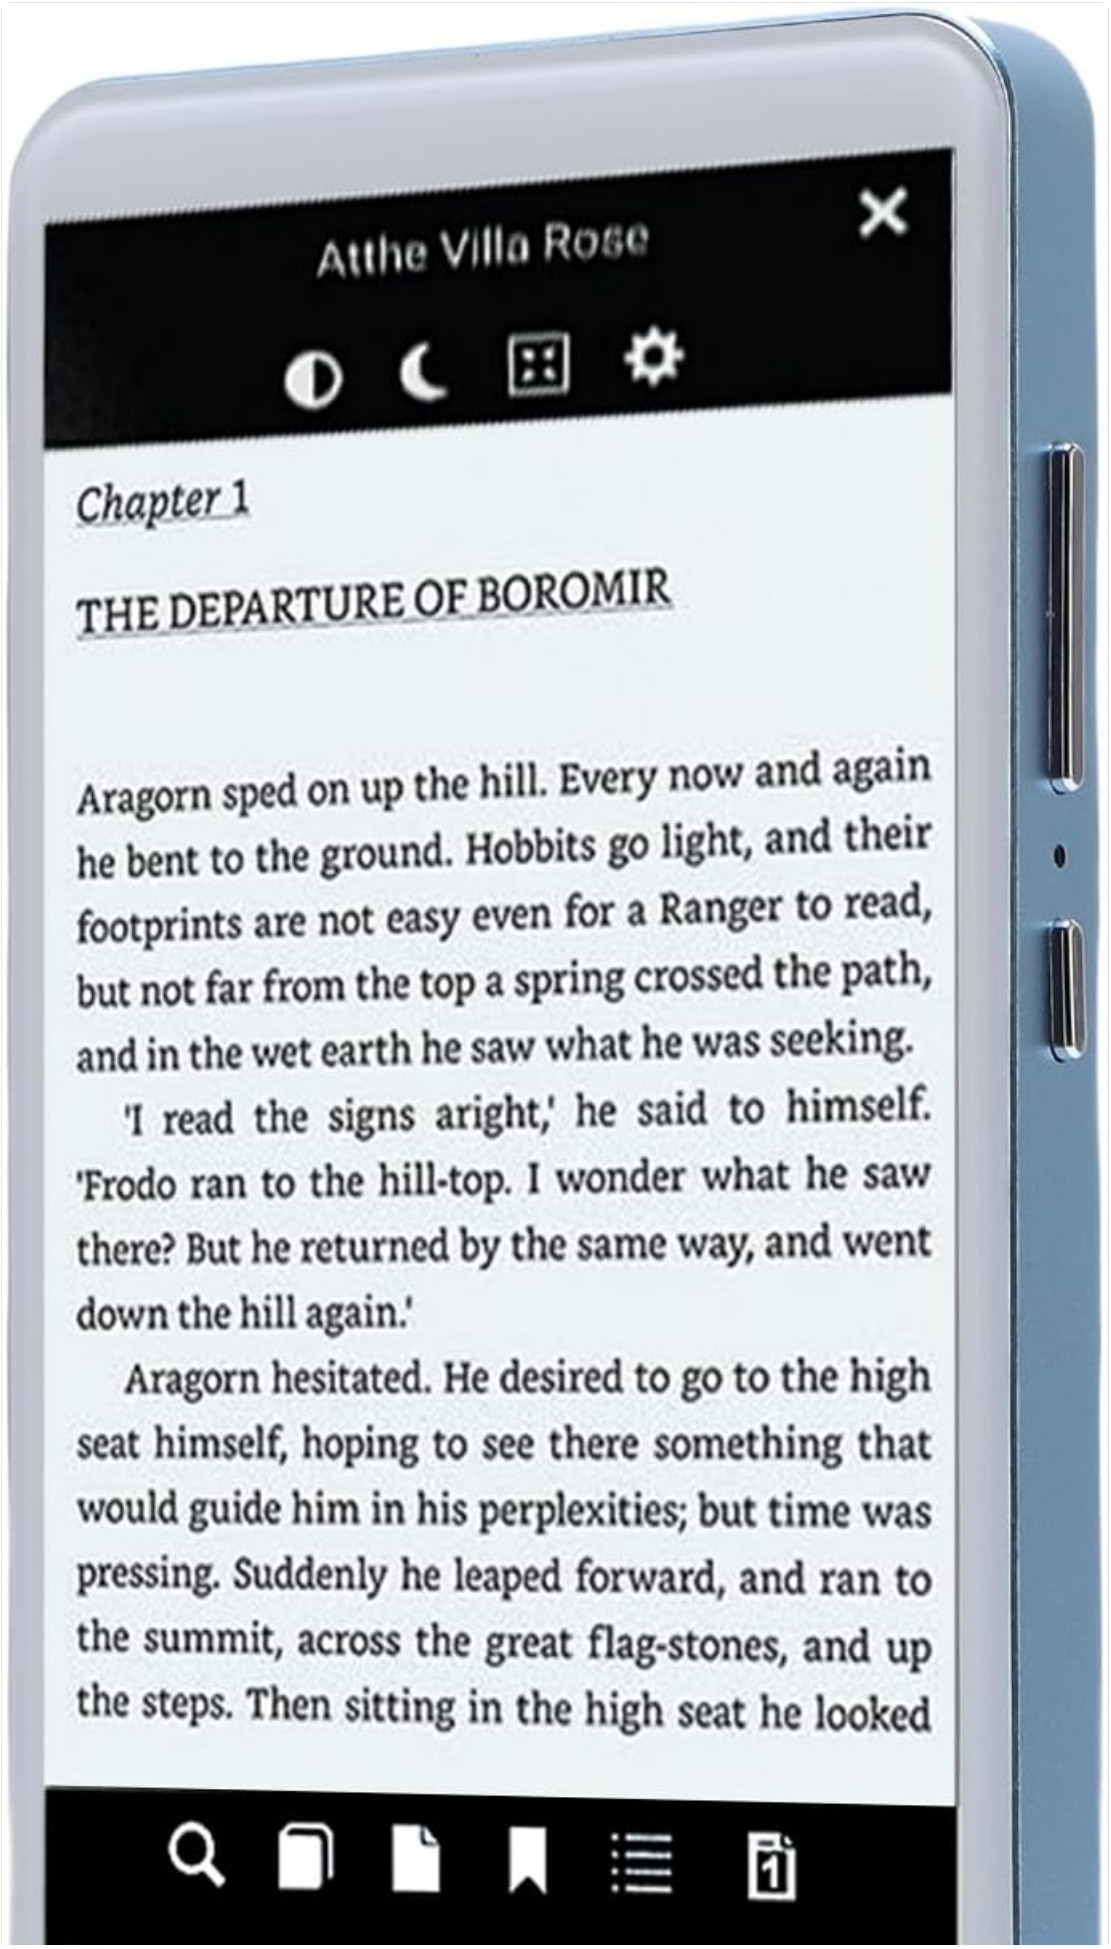




Image: The Dpofirs E Book Reader without its cover, highlighting the device's sleek design and physical buttons on the side.

Package Contents

Upon unboxing, verify that all items listed below are present:

- 1 x Electronic Book Reader
- 1 x Protective Cover
- 1 x Charging Cable (Type C)
- 1 x Earphone (3.5mm)
- 1 x Stylus Pen
- 1 x Screen Protector
- 1 x Writing Board
- 1 x Writing Board Stylus Pen
- 1 x Instruction Manual (this document)



Image: A flat lay showing all components included in the Dpofirs E Book Reader package: the e-reader, protective cover, charging cable, earphones, stylus pen, screen protector, writing board, and writing board stylus pen.

Setup

1. **Initial Charge:** Before first use, fully charge the e-reader using the provided Type C charging cable. Connect the cable to the device's USB Type C port and a compatible USB power adapter (not included). The battery indicator

will show charging status.

2. **Power On:** Press and hold the On/Off key (one of the 4 physical keys) until the screen illuminates.
3. **Screen Protector Application:** Carefully apply the included screen protector to the device's screen to prevent scratches. Ensure the screen is clean and dust-free before application.
4. **Protective Cover:** Place the e-reader into the protective cover for enhanced durability and protection.
5. **Stylus Pen:** The stylus pen can be used for navigation and writing on the inkless touch screen.
6. **Writing Board:** The separate writing board and its stylus pen are for note-taking and drawing, independent of the e-reader's screen.

Operating Instructions

Basic Navigation and Controls

- **Touch Screen:** Navigate the interface by tapping, swiping, and pinching on the 5-inch inkless touch screen.
- **Physical Keys:** The device features 4 physical keys: Volume Up, Volume Down, Photo, and On/Off. These keys provide quick access to their respective functions.
- **Stylus Pen Usage:** Use the provided stylus pen for precise input on the touch screen, especially for writing or drawing functions.

Reading and Document Management

The Dpofirs E Book Reader supports a wide range of document formats. It can automatically scan user-specified folders for easy management of your library.

- **Opening Documents:** Tap on a document icon from your library to open and begin reading.
- **Page Turning:** Swipe left or right on the screen, or use designated physical keys (if applicable) to turn pages.
- **Personalized Settings:**
  - **Night Mode:** Activate night mode for comfortable reading in low-light conditions.
  - **Bookmarks:** Add bookmarks to easily return to specific pages.
  - **Font Adjustment:** Change font sizes to suit your preference.



Image: The Dpofirs E Book Reader showcasing its flat e-ink screen, designed to provide a reading experience similar to a physical book.

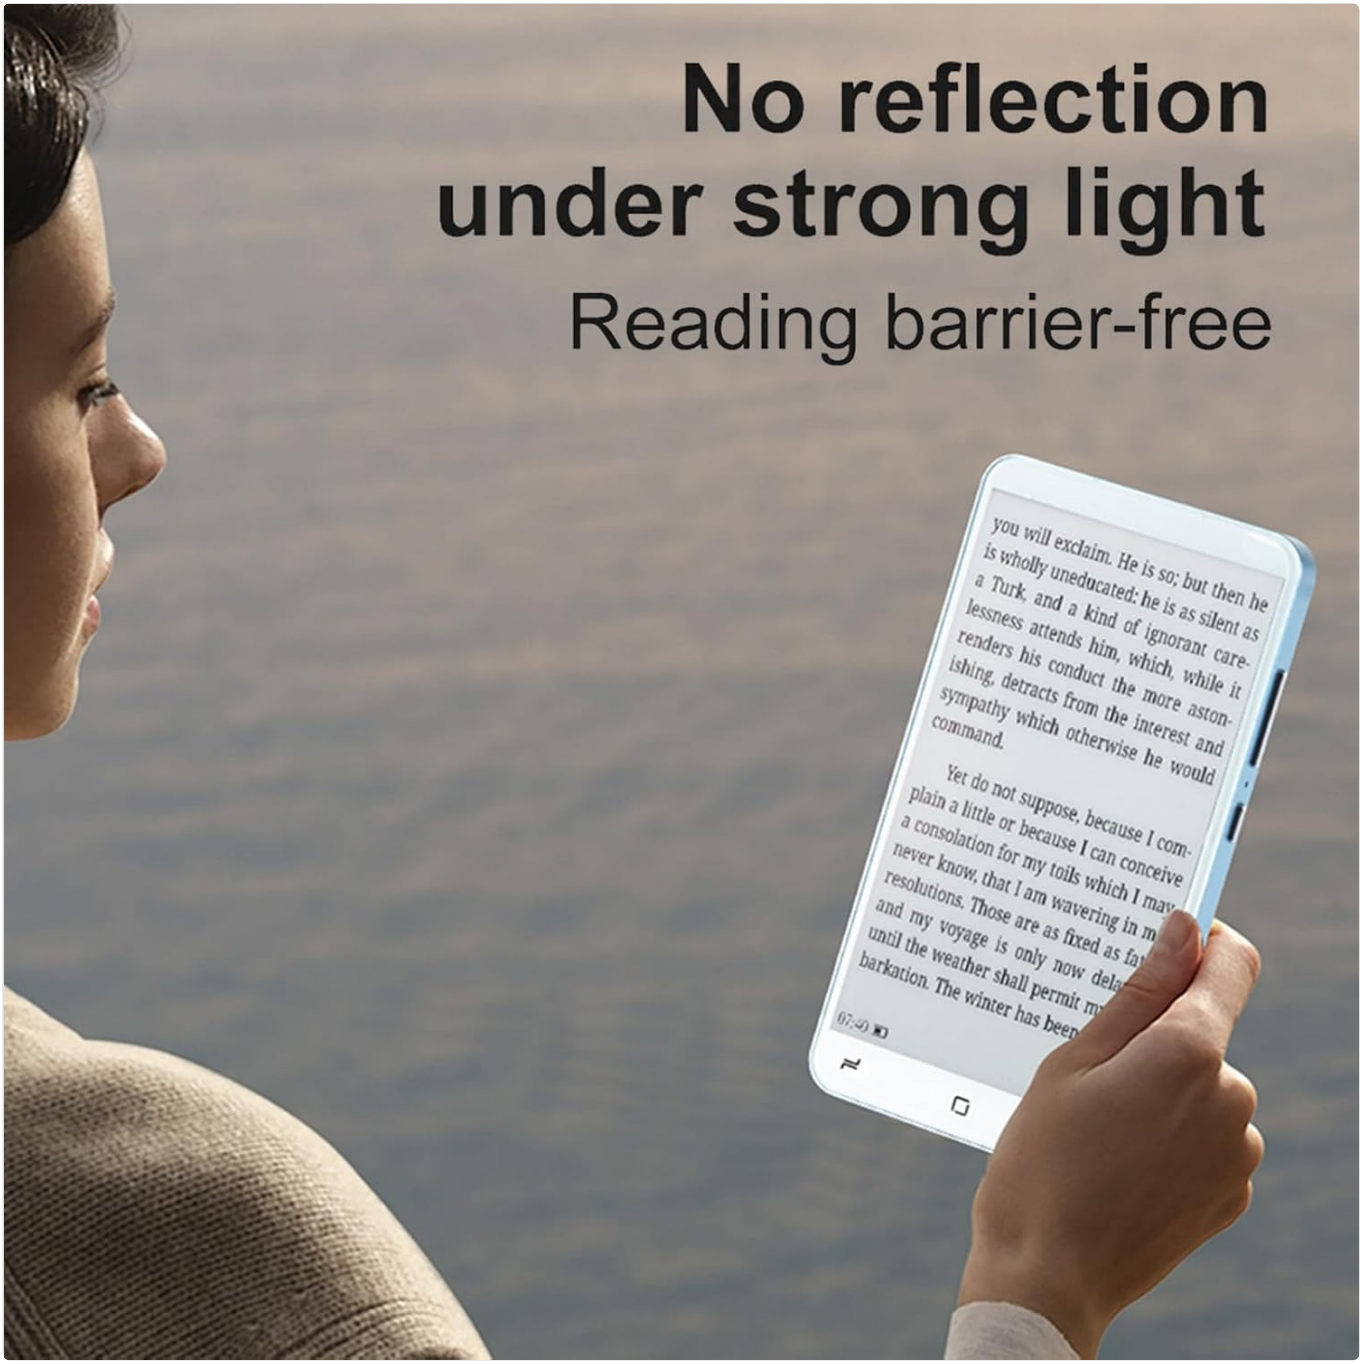


Image: A user holding the Dpofirs E Book Reader outdoors, illustrating the screen's anti-reflection properties for barrier-free reading even under strong light.

Connectivity and Multimedia

- **Wi-Fi:** Connect to Wi-Fi networks for internet browsing, downloading content, and accessing online features.
- **Bluetooth:** Pair with Bluetooth-enabled devices such as headphones or speakers for audio playback.
- **Camera:** Use the built-in 5MP camera to take photos. The Photo physical key can be used for quick access.
- **Audio Playback:** The device supports various sound formats. Connect the provided 3.5mm earphones or Bluetooth audio devices for private listening.
- **Video Playback:** The e-reader supports various video formats, allowing for multimedia consumption.

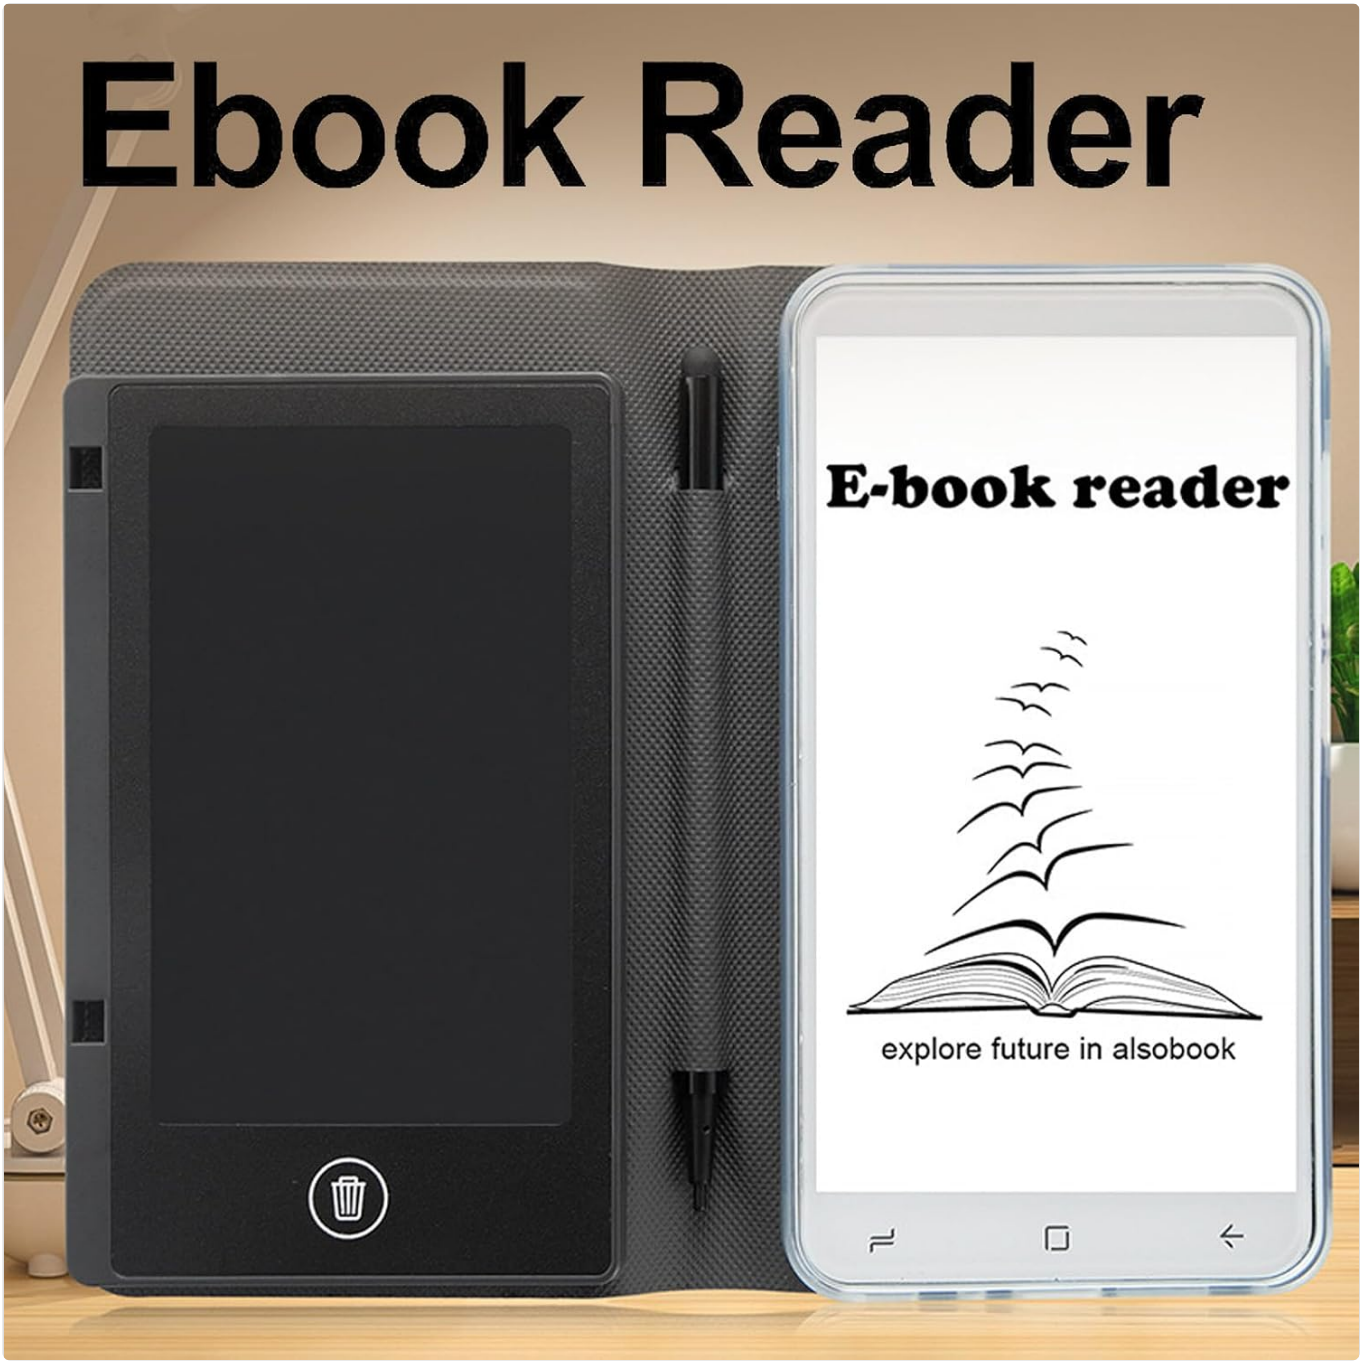


Image: The Dpofirs E Book Reader positioned alongside its accompanying writing board, showcasing its dual functionality for reading and note-taking.



Image: The Dpofirs E Book Reader and writing board arranged with a coffee cup, suggesting a comfortable and immersive reading experience.

Maintenance

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the device. Avoid abrasive cleaners or solvents.
- **Storage:** Store the e-reader in a cool, dry place away from direct sunlight and extreme temperatures. Use the protective cover when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, especially if it will be stored for an extended period.
- **Software Updates:** Periodically check for and install any available software updates to ensure optimal performance and access to new features.



Image: The Dpofirs E Book Reader with a visual representation of its high-capacity battery, emphasizing its super long range and extended reading time on a single charge.

Troubleshooting

- **Device Not Turning On:** Ensure the battery is charged. Connect the device to a power source and try turning it on again. If unresponsive, perform a hard reset by holding the power button for an extended period (e.g., 10-15 seconds).
- **Screen Unresponsive:** If the touch screen is not responding, try restarting the device. Ensure the screen is clean and free of debris.
- **Cannot Connect to Wi-Fi/Bluetooth:** Verify that Wi-Fi/Bluetooth is enabled in the device settings. Check your network connection or try restarting your router/Bluetooth device.
- **Slow Performance:** Close unnecessary applications running in the background. Clear cache or temporary files if available in settings.
- **Audio Issues:** Check volume settings. Ensure earphones are properly connected or Bluetooth audio device is paired correctly.

Specifications

Feature	Specification
Item Type	Electronic Book Reader
Material	Aluminum Alloy
Screen Size	5 inch, 480x854 resolution
TP Specification	6PIN
Camera	5MP with Flash
Number of Keys	4 Physical Keys (Volume Up, Volume Down, Photo, On/Off)
Battery Type	Li Battery (Built-in)
Battery Capacity	2500mAh
USB Port	Type C Port
Headset Specifications	3.5mm Headset
Operating System	Android 5.1
RAM	1GB
ROM	8GB
Package Dimensions	8.27 x 5.51 x 1.18 inches
Item Weight	14.5 ounces
Model Number	Dpofirsgkmuqz3xce
Manufacturer	Dpofirs

Support

For further assistance, technical support, or warranty inquiries, please contact Dpofirs customer service. Refer to the product packaging or the official Dpofirs website for contact information.
Note: Specific warranty terms and conditions may vary by region and retailer. Please retain your proof of purchase for warranty claims.

© 2025 Dpofirs. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FF57YMRC

More documents and user manuals: **https://manuals.plus/**