Manuals+
Q & A | Deep Search | Upload

Tonies Toniebox 2

Tonies Toniebox 2 Audio Player Starter Set Instruction Manual

Model: Toniebox 2 | Brand: Tonies

1. Introduction

Welcome to the world of Tonies! This instruction manual provides essential information for setting up, operating, and maintaining your Tonies Toniebox 2 Audio Player Starter Set. Designed for independent play, the Toniebox offers screen-free audio entertainment for children aged 1 and up.

Image: The Tonies Toniebox 2 in Cloud Pink, accompanied by the Playtime Puppy Tonie.

2. Setup

2.1 What's Included in the Starter Set

- 1x Toniebox 2 Speaker Unit (Cloud Pink)
- 1x 8.6” (22cm) USB-C Charging Cable
- 1x Playtime Puppy Tonie

Note: Power Adapter, longer charger cable, and additional Tonies are sold separately. Wi-Fi is needed for initial setup. The included USB-C Charging Cable is 8.6" to meet child safety standards for little listeners aged 1+.

Image: Visual representation of the Toniebox 2 Starter Set components.

2.2 Initial Setup

1. **Charge the Toniebox:** Connect the Toniebox to a power source using the provided USB-C charging cable. Ensure it is fully charged before first use.
2. **Connect to Wi-Fi:** The Toniebox requires a Wi-Fi connection for its initial setup and to download content for new Tonies. Follow the instructions in the Tonies app or on the Tonies website to connect your device.
3. **Place a Tonie:** Once connected, place the Playtime Puppy Tonie on top of the Toniebox. The content will automatically download and be ready for playback.

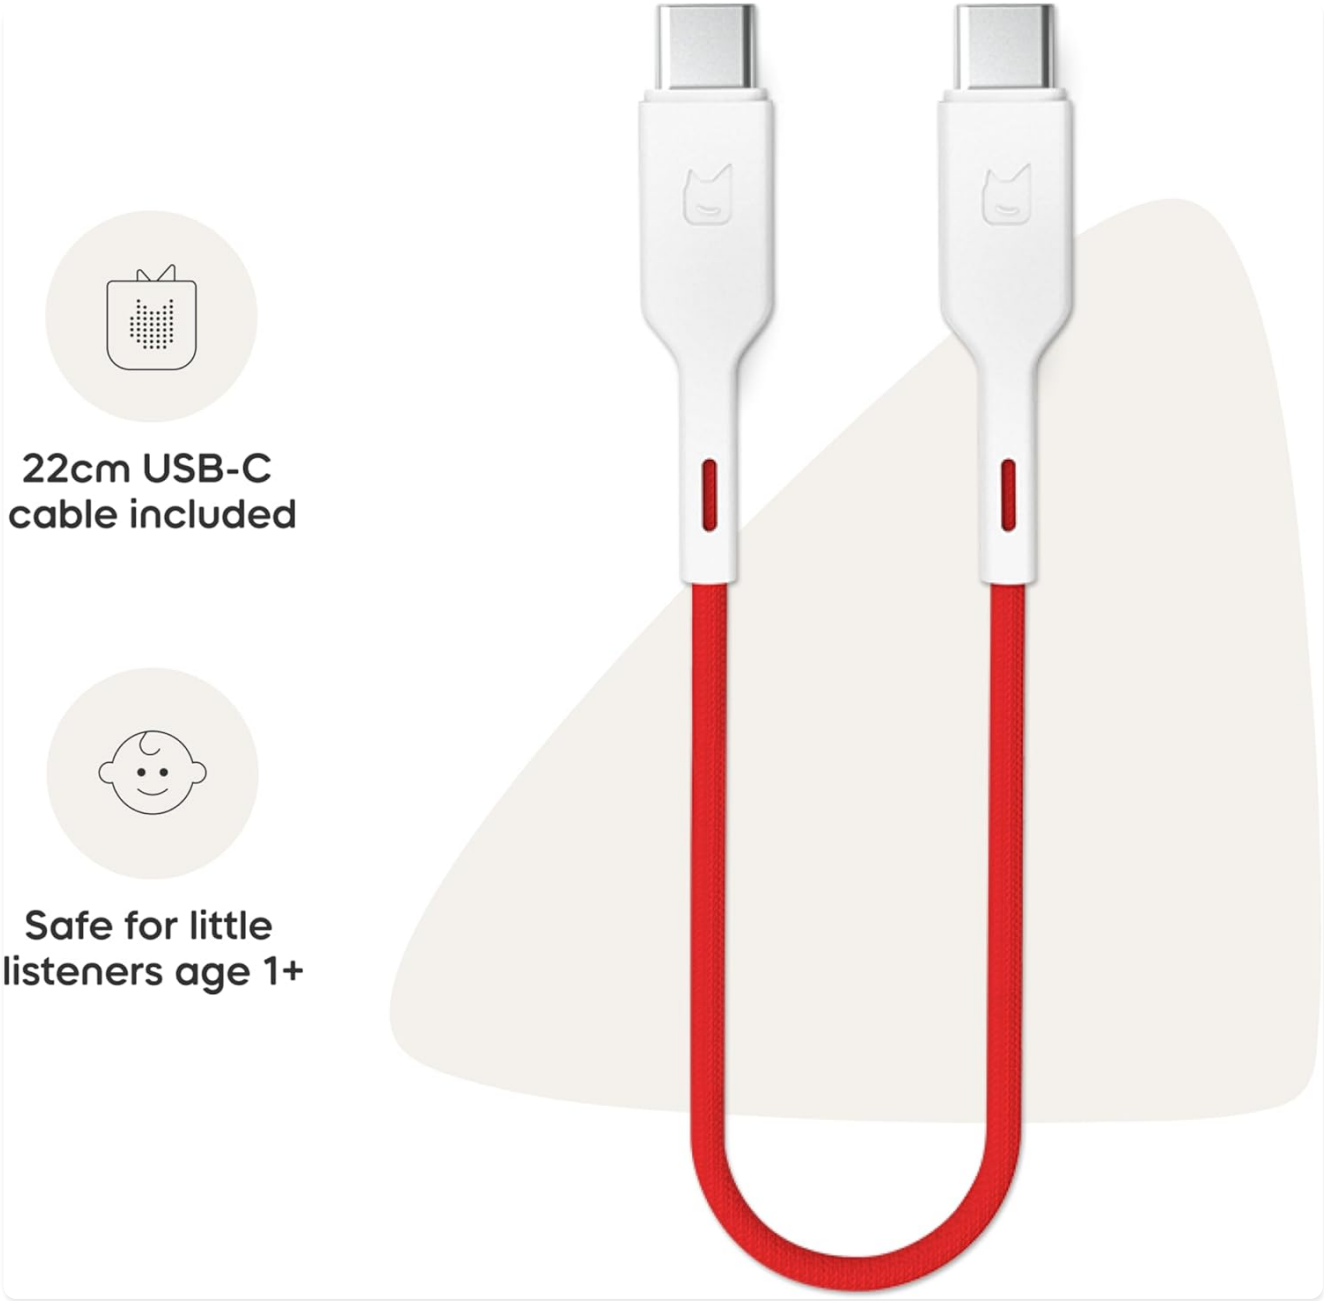

Image: The short USB-C charging cable, designed for child safety.

3. Operating Instructions

3.1 Basic Playback

- **Start Playback:** Place any Tonie audio character on top of the Toniebox. Playback begins automatically.
- **Adjust Volume:** Press the small "ears" on top of the Toniebox. Pressing the larger ear increases volume, and the smaller ear decreases it.
- **Change Tracks:** Tap the sides of the Toniebox to skip forward or backward through tracks.
- **Pause/Resume:** Remove the Tonie from the box to pause. Place it back on to resume.

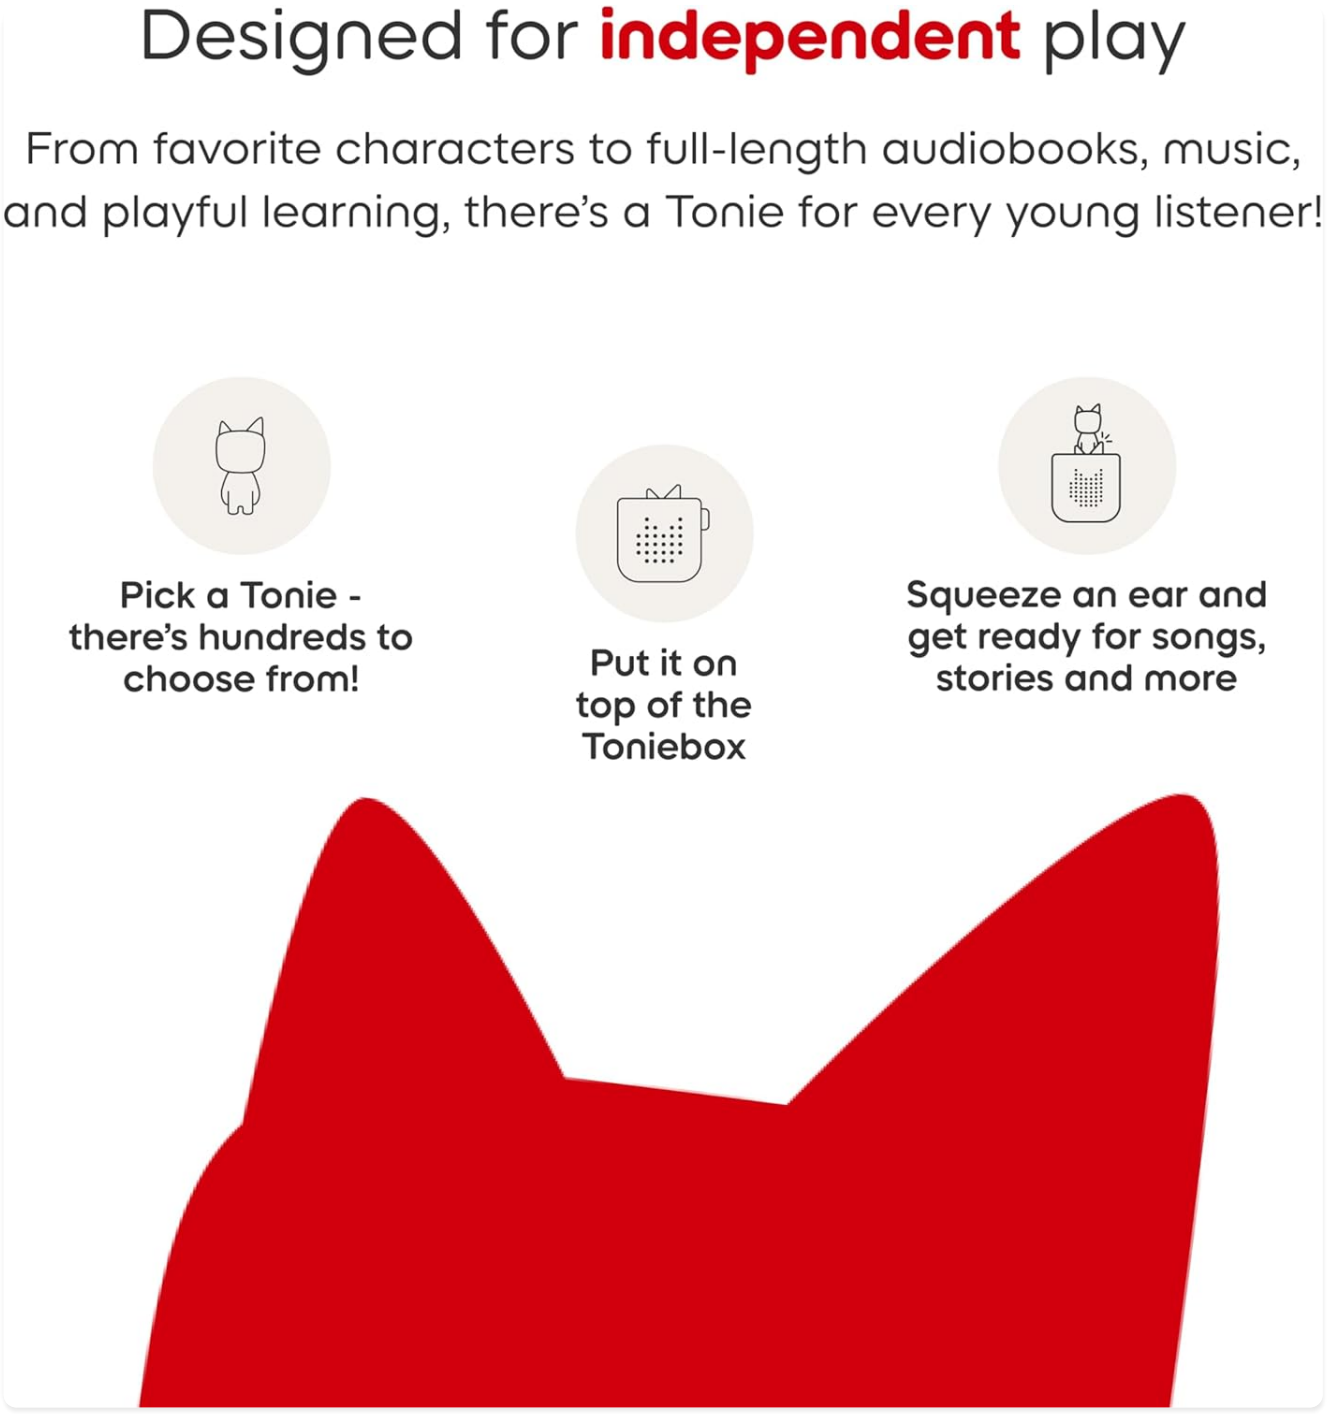

Image: Simple steps for independent play with the Toniebox 2.

3.2 Sleep Timer and Sunrise Alarm

The Toniebox 2 includes smart bedtime and wake-up features. These can be configured via the Tonies app to help establish sleep routines.

- **Sleep Timer with Light:** Set a duration for the Toniebox to play content and emit a soft light, gradually fading as the child falls asleep.
- **Sunrise Alarm:** Program the Toniebox to gently wake your child with light and sound at a set time.

Image: A child sleeping peacefully next to a Toniebox 2, highlighting its sleep timer function.

4. Key Features

- **Independent Play:** Kid-friendly, intuitive controls allow children to explore stories, songs, and games on their own.
- **Durability:** Built to last for ages 1-9+, supporting a wide range of Tonies and Tonieplay games.
- **Screen-Free Entertainment:** Provides a safe, ad-free experience without screens, microphones, or cameras.
- **Tonieplay:** Supports interactive games, adventures, challenges, and quizzes (Tonieplay controller sold separately).
- **Extensive Content Library:** Access hundreds of Tonies with new releases monthly, covering diverse stories, songs, and educational content.
- **Parental Control:** Monitor usage and manage settings via the Tonies app.

Image: Overview of the main features of the Toniebox 2.

5. Maintenance

- **Cleaning:** Wipe the Toniebox with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the Toniebox and Tonies in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge regularly.

6. Troubleshooting

6.1 Common Issues and Solutions

Issue	Possible Cause	Solution
Toniebox not turning on	Low battery; Power button not pressed correctly	Charge the Toniebox fully. Press and hold one of the ears for a few seconds to power on.
Tonie not playing content	Content not fully downloaded; Poor Wi-Fi connection	Ensure the Toniebox is connected to Wi-Fi and the Tonie is placed correctly. Allow time for content to download. Check Wi-Fi signal strength.
Sound issues (too low/high, distorted)	Volume settings; Speaker obstruction	Adjust volume using the Toniebox ears. Ensure speakers are not covered.

For further assistance, please refer to the official Tonies support website or contact customer service.

7. Specifications

Feature	Detail
Model Name	Toniebox 2
Brand	Tonies
Color	Cloud Pink
Item Model Number	Toniebox 2
UPC	840147443373
Product Dimensions	5"D x 5"W x 5"H
Item Weight	2.6 Pounds
Material	Cotton
Power Source	Battery Powered (1 Lithium Ion battery included)
Connectivity Technology	Wi-Fi
Control Method	Touch
Special Feature	Shockproof, USB Port, Network Ready
Recommended Uses	Indoor/Outdoor, Home entertainment for kids, Educational and interactive play, Bedtime and sleep routine support

8. Warranty and Support

The Toniebox 2 comes with a limited warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the official Tonies website or the warranty card included with your product.
For customer support, technical assistance, or to register your product, visit the official Tonies support portal or contact their customer service team directly. Contact information can typically be found on the Tonies website or in the product packaging.

Online Resources:

- Tonies Official Store on Amazon
- Official Tonies Website (General Support)

© 2026 Tonies. All rights reserved.