Panasonic ES-L341W-K

Panasonic Lamdash ES-L341W-K 3-Blade Electric Shaver User Manual

Model: ES-L341W-K | Brand: Panasonic

Components Setup Operation Safety Information Maintenance Troubleshooting Specifications Product Warranty & Support

1. Safety Information

Please read all safety instructions carefully before using this product to ensure safe and proper operation. Keep this manual for future reference.

- This product features sharp blades. Handle with care to prevent injury.
- The shaver is designed for wet and dry use, including in the shower. However, avoid pressing the blades too firmly against your face to prevent skin irritation.
- **Do not touch the shaver with water while it is connected to the AC adapter or charging stand for charging.**This poses a risk of electric shock.
- Ensure the shaver is properly cleaned after each use to maintain hygiene and performance.
- Keep out of reach of children.
- Only use the provided AC adapter and charging stand. Using unauthorized accessories may cause damage or malfunction.

2. Product Components

The Panasonic Lamdash ES-L341W-K shaver comes with the following components:

- Shaver Unit (ES-L341W-K)
- AC Adapter
- Charging Stand
- Dedicated Oil
- Cleaning Brush



Figure 2.1: Included Accessories
This image displays the Panasonic Lamdash ES-L341W-K shaver along with its standard accessories: the AC adapter, charging stand, a small bottle of dedicated oil, and a cleaning brush.

3. Setup

3.1 Initial Charging

Before first use, fully charge the shaver. A full charge takes approximately 1 hour.

1. Connect the AC adapter to the charging stand.
2. Place the shaver onto the charging stand. Ensure it is seated correctly.
3. Plug the AC adapter into a power outlet. The charging indicator on the shaver or stand will illuminate.
4. Once charging is complete, the indicator light will change or turn off, depending on the model.



Figure 3.1: Shaver on Charging Stand

This image illustrates the shaver correctly positioned on its charging stand, ready for charging. The AC adapter would be connected to the back of the stand.

3.2 Attaching/Detaching Outer Foil

The outer foil unit can be detached for cleaning or replacement.

1. To detach: Press the release buttons on both sides of the shaver head and pull the outer foil unit upwards.
2. To attach: Align the outer foil unit with the shaver body and press down until it clicks into place.

---

4. Operation

4.1 Shaving Technique

For an effective and comfortable shave, follow these guidelines:

- Turn on the shaver.
- Hold the shaver at a right angle (90 degrees) to your skin.
- Stretch your skin taut with your free hand.
- Move the shaver slowly against the direction of your beard growth.
- The shaver features a **Close-Contact Swing Head** that moves 30 degrees left and right to follow facial contours for a close shave.
- The **High-Speed Linear Motor** provides approximately 13,000 strokes/minute (39,000 cutting actions/minute) for powerful and efficient shaving, even on thick beards.



Figure 4.1: Proper Shaving Technique
This image shows a user holding the shaver against their neck, illustrating the recommended angle and motion for effective shaving.



Figure 4.2: Close-Contact Swing Head

This diagram highlights the flexible movement of the shaver head, which pivots 30 degrees horizontally to adapt to facial contours.

4.2 Using the Pop-up Trimmer

The shaver includes a sharp pop-up trimmer for precise grooming.

1. Slide the trimmer switch upwards to engage the pop-up trimmer.
2. Use the trimmer for sideburns, mustache, or pre-cutting longer beard hairs before main shaving.
3. After use, slide the trimmer switch downwards to retract the trimmer.



Figure 4.3: Pop-up Trimmer

This image shows the integrated pop-up trimmer on the back of the shaver, designed for precise trimming and pre-cutting.

5. Maintenance

Regular cleaning and maintenance ensure optimal performance and longevity of your shaver.

5.1 Water-Through Cleaning

The shaver is designed for easy water-through cleaning without removing the outer foil.

1. After use, turn off the shaver.
2. Hold the shaver head under running water.
3. Turn the shaver on briefly to allow water to flow through the blades and rinse out beard clippings.
4. Turn off the shaver and shake off excess water.
5. Allow the shaver to air dry completely before storing or charging.

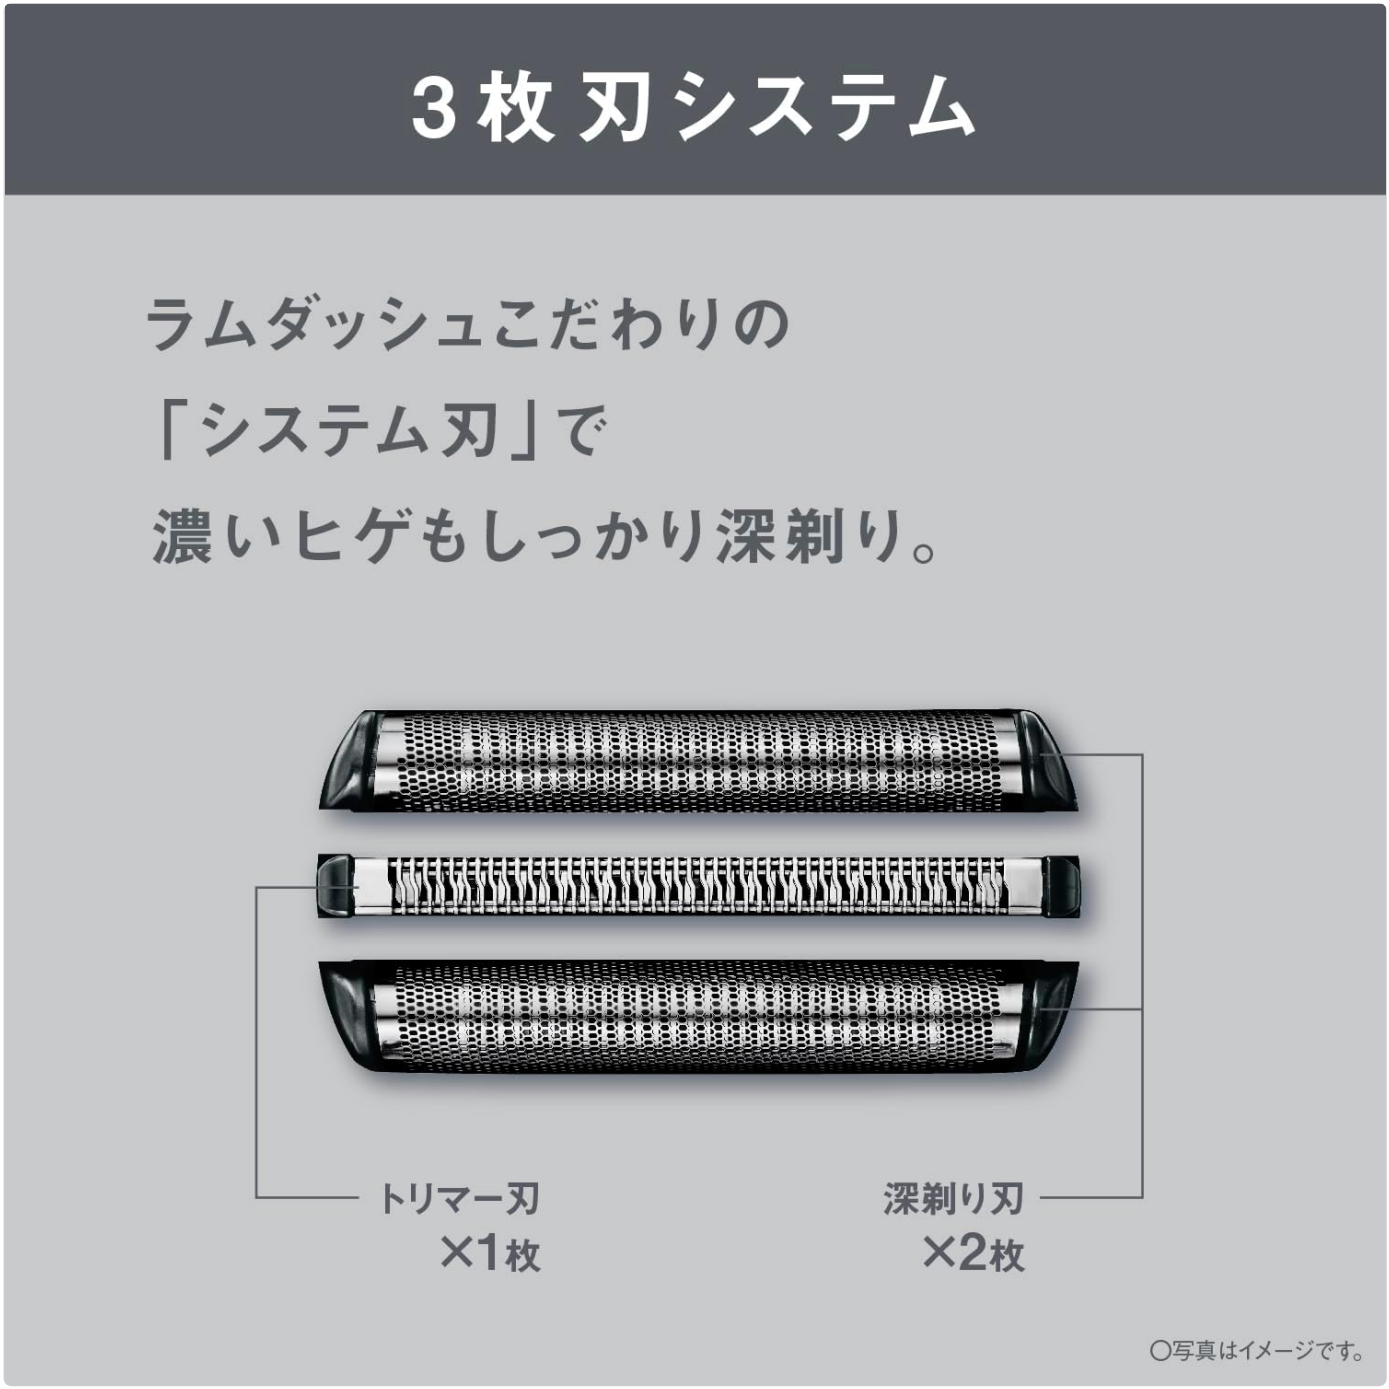


Figure 5.1: Water-Through Cleaning
This image illustrates the process of rinsing the shaver head directly under running water to remove beard clippings, utilizing its waterproof design.

5.2 Oiling the Blades

Apply a drop of dedicated oil to the outer foil and inner blades periodically (e.g., once a week) to maintain smooth operation and cutting performance.

1. After cleaning and drying, apply one or two drops of the dedicated oil to the outer foil.
2. Turn on the shaver for a few seconds to distribute the oil evenly.

5.3 Blade Replacement

For continued optimal shaving performance, replace the outer foil and inner blades at recommended intervals.

- **Outer Foil:** Replace approximately every 1 year.
- **Inner Blades:** Replace approximately every 2 years.

Replacement parts can be purchased separately. Refer to the product packaging or Panasonic's official website for compatible replacement blade models.



Figure 5.2: Blade Replacement Guide
This image provides a visual guide for the recommended replacement frequency of the outer foil (approximately 1 year) and inner blades (approximately 2 years) to maintain shaving comfort.

6. Troubleshooting

If you encounter any issues with your shaver, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.

Problem	Possible Cause	Solution
Poor shaving performance.	Blades are dull or clogged with hair.	Clean the shaver thoroughly. Replace outer foil and/or inner blades if necessary.
Shaver makes unusual noise.	Lack of lubrication or foreign object.	Apply dedicated oil to the blades. Check for any trapped debris and clean.
Skin irritation after shaving.	Incorrect shaving technique or dull blades.	Ensure proper shaving technique (do not press too hard). Consider replacing blades.

If the problem persists after trying these solutions, please contact Panasonic customer support.

7. Specifications

Feature	Detail
Model Number	ES-L341W-K
Blade System	3-Blade
Motor Type	High-Speed Linear Motor (approx. 13,000 strokes/min)
Head Type	Close-Contact Swing Head (30-degree left/right movement)
Power Source	Rechargeable
Charging Time	Approx. 1 hour (rapid charge)
Charging System	AC Adapter / Charging Stand
Cleaning	Whole body washable, Water-through cleaning
Dimensions (H x W x D)	15.5 x 6.4 x 5.0 cm (approx. 6.1 x 2.5 x 2.0 inches)
Weight	Approx. 155g (excluding cap)
Color	Black
Blade Material	Stainless Steel
Country of Origin	Main Unit: Japan / AC Adapter, Charging Stand: China
Included Accessories	AC Adapter, Charging Stand, Dedicated Oil, Cleaning Brush

8. Warranty & Support

8.1 Manufacturer's Warranty

This Panasonic product is covered by a manufacturer's warranty for **12 months** from the date of purchase. Please retain your proof of purchase for warranty claims.

The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear of consumable parts like blades.

8.2 Customer Support

For product inquiries, technical assistance, or warranty service, please contact Panasonic customer support through their official website or the contact information provided in your product packaging.
You can find more information and support resources on the official Panasonic website: **www.panasonic.com**

© 2026 Panasonic Corporation. All rights reserved.