Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Edillas 8563B

Edillas Digital Kids Watch Instruction Manual

Model: 8563B

Introduction

Thank you for choosing the Edillas Digital Kids Watch Model 8563B. This watch is designed for children aged 6-18, offering multiple functions including time display, alarm, stopwatch, and a colorful LED backlight. It features a durable, shockproof design and 30M water resistance, making it suitable for daily activities, school, and outdoor sports. Please read this manual carefully to understand how to operate and maintain your watch.



Image: Overview of the Edillas Digital Kids Watch highlighting its multifunctional features.

Watch Buttons Overview

The Edillas Digital Kids Watch features four main buttons for operation:

- **LIGHT (L)**: Activates the LED backlight.
- **MODE (M)**: Cycles through different display modes (Time, Alarm, Stopwatch).
- **RESET (R)**: Used for resetting values or confirming settings.
- **START (S)**: Used for starting/stopping functions or adjusting values.

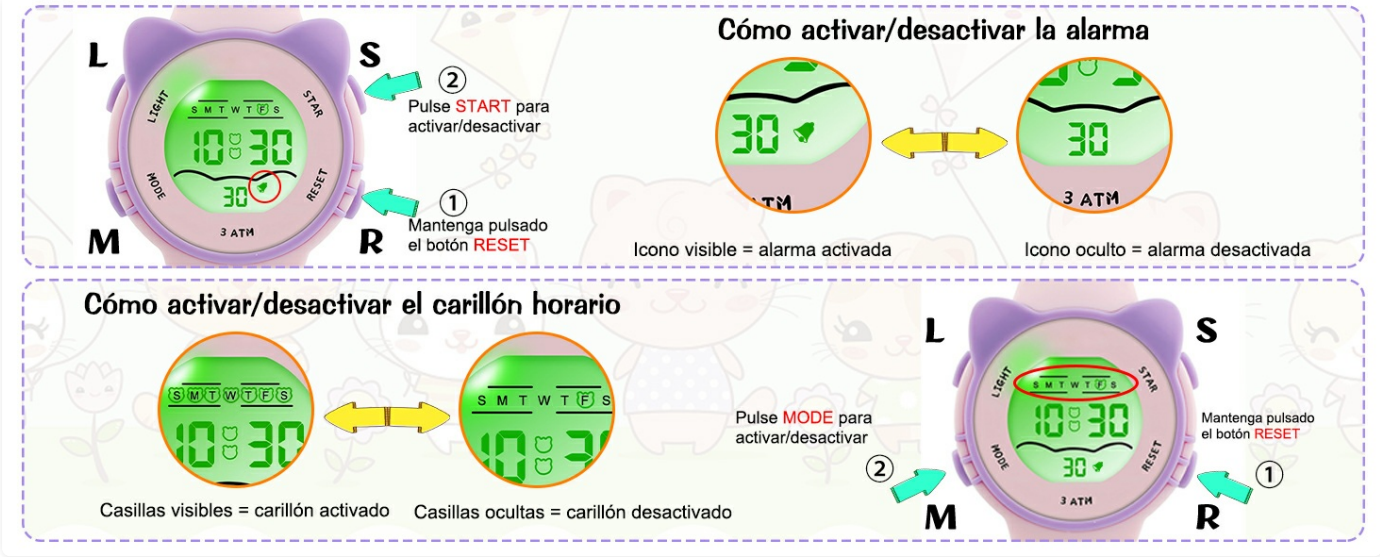

Image: Diagram illustrating the watch's buttons and their functions for alarm and hourly chime.

Setup

1. Setting Time and Date

1. From the normal time display, press the**MODE (M)** button three times to enter time setting mode. The seconds will flash.
2. Press the **RESET (R)** button to cycle through seconds, hours, minutes, month, date, and day of the week.
3. Use the **START (S)** button to adjust the flashing value.
4. Once all settings are correct, press the**MODE (M)** button to return to the normal time display.

2. 12/24 Hour Format

- In normal time display, press the**START (S)** button to toggle between 12-hour and 24-hour formats.

Operating Instructions

1. Using the Alarm

1. From the normal time display, press the**MODE (M)** button once to enter alarm setting mode. The hour will flash.
2. Press the **RESET (R)** button to switch between setting hours and minutes.
3. Use the **START (S)** button to adjust the flashing value.
4. To activate/deactivate the alarm: In alarm setting mode, press the**START (S)** button. A bell icon will appear when the alarm is active.
5. Press the **MODE (M)** button to exit alarm setting mode.

2. Using the Stopwatch

1. From the normal time display, press the**MODE (M)** button twice to enter stopwatch mode.
2. Press the **START (S)** button to begin timing.
3. Press the **START (S)** button again to pause timing.
4. Press the **RESET (R)** button to reset the stopwatch to zero.
5. Press the **MODE (M)** button to exit stopwatch mode.

3. Activating the LED Backlight

- Press the **LIGHT (L)** button to illuminate the display. The watch features a 7-color LED backlight.

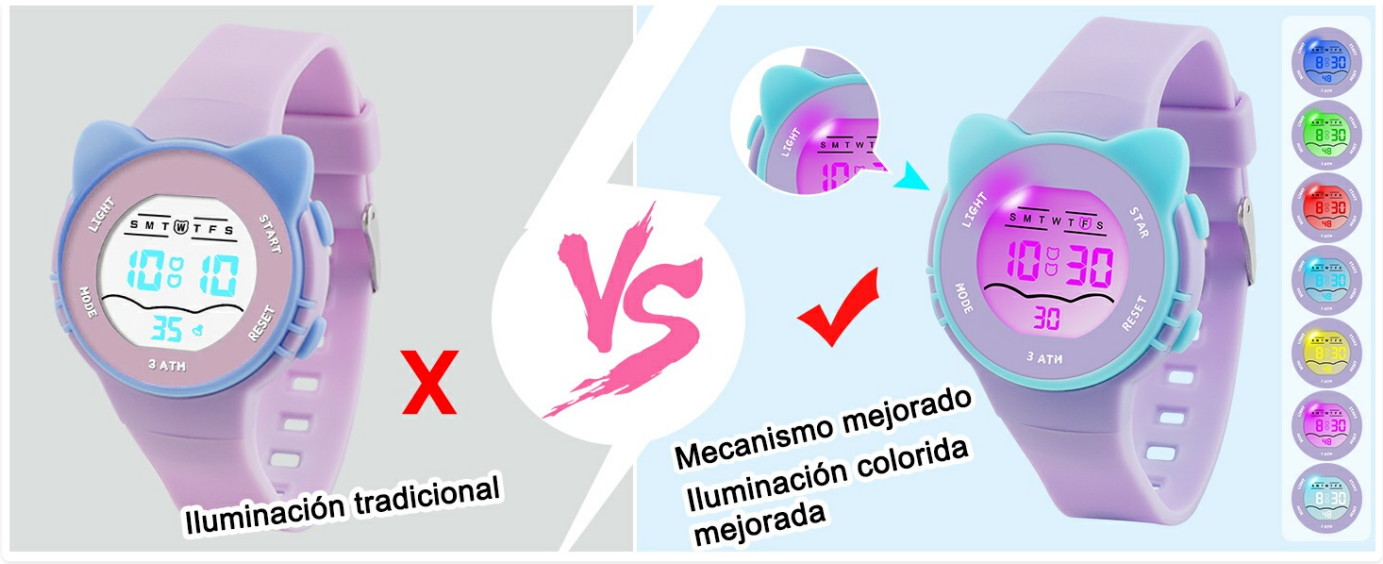

Image: The watch's LED backlight feature, showing various color options in a dark environment.

Maintenance

Water Resistance (30M / 3ATM)

The Edillas Digital Kids Watch is designed with 30M (3ATM) water resistance. This means it is suitable for daily splashes, rain, and hand washing. It is **not** recommended for swimming, diving, hot showers, saunas, or rinsing with hot water.**Do not press any buttons while the watch is submerged in water.**



Image: Demonstrating the watch's 30M water resistance during hand washing.

General Care

- Clean the watch regularly with a soft, dry cloth.
- Avoid exposing the watch to extreme temperatures or strong magnetic fields.
- Protect the watch from drops, impacts, and violent bending to prevent damage.

Troubleshooting

- **Display is blank or dim:** The battery may be low. While the battery is included, professional replacement is recommended if the display remains dim after a short period of use.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not feature a lock). Try pressing the buttons firmly. If issues persist, a soft reset (removing and reinserting the battery, if accessible) might be needed, but this is generally not user-serviceable.
- **Time is inaccurate:** Re-set the time following the instructions in the "Setup" section.

Specifications

Feature	Detail
Model Number	8563B
Display Format	Digital
Movement Type	Japanese Automatic
Special Features	Alarm, Chronograph (Stopwatch), Lightweight, Scratch Resistant, Shock Resistant
Power Source	Battery (1 non-standard battery included)
Strap Type	TPU Strap
Water Resistance Level	30 Meters (3ATM)
Case Diameter	3.7 Centimeters
Case Thickness	1.6 Centimeters
Band Width	1.6 Centimeters
Band Length	23.5 Centimeters
Product Weight	26 Grams
Material (Strap)	Thermoplastic Polyurethane (TPU)
Material (Case)	Metal
Crystal Type	Fiberglass



Image: Detailed dimensions of the Edillas Digital Kids Watch.

Warranty and Support

Your Edillas Digital Kids Watch Model 8563B comes with a**one-year limited warranty**. Edillas is committed to providing excellent customer service.

- **2-Year After-Sales Service:** We offer extended support for your product.
- **30-Day Free Returns:** If you are not satisfied, you can return the product within 30 days.
- **12-Hour Online Customer Service:** Our support team is available to assist you promptly.

For any inquiries or support, please contact us at: yadelaiaftersale@163.com



Image: Edillas customer support details.

© 2026 Edillas. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FKY1TJY2

More documents and user manuals: **https://manuals.plus/**