Ninja AS101CY

Ninja Crispi Pro 6-in-1 Glass Air Fryer (Model AS101CY) Instruction Manual

User Manual

Introduction

The Ninja Crispi Pro Glass Countertop Air Fryer is an 1800-watt appliance designed for versatile cooking. It features 6 customizable functions and precise temperature control to deliver consistent results. This system includes 6-quart and 2.5-quart CleanCrisp Glassware, making it suitable for preparing meals for various group sizes, from quick snacks to family dinners for up to 10 people. The thermal shock-resistant glass containers are non-toxic, durable, and safe for meal preparation, microwave use, freezing, and dishwashing.



Image: The Ninja Crispi Pro Air Fryer unit shown with both the 6-quart and 2.5-quart CleanCrisp Glassware containers, highlighting its versatile capacity.

Components Overview

Your Ninja Crispi Pro system includes the following components:

- Ninja Crispi Pro Glass Countertop Air Fryer Unit
- 6-quart CleanCrisp Glassware
- 2.5-quart CleanCrisp Glassware
- Removable Modular Base
- 2 Crisper Plates
- 2 Storage Lids



Image: A comprehensive view of all included components: the main air fryer unit, 6-quart and 2.5-quart CleanCrisp Glassware, crisper plates, storage lids, and the removable modular base.



Image: The Ninja Crispi Pro Air Fryer is shown with both the 6-quart container (roasting a chicken) and the 2.5-quart container (baking rolls) in a kitchen setting.

Setup

1. **Unpacking and Placement:** Carefully remove all components from the packaging. Place the main air fryer unit on a stable, heat-resistant countertop. The unit features fixed heat-safe feet, allowing safe placement on various surfaces like granite, laminate, quartz, butcher block, and marble.
2. **Initial Cleaning:** Before first use, wash all CleanCrisp Glassware, crisper plates, and storage lids with warm, soapy water or in a dishwasher. Rinse thoroughly and dry.
3. **Modular Base Adjustment:** The modular base is designed to accommodate 2.5-quart, 4-quart (sold separately), and 6-quart CleanCrisp Glassware. Adjust the base to the appropriate height for the container you intend to use.



Image: A user demonstrates adjusting the modular base of the Ninja Crispi Pro to fit different sizes of CleanCrisp Glassware.



Image: A visual guide illustrating the modular base's adjustable positions to accommodate 2.5-quart, 4-quart, and 6-quart CleanCrisp Glassware.

Operating Instructions

The Ninja Crispi Pro offers intuitive controls for various cooking functions:

1. **Power On/Off:** Press the power button to turn the unit on or off.
2. **Function Selection:** Use the control knob to select one of the 6-in-1 functions: Max Crisp, Air Fry, Bake/Proof, Roast, Recrisp, or Dehydrate.
3. **Temperature Control:** Adjust the cooking temperature using the dedicated temperature button and control knob. The precise temperature control ensures accurate and consistent results.
4. **Time Setting:** Set the desired cooking time using the time button and control knob.
5. **Loading Food:** Place your food in the appropriate CleanCrisp Glassware with a crisper plate inserted for optimal air circulation. Slide the loaded glassware into the modular base.
6. **Monitoring Progress:** The transparent glass design allows you to visually monitor your food as it cooks without opening the unit, preserving heat and cooking efficiency.



Image: A detailed view of the control panel, showing the power, temperature, and time buttons, along with the central control knob for function selection.



Image: A visual representation of the six versatile cooking functions: Max Crisp, Air Fry, Bake/Proof, Roast, Recrisp, and Dehydrate.



Image: A whole chicken with vegetables is visible through the transparent 6-quart CleanCrisp Glassware as it roasts in the air fryer.



Image: The 2.5-quart CleanCrisp Glassware is shown being inserted into the air fryer, ideal for preparing snacks, sides, or smaller meals.



Image: A visual guide demonstrating the seamless workflow of the CleanCrisp Glassware, from preparing ingredients to cooking, serving, storing, and recrisping leftovers.

Maintenance & Cleaning

Maintaining your Ninja Crispi Pro is simple, thanks to its durable and easy-to-clean components:

- **Dishwasher Safe:** All CleanCrisp Glassware, crisper plates, and storage lids are dishwasher safe for convenient cleaning.
- **Non-Toxic Materials:** The CleanCrisp Glassware is designed for non-toxic cooking and storing, free from PFAS and PTFE.
- **Thermal Shock Resistant:** The glassware is thermal shock resistant, allowing you to transfer it directly from the freezer to the air fryer for quick cooking.
- **Leakproof Storage Lids:** Use the snap-lock lids to keep meals fresh and prevent spills, ideal for meal prepping or storing leftovers.



Image: This graphic emphasizes the non-toxic nature of CleanCrisp Glassware, confirming it is free from PFAS and PTFE for safe cooking and storage.

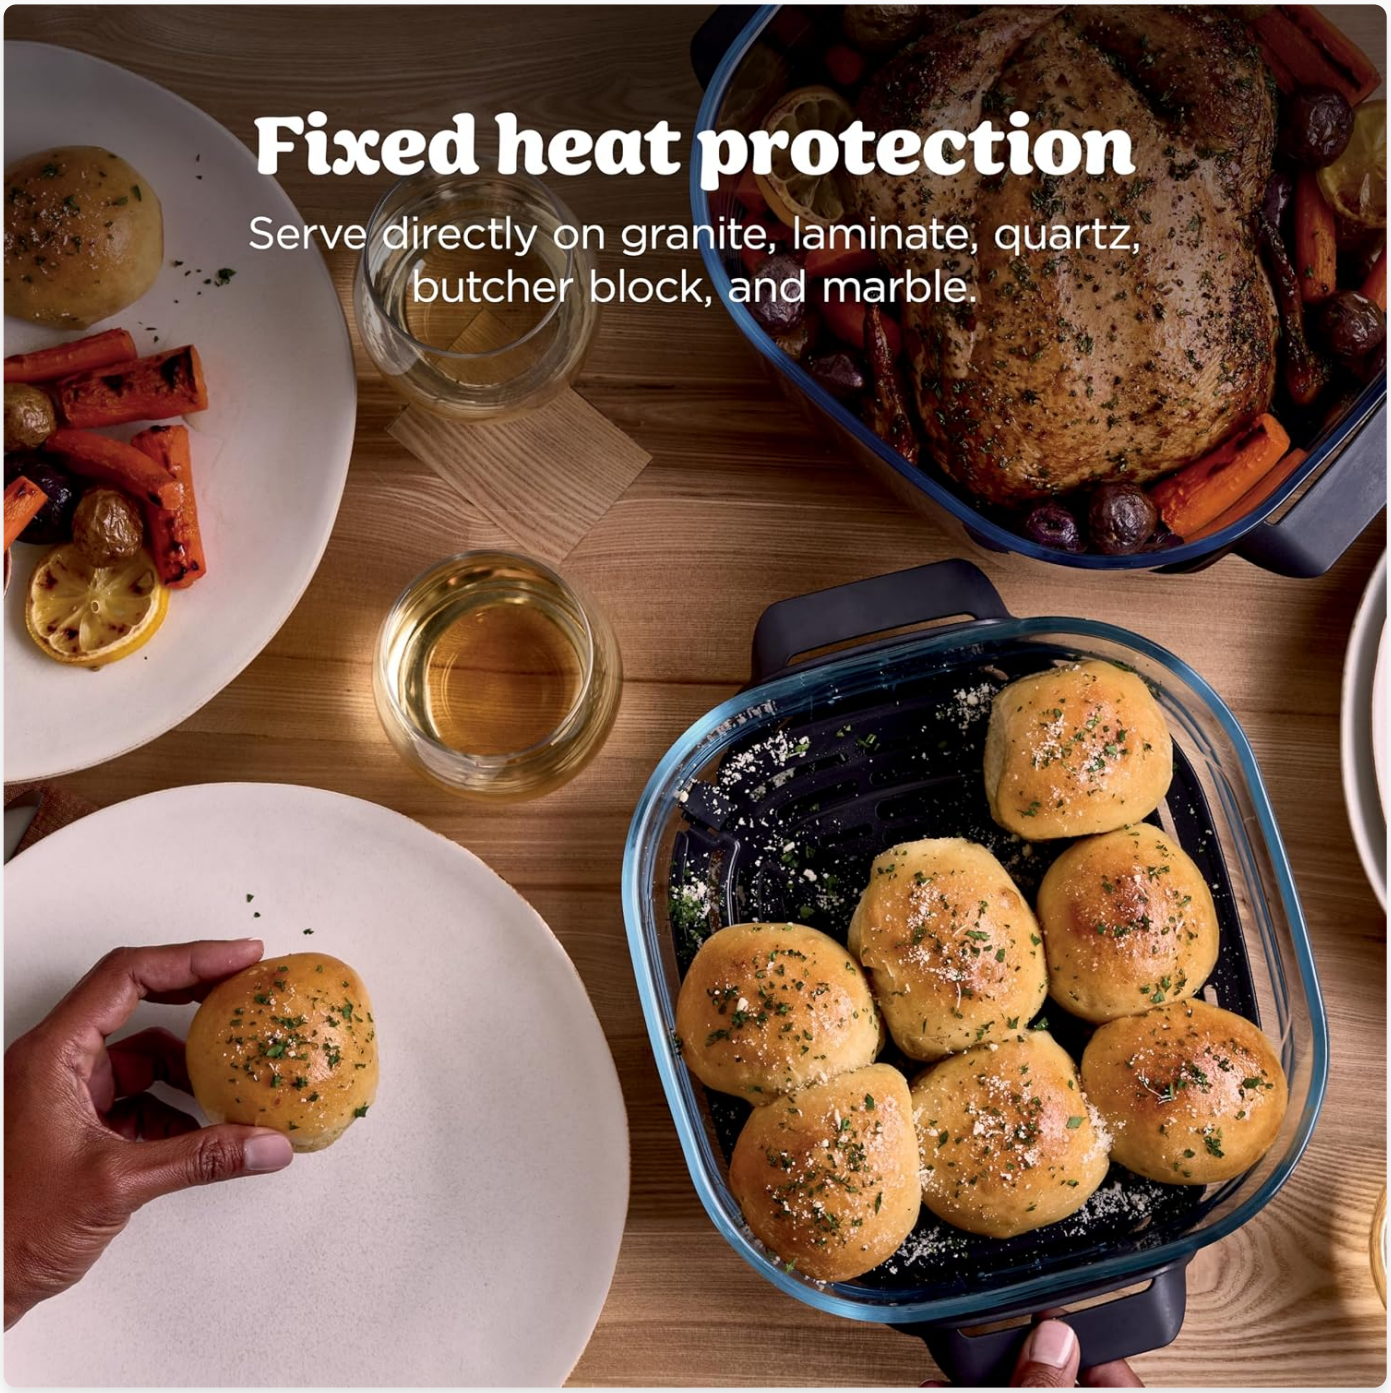

Image: A split image visually demonstrates the thermal shock resistance of the glassware, showing food transitioning from frozen to crispy in minutes.

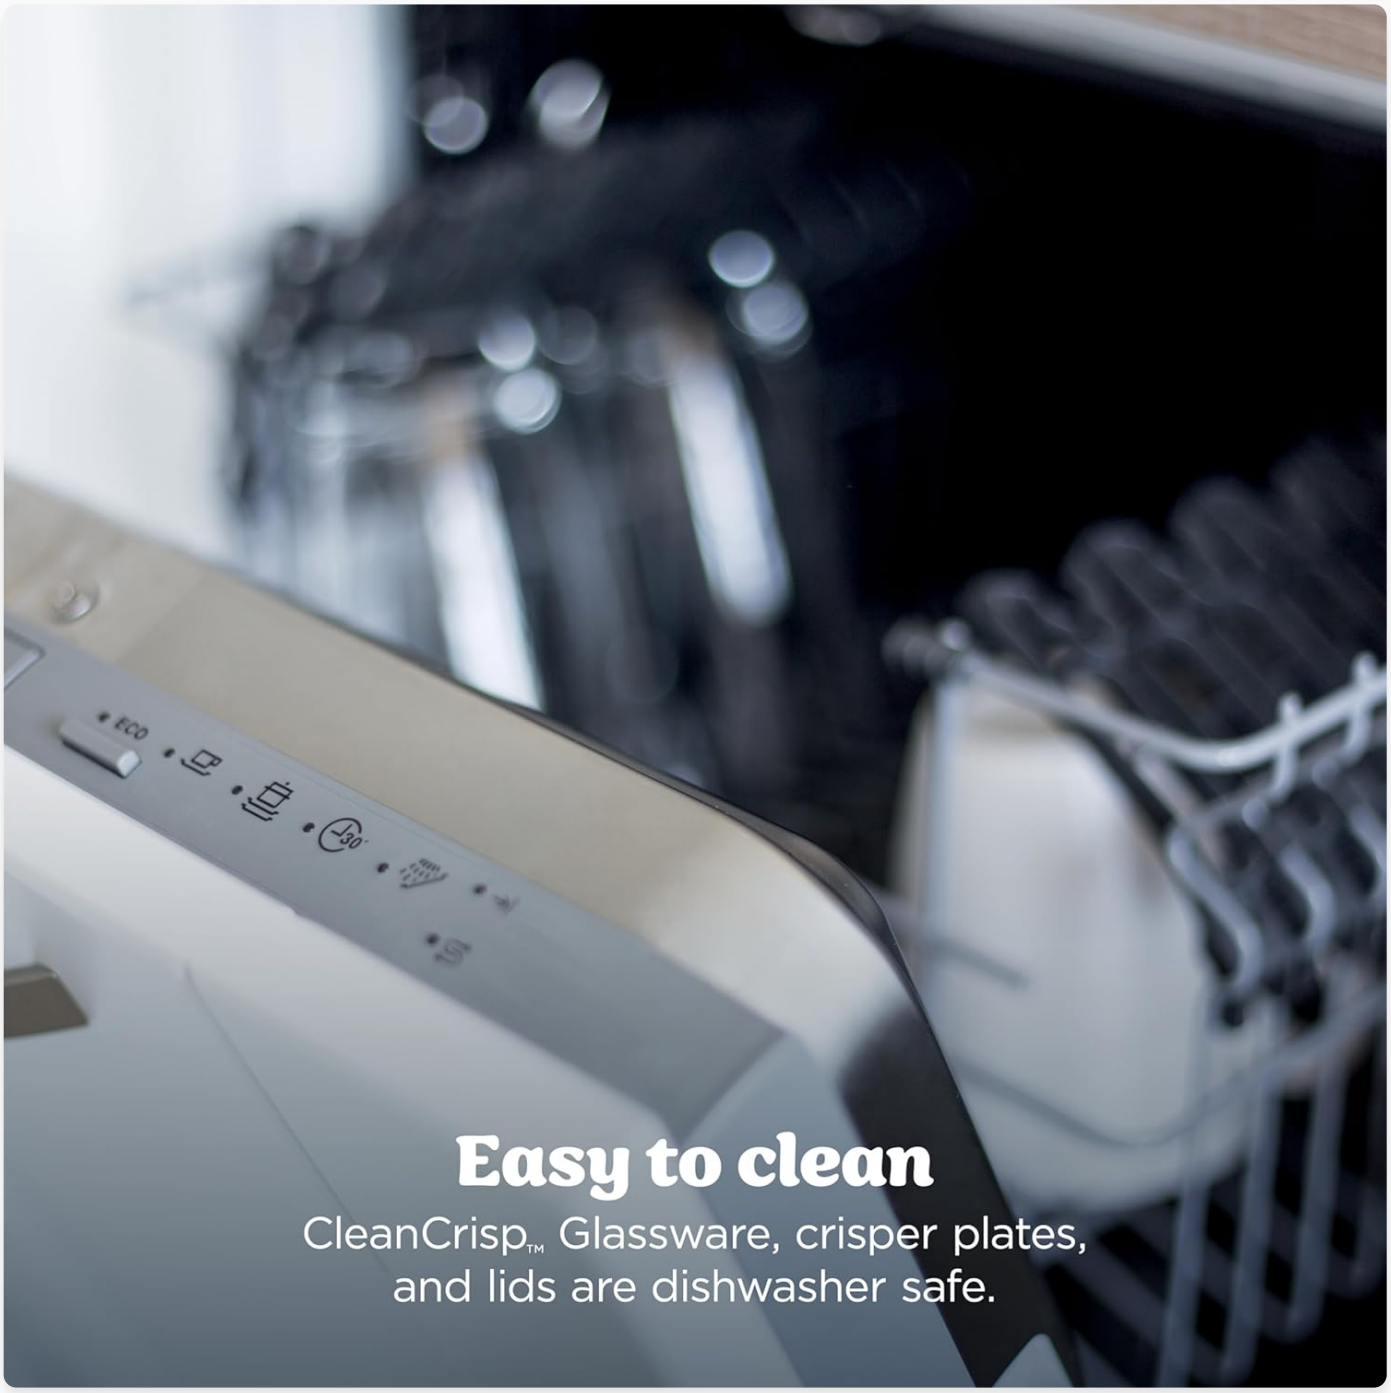

Image: CleanCrisp Glassware, crisper plates, and lids are shown inside a dishwasher, illustrating their dishwasher-safe design for easy cleanup.

Troubleshooting

If you encounter any issues with your Ninja Crispi Pro, consider the following common troubleshooting steps:

- **Unit Not Powering On:** Ensure the power cord is securely plugged into a functional electrical outlet.
- **Food Not Cooking Evenly:** Ensure the crisper plate is correctly inserted and not overloaded. For best results, arrange food in a single layer and shake or flip halfway through cooking.
- **Smoke Emission:** A small amount of smoke during initial use is normal. If excessive smoke occurs, ensure the unit and accessories are clean and free of food debris or grease buildup.
- **Error Codes:** If an error code appears on the display, refer to the comprehensive owner's guide for specific instructions related to that code.

Specifications

Feature	Detail
Model Number	AS101CY
Brand	Ninja
Special Feature	Automatic Shut-Off
Product Dimensions	11.73"D x 11.85"W x 12.22"H
Color	Cyberspace
Capacity	6 Quarts (main container)
Material	Metal (unit), Glass (containers)
Recommended Uses	Air Fry, Bake, Roast, Recrisp, Dehydrate, Max Crisp
Output Wattage	1500 Watts
Voltage	120 Volts
Control Method	Push Button, Rotary Knob
Nonstick Coating	No (glass containers are non-toxic)
Dishwasher Safe	Yes (glassware, crisper plates, lids)
Max Temperature Setting	395 Degrees Fahrenheit
Item Weight	27.1 pounds
UPC	622356705530

What's in the Box

The Ninja Crispi Pro Glass Countertop Air Fryer includes:

- Ninja Crispi Pro Glass Countertop Air Fryer
- 6-qt CleanCrisp Glassware
- 2.5-qt CleanCrisp Glassware
- Removable modular base
- 2 crisper plates
- 2 storage lids
- Chef-inspired recipe book

Warranty & Support

For detailed warranty information, product registration, and customer support, please visit the official Ninja website or contact their customer service department. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question