Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Garvee SNOWBLOWER-S

Garvee 12" Cordless Snow Blower User Manual

Model: SNOWBLOWER-S

Introduction

The Garvee 12" Cordless Snow Blower is a lightweight and powerful tool designed for efficient snow removal from driveways, walkways, decks, and stairs. Weighing only 13 lbs, it features a 15A motor powered by a 20V 4.0Ah lithium-ion battery, offering a 16.5 ft snow throwing distance and a 25-minute runtime. Its ergonomic design and dual safety switch ensure comfortable and dependable use.



Figure 1: Overview of the Garvee 12" Cordless Snow Blower and its main components.

Setup

Follow these steps to assemble and prepare your Garvee 12" Cordless Snow Blower for use:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the 'What You Will Get' section are present.
2. **Handle Assembly:**
   The main handle shaft consists of multiple sections. Slide the lower section into the main snow blower unit, ensuring it aligns correctly. Twist the threaded collar to secure the connection firmly. Repeat this process for the upper handle section, connecting it to the lower section.
3. **Auxiliary Handle Attachment:**
   Attach the auxiliary handle to the main shaft. Loosen the blue plastic cap screw, position the handle to your preferred ergonomic angle, and then tighten the cap screw to secure it.
4. **Battery Installation:**

Insert the fully charged 20V 4.0Ah battery into the battery slot on the main handle until it clicks securely into place. To remove, press the release buttons on both sides of the battery and slide it out.



Figure 2: Visual guide for assembling the snow blower's handle sections.

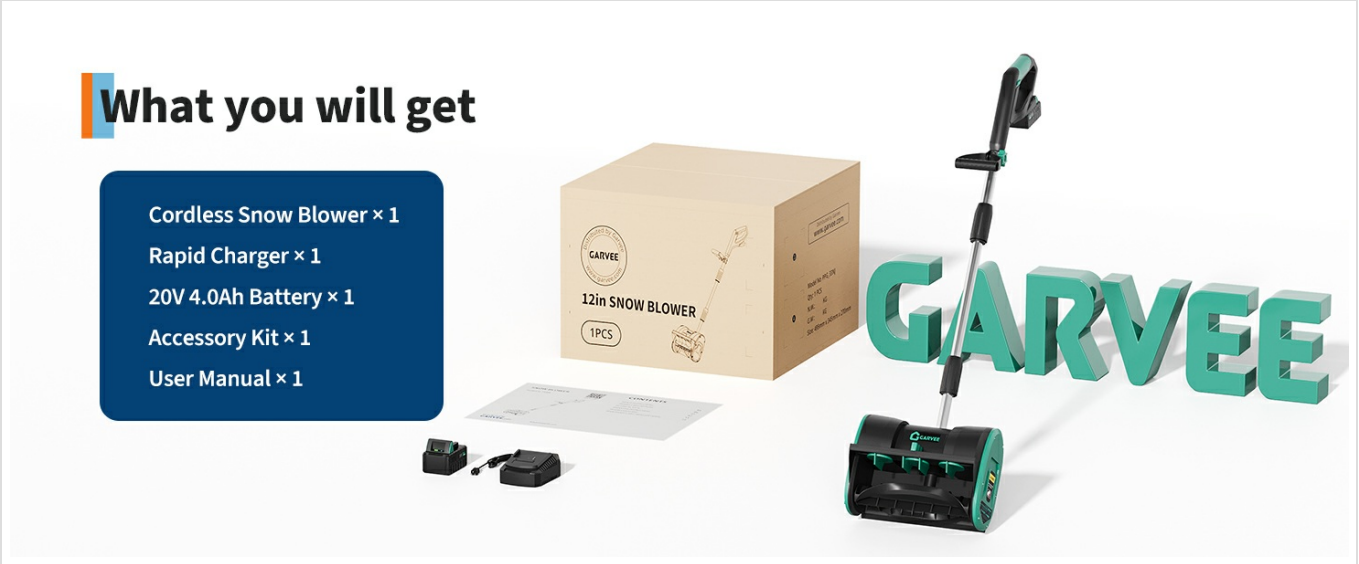

Figure 3: Package contents for the Garvee 12" Cordless Snow Blower.

Operating Instructions

Before operating, ensure the battery is fully charged and securely installed. Always wear appropriate safety gear, including eye protection and sturdy footwear.

1. **Starting the Unit:** To start the snow blower, first press and hold the dual safety switch (usually a small button on the side of the handle), then squeeze the main trigger switch. Release the safety switch once the unit is running.
2. **Clearing Snow:** Push the snow blower forward at a steady pace. The 12-inch clearing width and 6-inch clearing depth are ideal for light to moderate snowfalls.
3. **Adjusting Throw Direction:** The adjustable snow guide plate allows you to rotate the snow discharge direction by +/- 30 degrees. Adjust this to direct snow away from cleared areas or sensitive objects.
4. **Optimal Use:** For best results, clear snow shortly after it falls. Avoid attempting to clear heavy, wet, or icy snow that exceeds the unit's capacity.



Figure 4: Clearing width and depth capabilities.



Figure 5: Snow throwing distance of up to 16.5 feet.



Figure 6: Adjustable throwing angle and typical runtime.



Figure 7: Effective for garden snow clearing.

Official Product Videos

▶ **Watch video online**
Snow Shovel 12-Inch Cordless Snow Blower, Battery Powered

Video 1: Demonstrates the Garvee 12-inch Cordless Snow Blower in action, highlighting its ease of use and snow clearing capabilities. This video provides a general overview of the product's operation.

▶ **Watch video online**
12 inch Cordless Snow Shovel, 13" Electric Snow Blower 20V

Video 2: Shows the Garvee 12-inch Cordless Snow Shovel clearing snow, focusing on its compact design and effectiveness in various snow conditions.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your snow blower.

- **Battery Charging:** Always charge the 20V 4.0Ah battery using the provided quick charger. A full charge typically takes 90 minutes. Store the battery and charger indoors during winter to maintain battery life and performance.
- **Scraper Bar Replacement:** The scraper bar, located at the bottom front of the unit, is designed to wear down over time. If you notice a decrease in clearing efficiency or excessive wear, it can be replaced. Contact Garvee support for replacement parts and instructions.
- **Cleaning and Storage:** After each use, remove any snow or debris from the unit. Store the snow blower in a dry, protected area when not in use.



Figure 8: Battery charging process and duration.

Troubleshooting

If you encounter issues with your Garvee 12" Cordless Snow Blower, refer to the following common solutions:

- **Unit Not Starting:** Ensure the battery is fully charged and properly seated. Confirm that the dual safety switch is pressed before engaging the main trigger.
- **Reduced Snow Throwing Distance:** Check for any obstructions in the impeller or discharge chute. Ensure the scraper bar is not excessively worn. Heavy, wet snow may also reduce throwing distance.
- **Battery Drains Quickly:** Ensure the battery is stored at room temperature when not in use, especially in cold weather. Extreme cold can significantly reduce battery performance.
- **Safety Note:** Always use the dual safety switch to prevent accidents. Be cautious of rotating parts during operation.

Specifications

Feature	Specification
Brand	Garvee
Model Number	SNOWBLOWER-S
Power Source	Battery Powered (20V 4.0Ah Lithium-ion)
Engine Type	Electric
Clearing Width	12 Inches
Ideal Snow Depth	4.7 Inches (up to 6 inches)
Maximum Throw Distance	16.5 Feet
Product Dimensions (D x W x H)	37.5" x 10" x 13"
Item Weight	13 lbs
Battery Charging Time	90 Minutes
Approximate Runtime	25-40 Minutes (depending on snow conditions)
Adjustable Throwing Angle	+/- 30 Degrees
UPC	199641497390

Warranty and Support

For warranty information, product support, or to purchase replacement parts, please visit the official Garvee website or contact customer service.

- **Garvee Support Website:** www.garvee.com/support
- **Garvee Store:** Visit the Garvee Store on Amazon

© 2026 Garvee. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FM756F8L

More documents and user manuals: **https://manuals.plus/**