BESNOOW HD10

BESNOOW Portable Blender HD10

User Manual

Introduction Safety Components Setup Operation Maintenance Troubleshooting Specifications Wa
& Support

1. Introduction

The BESNOOW Portable Blender HD10 is a compact and powerful personal blender designed for preparing shakes, smoothies, and other blended drinks on the go. Featuring a 360W motor and 6 stainless steel blades, it offers efficient blending for a variety of ingredients. Its rechargeable battery and portable design make it suitable for kitchen, travel, gym, and office use.

Image 1.1: The BESNOOW Portable Blender HD10, ready for use with fresh ingredients.

2. Important Safety Information

Please read all safety instructions carefully before using the appliance.

- **Do Not Blend While Charging:** For safety reasons, avoid operating the blender when it is connected to a power source for charging.
- **Secure Assembly:** The blender features a built-in magnetic safety switch. Ensure the cup and base parts are securely and correctly assembled before operation. The blender will not start if not properly aligned.
- **Keep Away from Children:** This appliance is not intended for use by children. Keep the blender and its components out of reach of children.
- **Avoid Immersion:** Do not immerse the motor base in water or any other liquid. Clean the base with a damp cloth only.
- **Do Not Operate Empty:** Never operate the blender without ingredients inside the cup.
- **Hot Liquids:** Do not blend hot liquids, as pressure buildup can cause the lid to eject and result in injury.
- **Sharp Blades:** The blades are very sharp. Handle with extreme care during assembly, disassembly, and cleaning.
- **Overfilling:** Do not overfill the blending cup. Ensure ingredients do not exceed the maximum fill line.
- **Use Only Original Parts:** Use only the components provided by the manufacturer. Do not use attachments not recommended or sold by the manufacturer.

3. Product Components

Familiarize yourself with the parts of your BESNOOW Portable Blender HD10:

Image 3.1: Exploded view of the BESNOOW Portable Blender HD10 components.

1. **Top Lid:** Secures the blending cup and allows for drinking.
2. **Food Grade AS Jar:** The main blending cup, made from BPA-free material.
3. **Stainless Steel 6 Blades:** The blending mechanism for efficient processing.
4. **Power Button:** Initiates and stops the blending cycle.
5. **Type-C USB Charger Port:** For convenient recharging of the internal battery.
6. **Anti-Slip Design:** Base feature for stability during use.
7. **Base Lid:** A separate lid for the blending cup when detached from the motor base.
8. **Charging Cord:** USB-C cable for charging.
9. **Cleaning Brush:** For easy cleaning of the blending cup and blades.

4. Setup and First Use

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash the blending cup, top lid, and base lid with warm, soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth.
3. **Charge Battery:** Fully charge the blender before its first use. Connect the provided USB-C charging cable to the blender's Type-C port and a suitable USB power source (e.g., wall adapter, power bank, laptop). The indicator light will show charging status. A full charge takes approximately 3-4 hours.
4. **Assemble:** Place the blending cup onto the motor base, ensuring it is securely twisted and aligned. The magnetic safety switch requires proper alignment for the blender to operate.

Image 4.1: Charging the BESNOOW Portable Blender HD10 via USB-C.

5. Operating Instructions

Follow these steps to blend your favorite drinks:

1. **Prepare Ingredients:** Cut fruits and vegetables into small pieces (approximately 1 inch or 2.5 cm).
2. **Add Ingredients:** Add liquid ingredients first (water, milk, juice) to the blending cup, followed by solid ingredients. Do not exceed the maximum fill line. For best results, ensure there is enough liquid to cover the blades.
3. **Secure Lid:** Place the top lid onto the blending cup and twist it securely to prevent leaks.
4. **Start Blending:** Ensure the blending cup is securely attached to the motor base. Double-tap the power button to start the blending cycle. The indicator light will illuminate.
5. **Blend:** The blender will run for a preset cycle (typically 30-40 seconds). For thicker mixtures, you may gently shake the blender during operation to ensure all ingredients are processed.
6. **Stop Blending:** To stop the blending cycle manually, single-tap the power button.
7. **Enjoy:** Once blending is complete, remove the top lid and enjoy your fresh drink directly from the cup, or use the separate base lid for transport.

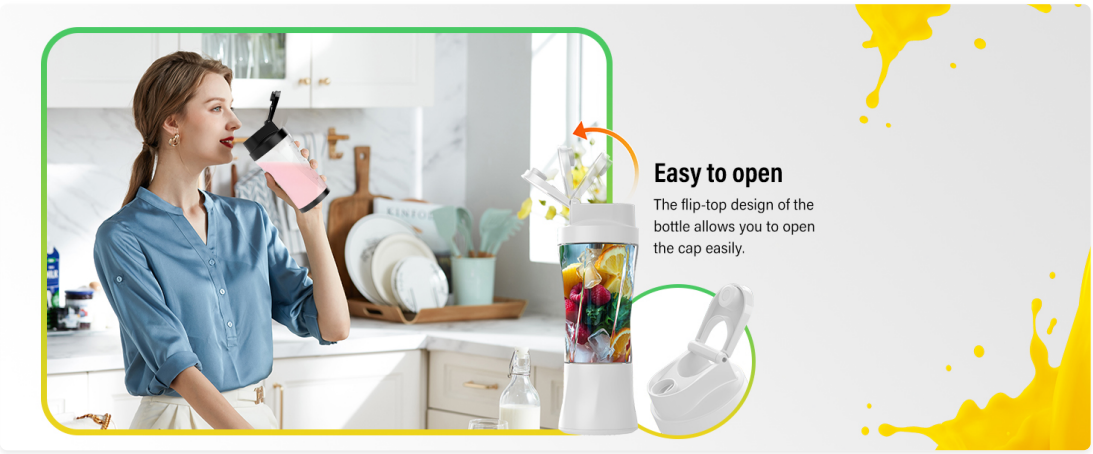

Image 5.1: Simple two-tap operation to start blending.

Image 5.2: The powerful 360W motor and 6 blades efficiently blend ingredients.

Image 5.3: The 24oz capacity is ideal for single servings on the go.

6. Cleaning and Maintenance

Regular cleaning ensures optimal performance and longevity of your blender.

1. **Self-Cleaning Function:** For quick cleaning, detach the blending cup from the motor base. Add a small amount of water and a drop of dish soap to the cup. Reattach the cup to the base and double-tap the power button to activate the self-cleaning cycle. Rinse thoroughly afterward.
2. **Manual Cleaning:** For a more thorough clean, disassemble the blending cup, top lid, and base lid. Wash these parts with warm, soapy water using the provided cleaning brush to reach all areas, especially around the blades. Rinse and dry completely.
3. **Motor Base Cleaning:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
4. **Storage:** Store the blender in a clean, dry place when not in use. Ensure all parts are dry before storing.

Image 6.1: The self-cleaning function simplifies maintenance.

7. Troubleshooting

Problem	Possible Cause	Solution
Blender does not start.	1. Cup not securely attached to base. 2. Battery is low or depleted. 3. Power button not double-tapped.	1. Ensure the cup is twisted and locked onto the motor base correctly. 2. Charge the blender for 3-4 hours. 3. Double-tap the power button quickly to start.
Blender stops during operation.	1. Overload protection activated. 2. Battery is low.	1. Reduce the amount of ingredients or add more liquid. Cut ingredients into smaller pieces. Restart after 5 minutes. 2. Charge the blender.
Leaking from the cup.	1. Lid not properly secured. 2. Overfilled cup. 3. Seal ring not correctly placed.	1. Ensure the top lid is tightly twisted onto the cup. 2. Do not exceed the maximum fill line. 3. Check if the silicone seal ring is properly seated in the lid.
Ingredients not blending smoothly.	1. Insufficient liquid. 2. Ingredients too large or too hard.	1. Add more liquid to cover the blades. 2. Cut ingredients into smaller pieces. For frozen fruits, add some liquid and let them thaw slightly.

8. Product Specifications

- **Brand:** BESNOOW
- **Model Number:** HD10
- **Color:** Green
- **Special Features:** Auto Cleaning, Easy to Clean, Portable, Rechargeable, Safety Lock
- **Capacity:** 700 Milliliters (24 Oz)
- **Product Dimensions:** 3.2"D x 3.22"W x 8.77"H
- **Included Components:** Blender, Cleaning Brush, Travel Cap, USB-C Charging Cable, User Manual
- **Style:** Mini Blenders
- **Recommended Uses:** Apple, Beetroot, Carrot, Celery, Cucumber, Grape, Grapefruit, Lemon, Orange, Pear, Watermelon (for juicing/blending)
- **Power Source:** Battery Powered

- **Number of Speeds:** 20000 RPM
- **Voltage:** 12 Volts
- **Blade Material:** Stainless Steel
- **Item Weight:** 1.64 pounds
- **Batteries:** 3 A batteries required (included)
- **Manufacture Year:** 2025

9. Warranty and Support

Warranty Type: This BESNOOW Portable Blender HD10 comes with a 2-Year Limited Warranty. For warranty claims, technical support, or any product-related inquiries, please contact BESNOOW customer service through the retailer where the product was purchased or visit the official BESNOOW Store on Amazon.

© 2025 BESNOOW. All rights reserved.