Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Xonera XONERA-001

Xonera XONERA-001 Bluetooth Wireless Outdoor Speaker Instruction Manual

Model: XONERA-001 | Brand: Xonera

1. Product Overview

The Xonera XONERA-001 is a powerful 80W peak portable Bluetooth speaker designed for outdoor use. It features IPX6 waterproofing, up to 20 hours of playtime, True Wireless Stereo (TWS) pairing, and a vibrant light show that syncs with your music. With Bluetooth 5.3, it offers fast and stable connectivity for various devices.

2. What's in the Box

- Portable Speaker
- AUX Cable
- Power Cable (Type-C)
- Quick Start Guide (User Manual)



Image: Contents of the Xonera XONERA-001 package, including the speaker, AUX cable, power cable, and user manual.

3. Key Features

- **80W Peak Booming Sound:** Delivers powerful, clear audio with enhanced bass.

- **IPX6 Waterproof:** Designed to withstand heavy rain and splashes, making it suitable for outdoor environments.
- **20 Hours Playtime & Power Bank:** Enjoy extended music playback and use the built-in battery to charge other devices.
- **True Wireless Stereo (TWS):** Pair two Xonera speakers for an immersive, powerful stereo sound experience.
- **Beat-Synced Light Show:** Dynamic RGB lights sync with your music, enhancing the atmosphere.
- **Bluetooth 5.3:** Ensures fast, stable, and reliable wireless connection.
- **Versatile Connectivity:** Includes AUX port, USB port, and wired microphone jack.

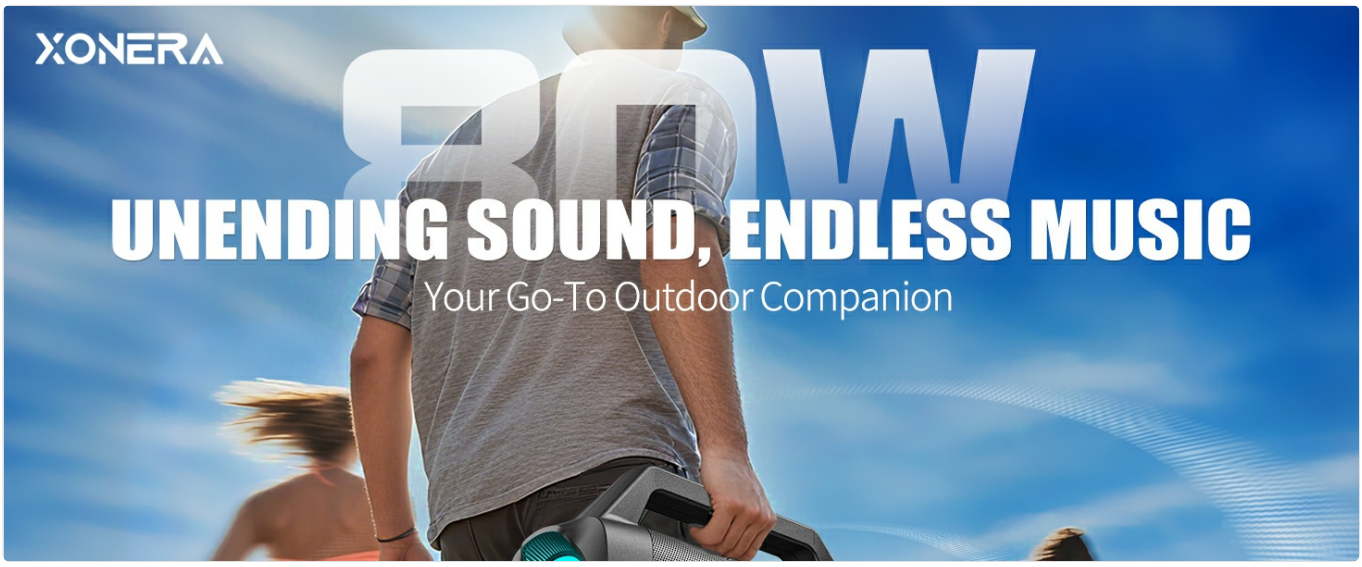

Image: The Xonera XONERA-001 speaker showcasing its 80W peak booming sound, featuring two 40W woofers and passive radiators with a colorful light show.



Image: The Xonera XONERA-001 speaker being splashed with water, illustrating its IPX6 waterproof capability for outdoor use.



Image: The Xonera XONERA-001 speaker in an outdoor camping scene, emphasizing its 20-hour playtime for extended use.



Image: Two Xonera XONERA-001 speakers wirelessly paired in a forest setting, demonstrating the TWS feature for 160W stereo surround sound.



Image: The Xonera XONERA-001 speaker displaying its RGB light show, which flashes to the beat of the music, enhancing the ambiance of outdoor gatherings.

4. Setup

4.1 Initial Charging

Before first use, fully charge the speaker using the provided Type-C power cable. The charging indicator light will show the charging status.

4.2 Powering On/Off

Press and hold the power button () for 3 seconds to turn the speaker on or off.

4.3 Bluetooth Pairing

1. Turn on the speaker. The Bluetooth indicator light will flash, indicating it's in pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for "XONERA-001".
3. Select "XONERA-001" to connect. The Bluetooth indicator light will become solid when successfully paired.



Image: A person outdoors connecting their smartphone to the Xonera XONERA-001 speaker via Bluetooth 5.3 for stable signal transmission.

5. Operating Instructions

5.1 Button Controls

Button	Action	Function
	Press for 3s	Turn power on/off
-	Press once	Turn volume down
-	Press and hold for 3s	Go back to the previous song
+	Press once	Turn volume up
+	Press and hold for 3s	Skip to the next song
▶‖	Press once	Play/Pause
BASS	Press once	Turn on/off Bass Boost
M	Press and hold for 3s	Force disconnect the Bluetooth connection
∞	Press once	Enable TWS pairing
☀	Press once	Lights on/lights off

5.2 True Wireless Stereo (TWS) Pairing

1. Ensure both Xonera speakers are powered on and not connected to any Bluetooth device.
2. Press the "∞" button on one speaker. It will enter TWS pairing mode.
3. The speakers will automatically connect to each other. Once connected, the TWS indicator light will be solid.
4. Connect your device to one of the paired speakers via Bluetooth.

5.3 Using as a Power Bank

Connect your mobile device to the speaker's USB port using a compatible charging cable to use the speaker as a power bank.



Image: The Xonera XONERA-001 speaker being used to charge a smartphone, highlighting its built-in power bank capability for convenience on the go.

6. Maintenance

- To maintain normal battery life, fully charge the speaker at least 1-2 times every month, especially if not used for a long time.
- Clean the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the rubber flap covering the ports is securely closed when using the speaker near water to maintain its IPX6 waterproof rating.

▶ **Watch video online**
Xonera 80W Peak Outdoor Loud Speaker

7. Troubleshooting

7.1 No Power

- Ensure the speaker is fully charged.
- Press and hold the power button () for 3 seconds.

7.2 Cannot Pair via Bluetooth

- Ensure the speaker is in pairing mode (Bluetooth indicator flashing).
- Make sure the speaker is within 100 feet (no obstacle) of your device.
- Disconnect the speaker from any other paired devices by pressing and holding the 'M' button for 3 seconds.
- Restart both the speaker and your Bluetooth device.

7.3 Poor Sound Quality

- Ensure the speaker is fully charged.
- Check the volume levels on both the speaker and your connected device.
- Move the speaker closer to your device to avoid interference.
- Try enabling or disabling the Bass Boost feature.

7.4 TWS Pairing Issues

- Ensure both speakers are powered on and not connected to any other Bluetooth device.
- Follow the TWS pairing steps carefully (press '∞' on one speaker).

8. Specifications

Feature	Detail
Model:	XONERA-001
Bluetooth Version:	5.3
Bluetooth Range:	100 ft (no obstacle)
Battery Capacity:	10000mAh
Charging Length:	6 Hours
Audio Output Power:	80W (Peak)
DC Input:	5V/2A
Audio Input Interface:	AUX, USB, MIC
Frequency Range:	20Hz-20KHz
Waterproof:	IPX6
Product Dimensions:	4.33"D x 12.28"W x 6.69"H
Item Weight:	5.19 pounds

9. Warranty and Support

The Xonera XONERA-001 speaker comes with a limited warranty. For any product issues or support, please contact Xonera customer service.

AfterSales E-mail: tpwin168@outlook.com

© 2025 Xonera. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FN7BRQ8F

More documents and user manuals: **https://manuals.plus/**