Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MINISO MS185

MINISO MS185 Open Ear Bluetooth Earbuds User Manual

Introduction

Thank you for choosing the MINISO MS185 Open Ear Bluetooth Earbuds. These earbuds are designed to provide a comfortable listening experience while maintaining awareness of your surroundings. Featuring advanced Bluetooth 5.4 technology, IPX5 water resistance, and a long-lasting battery, the MS185 earbuds are suitable for various activities, from daily commutes to intense workouts.



Image: The MINISO MS185 Open Ear Bluetooth Earbuds with their charging case, showcasing their design.

What's in the Box

Please check the package contents to ensure all items are present:

- 1 × MINISO MS185 Bluetooth Earbuds
- 1 × Charging Case
- 1 × Charging Cable
- 1 × User Manual
- 1 × Flashlight (as an accessory)

Setup

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided charging cable to the charging port on the case and a compatible USB power source. The charging indicator lights will provide status updates. A full charge provides up to 40 hours of total playtime with the charging case.



Image: The MINISO MS185 charging case open, displaying the earbuds and indicating 40 hours of total battery life.

2. Bluetooth Pairing

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on the earbuds.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "MINISO MS185" from the list of found devices.
5. Once connected, the LED indicator on the earbuds will stop flashing, and you will hear a confirmation tone.

The earbuds utilize Bluetooth 5.4 for a stable and efficient wireless connection up to 10 meters.

Operating

1. Wearing the Earbuds

The MINISO MS185 earbuds feature an open-ear, ergonomic design with ear hooks for a secure and comfortable fit. Place the ear hook over your ear, ensuring the speaker rests gently outside your ear canal. This design allows you to hear your audio while remaining aware of ambient sounds.

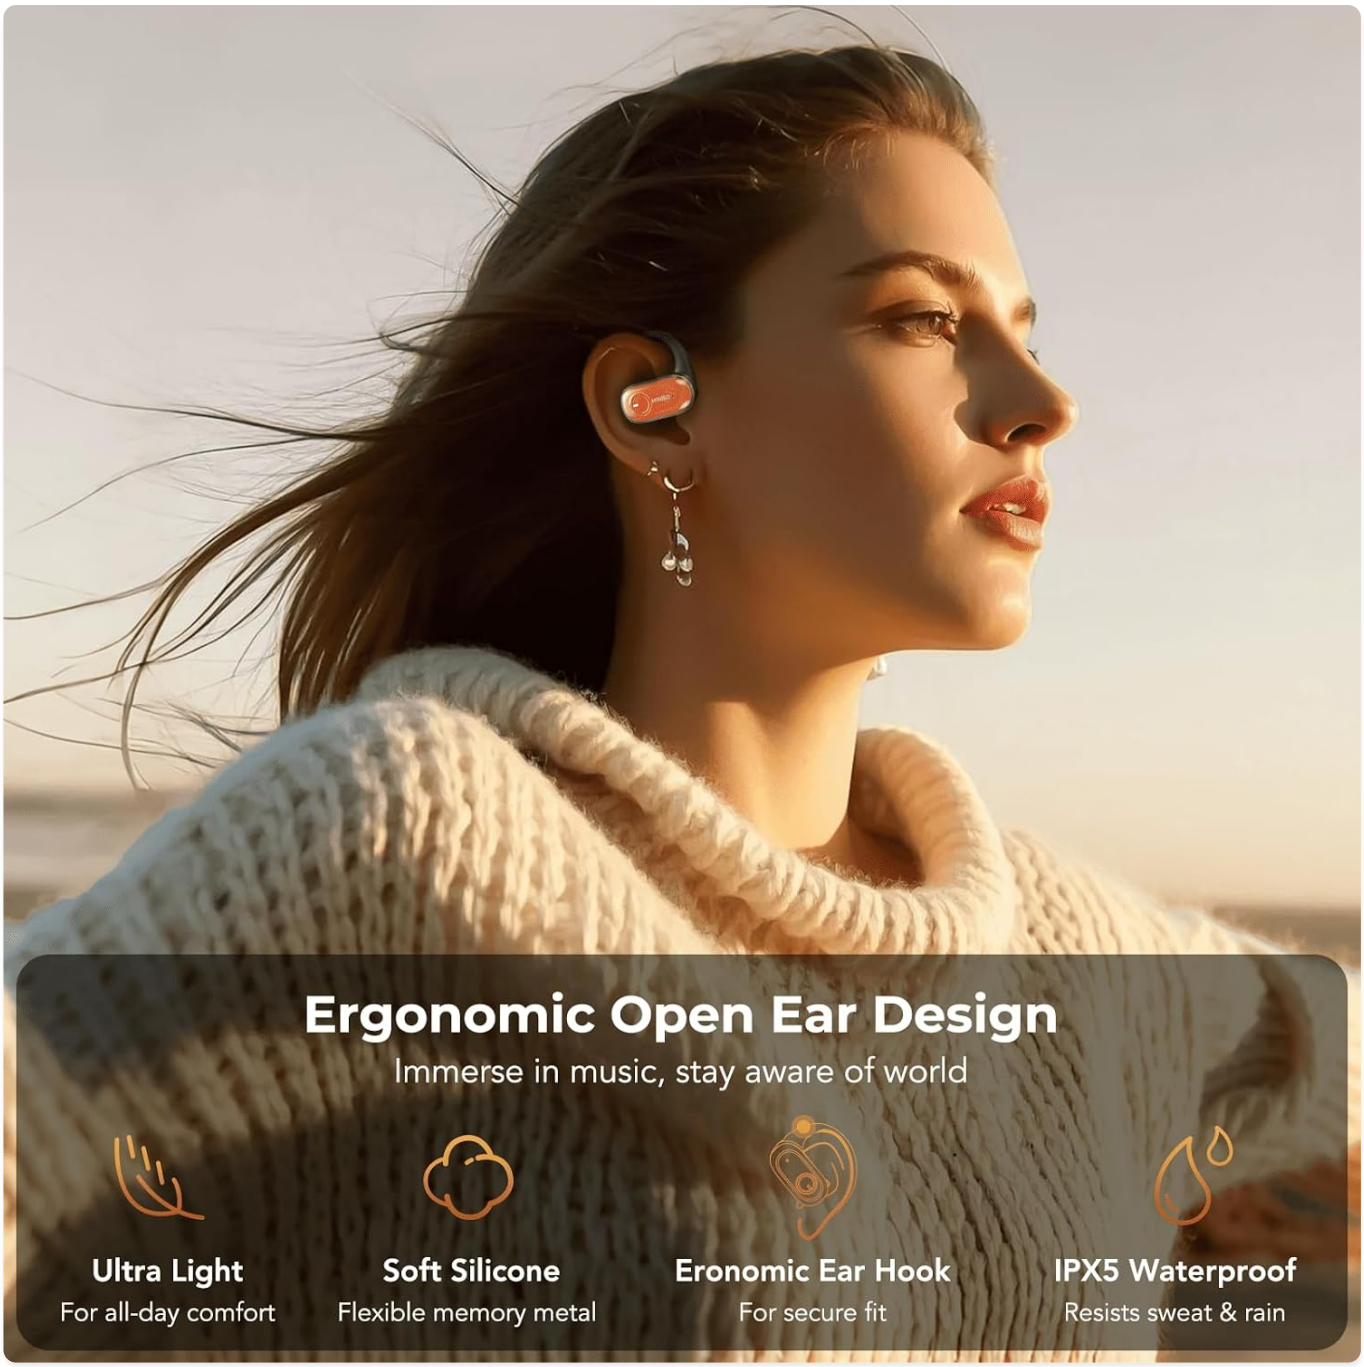

Image: A woman wearing the MINISO MS185 earbuds, demonstrating the ergonomic open-ear design.



Image: A visual comparison highlighting the comfort of open-ear earbuds versus the potential discomfort of traditional in-ear earbuds.

2. Smart Touch Controls

The earbuds are equipped with touch-sensitive controls for easy management of your audio and calls:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Press and hold either earbud for 3 seconds.

Sound Quality

The MINISO MS185 earbuds deliver clear and balanced audio with a 14.2mm Hi-Fi driver. The open-ear design ensures natural sound reproduction without distortion, even at higher volumes, making them suitable for music, podcasts, and phone calls.



Image: An exploded view diagram illustrating the internal components, including the 14.2mm Hi-Fi driver, responsible for the earbud's sound quality.

Maintenance

1. Water Resistance (IPX5)

The earbuds are rated IPX5 water-resistant, meaning they can withstand sweat and light rain. They are not designed for submersion in water. Avoid exposing them to heavy rain, showering, or swimming.



Image: A MINISO MS185 earbud depicted with water splashes, illustrating its IPX5 water resistance.

2. Cleaning and Storage

To maintain optimal performance and hygiene:

- Wipe the earbuds and charging case with a soft, dry, lint-free cloth regularly.
- Avoid using abrasive cleaners, solvents, or harsh chemicals.
- Store the earbuds in their charging case when not in use to protect them from dust and damage.
- Keep the device away from extreme temperatures and direct sunlight.

Troubleshooting

If you encounter issues with your MINISO MS185 earbuds, please refer to the following common solutions:

- **No Power:** Ensure the earbuds and charging case are fully charged.
- **Cannot Pair:** Make sure Bluetooth is enabled on your device and the earbuds are in pairing mode. Try turning

Bluetooth off and on again on your device.

- **No Sound:** Check the volume levels on both your device and the earbuds. Ensure the earbuds are properly connected to your device.
- **Intermittent Connection:** Move closer to your paired device to ensure you are within the 10-meter Bluetooth range. Avoid obstacles that may interfere with the signal.
- **One Earbud Not Working:** Try placing both earbuds back into the charging case, closing it, and then taking them out again to reset the connection.
- **Resetting Earbuds:** If issues persist, consult the MINISO support website for specific reset instructions for the MS185 model.

Specifications

Feature	Detail
Model Name	MS185
Brand	MINISO
Connectivity Technology	Wireless (Bluetooth 5.4)
Bluetooth Range	10 Meters
Ear Placement	Open Ear
Water Resistance Level	IPX5
Battery Life (Total with Case)	Up to 40 Hours
Control Type	Touch Control
Audio Driver Type	Hybrid Driver
Material	Plastic, Silicone
Item Weight	5 ounces

Warranty and Support

For warranty information, technical support, or further assistance, please refer to the official MINISO website or contact their customer service directly. Keep your purchase receipt for warranty claims.

MINISO Official Website: Visit the MINISO Store on Amazon

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FNK56K1J

More documents and user manuals: **https://manuals.plus/**