Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

NEBO NEB-FLT-0019

NEBO DAVINCI 1500 Lumens Rechargeable Flashlight Instruction Manual

Model: NEB-FLT-0019

Introduction | Setup | Operating Instructions | Maintenance | Troubleshooting | Specifications | Warranty & Support

1. Introduction

Thank you for choosing the NEBO DAVINCI 1500 Lumens Rechargeable Flashlight. This manual provides essential information for the safe and efficient operation, maintenance, and care of your device. Please read it thoroughly before use and retain it for future reference.

The NEBO DAVINCI 1500 is a versatile and durable flashlight designed for various applications, including camping, hunting, and general utility. It features a powerful 1500 lumen output, multiple light modes, adjustable zoom, a magnetic base for hands-free use, and a built-in USB power bank function. Its robust aluminum construction and IP67 waterproof rating ensure reliability in challenging environments.



The NEBO DAVINCI 1500 Lumens flashlight, showcasing its sleek black aluminum body and adjustable zoom head.

2. Setup

2.1 Initial Charging

Before first use, fully charge the flashlight. The NEBO DAVINCI 1500 comes with a pre-installed Lithium-Ion battery.

1. Locate the charging port, typically covered by a protective cap, on the flashlight body.
2. Connect the included USB charging cable to the flashlight's charging port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., wall adapter, computer USB port).

4. The charging indicator light will illuminate, typically red during charging and green when fully charged.
5. Allow approximately 4 hours for a full charge.



The NEBO DAVINCI flashlight connected to a USB charging cable, indicating its rechargeable feature.

2.2 Battery Installation (If applicable)

The NEBO DAVINCI 1500 is designed with an integrated rechargeable battery. No user installation is required for the primary battery.

3. Operating Instructions

3.1 Power On/Off and Mode Selection

The flashlight features a single power button for activation and cycling through light modes.

- **Power On/Off:** Press the power button once to turn the flashlight on. Press and hold the power button to turn it off.
- **Mode Cycling:** With the flashlight on, press the power button repeatedly to cycle through the available light modes (e.g., High, Medium, Low, Strobe).
- **Direct-to-Low:** Some models may feature a direct-to-low mode by pressing and holding the power button from the OFF position. Refer to specific product packaging for confirmation.



A visual representation of the 1500 lumens output of the NEBO DAVINCI flashlight, illuminating a wide area.

3.2 Adjustable Zoom

The NEBO DAVINCI 1500 features an adjustable zoom function to focus the light beam.

- To adjust the beam, twist the head of the flashlight.
- Twist clockwise for a tighter, more focused beam (spotlight).
- Twist counter-clockwise for a wider, more diffused beam (floodlight).

The NEBO DAVINCI flashlight's 4x zoom feature, showing a focused beam illuminating distant trees.

3.3 Magnetic Base

The integrated magnetic base allows for hands-free operation.

- Simply attach the magnetic base to any ferrous metal surface.
- Ensure the surface is clean and stable to prevent the flashlight from falling.



The NEBO DAVINCI flashlight utilizing its magnetic base to attach to a metal surface for hands-free operation.

3.4 Power Bank Function

The NEBO DAVINCI 1500 can also function as a portable power bank to charge other USB-powered devices.

- Connect your device's charging cable to the flashlight's USB output port.
- The flashlight will begin charging your device. Note that using this feature will deplete the flashlight's battery.

4. Maintenance


4.1 Cleaning

- Wipe the flashlight body with a soft, damp cloth.
- Do not use abrasive cleaners or solvents, as they may damage the finish.
- Clean the lens gently with a lens cloth to maintain optimal light output.

4.2 Waterproofing

The NEBO DAVINCI 1500 is IP67 waterproof, meaning it can withstand immersion in up to 1 meter of water for up to 30 minutes.

- Ensure all caps and covers (e.g., charging port cover) are securely closed before exposing the flashlight to water.
- After exposure to saltwater, rinse the flashlight with fresh water and dry thoroughly.

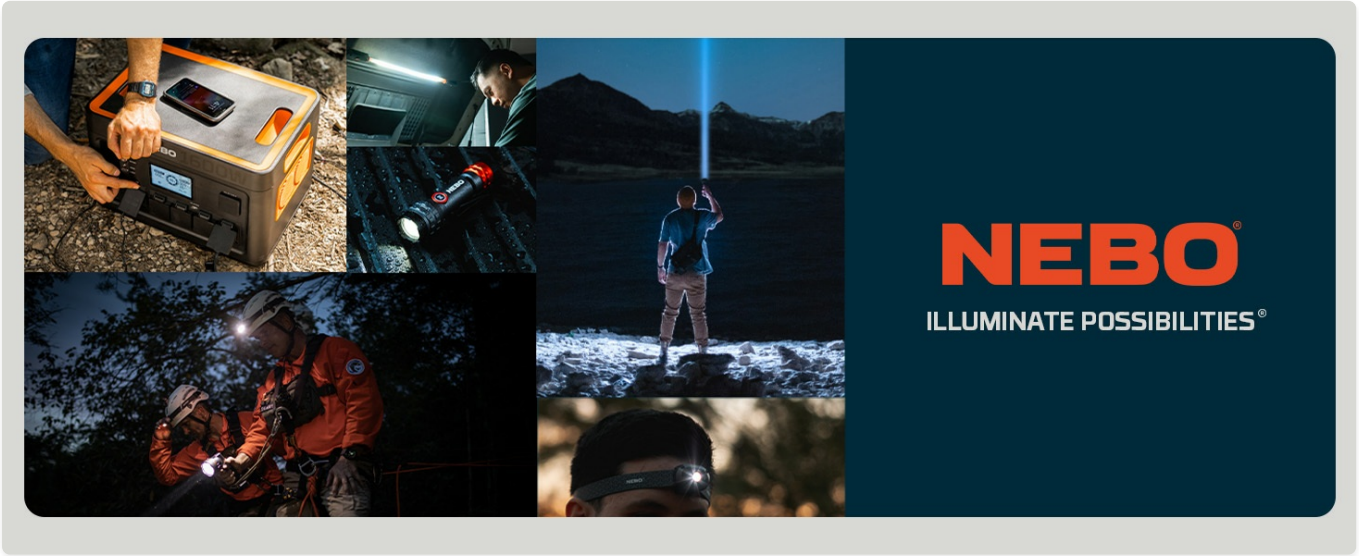

The NEBO DAVINCI flashlight demonstrating its IP67 waterproof capability by being partially submerged in water.


4.3 Storage

- Store the flashlight in a cool, dry place away from direct sunlight.
- For long-term storage, charge the battery to approximately 50% every 3-6 months to prolong battery life.

5. Troubleshooting

Problem	Possible Cause	Solution
Flashlight does not turn on.	Low battery.	Charge the flashlight fully.
	Power button malfunction.	Contact customer support if charging does not resolve the issue.
Light output is dim.	Low battery.	Recharge the flashlight.
	Dirty lens.	Clean the lens with a soft cloth.
Flashlight not charging.	Faulty cable or power source.	Try a different USB cable and power adapter.
	Charging port obstruction.	Check the charging port for debris and clear if necessary.
Power bank function not working.	Flashlight battery too low.	Ensure the flashlight is sufficiently charged.
	Incompatible device or cable.	Verify the device and cable are compatible with USB charging.

6. Specifications

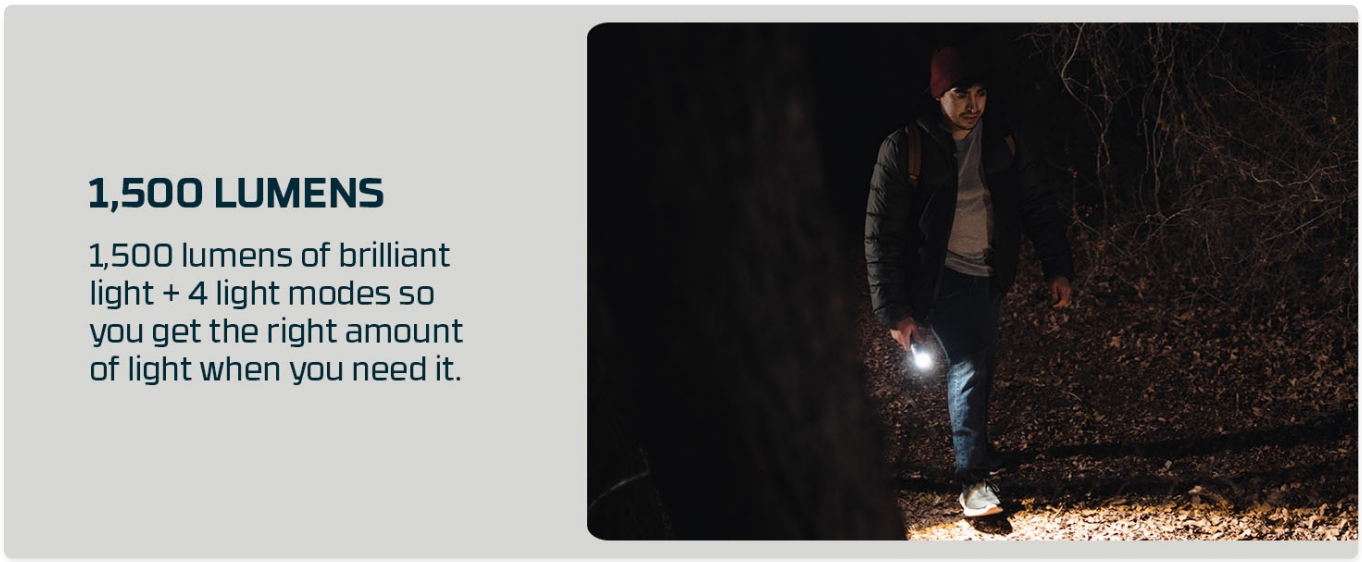

A graphic displaying key specifications of the NEBO DAVINCI 1500 flashlight, including length, weight, battery, lumens, run time, and range.

Feature	Detail
Model Number	NEB-FLT-0019
Brightness	1500 Lumens (White)
Power Source	Battery Powered
Battery Type	1 Lithium Ion (included)
Voltage	3.7 Volts
Material	Aluminum
Color	Black
Special Features	Rechargeable, Variable Zoom, Magnetic Base, USB Power Bank
Water Resistance Level	IP67 Waterproof (1 meter for 30 minutes)
Product Dimensions	2.91"D x 11.8"W x 4.88"H
Item Weight	0.317 ounces
Included Components	Flashlight, Charging Cable

7. Warranty & Support

7.1 Limited Warranty

This NEBO DAVINCI 1500 Flashlight is covered by a limited warranty. Please refer to the warranty information provided with your purchase or visit the official NEBO website for details regarding coverage, terms, and conditions.

7.2 Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact NEBO customer support. Contact information can typically be found on the NEBO website or on your product packaging.

© 2025 NEBO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My NEBO DAVINCI 1500 flashlight won't stop flashing; how do I stop the strobe mode to use it as a regular flashlight?

The NEBO DAVINCI 1500 uses a single power button to cycle through its various light modes, including High, Medium, Low, and Strobe. If your flashlight is currently flashing, it is in Strobe Mode. To...

Read full answer

Open the live page

https://manuals.plus/asin/B0FNT2CWKJ

More documents and user manuals: https://manuals.plus/