Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sweetcrispy DDCTXLHJ2

Sweetcrispy Adjustable Bed Frame Twin XL Instruction Manual

Model: DDCTXLHJ2 | Brand: Sweetcrispy

Introduction

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Sweetcrispy Adjustable Bed Frame Twin XL. Please read this manual thoroughly before installation and use to ensure proper function and safety. Retain this manual for future reference.



Image: The Sweetcrispy Adjustable Bed Frame Twin XL, showcasing its design and adjustable features in a typical bedroom environment.

Safety Information

- Ensure all components are securely fastened before use.
- Keep children and pets away from moving parts during operation.
- Do not place hands or feet under the bed frame while it is adjusting.
- Unplug the bed frame from the power outlet before cleaning or maintenance.
- Do not exceed the maximum weight capacity of 750 lbs.
- Use only with compatible mattresses (latex, hybrid foam, gel foam, memory foam).

Package Contents

Before assembly, verify that all parts are present. If any parts are missing or damaged, contact customer support.

- Adjustable Bed Base (pre-assembled sections)
- Legs (with optional height extensions)
- Wireless Remote Control
- Power Cord and Adapter
- Mattress Retainer Bar
- User Manual (this document)

Setup and Assembly

The Sweetcrispy Adjustable Bed Frame is designed for easy, tool-free assembly. It is recommended to have two people for assembly due to the weight of the frame.

1. **Unpack and Unfold:** Carefully remove the bed base from its packaging. Place the folded bed base on a clean, flat surface. Unfold the bed base sections until they lie flat.



Image: Step 1 - Unfolding the bed base.

2. **Install the Legs:** Screw the legs into the threaded holes on the underside of the bed frame. The legs are designed with two sections, allowing for 6-inch or 12-inch height options. Choose your desired height and securely fasten the legs.



Image: Step 2 - Attaching the bed legs.

3. **Insert Mattress Retainer Bar:** Locate the mattress retainer bar and insert it into the designated slots at the foot of the bed frame. This bar prevents the mattress from slipping during adjustments.



Image: Step 3 - Installing the mattress retainer bar.

4. **Connect Power:** Connect the power cord to the bed frame's power supply and then plug the adapter into a standard electrical outlet.



Image: Step 4 - Connecting the power supply.

5. **Install Remote Batteries:** Insert batteries (not included) into the wireless remote control.
6. **Place Mattress:** Carefully place your compatible mattress onto the bed frame.



Image: Dimensions of the Twin XL adjustable bed frame.

Operating Instructions

Your Sweetcrispy Adjustable Bed Frame is operated using the wireless remote control. Ensure the remote has working batteries and is within range of the bed frame.

Wireless Remote Control Functions



Image: Wireless remote control for the adjustable bed frame.

- **Head Up/Down:** Use the arrow buttons to raise or lower the head section of the bed (0 to 60 degrees).
- **Foot Up/Down:** Use the arrow buttons to raise or lower the foot section of the bed (0 to 40 degrees).
- **Flat:** Press the "Flat" button to return the bed to a completely flat position.

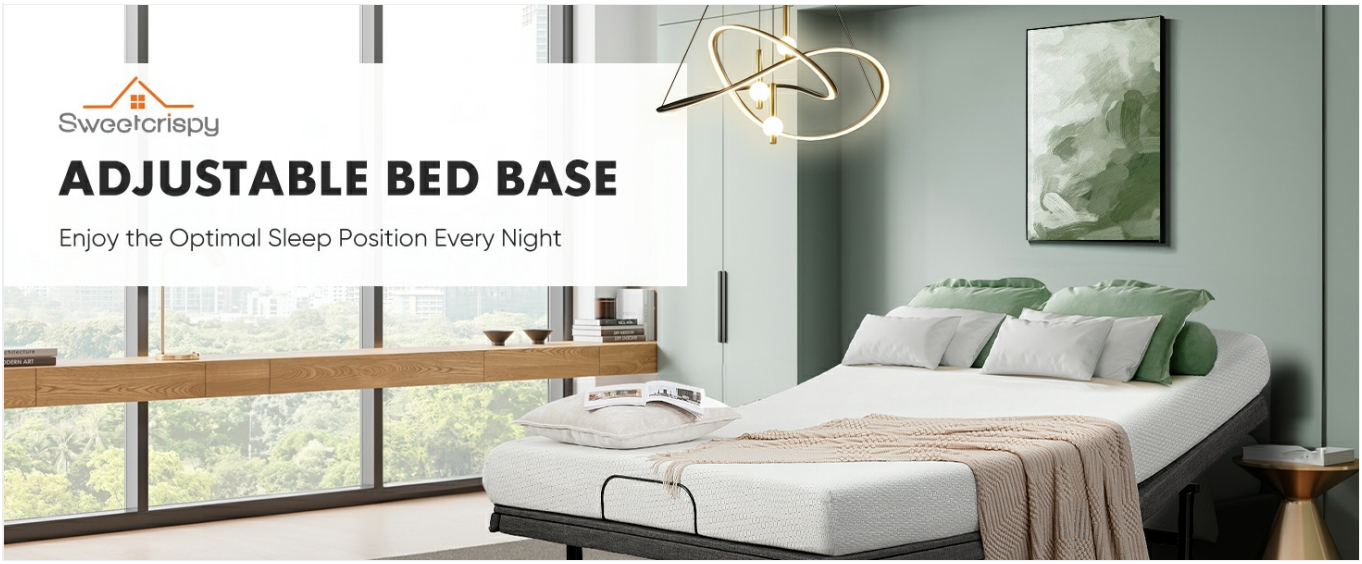

Image: Head and foot incline ranges.

Special Features

- **Zero Gravity Mode:** Adjust the head and foot sections to a position that elevates your head and feet slightly above your heart, simulating a feeling of weightlessness. This position can help reduce pressure on the back and improve circulation.
- **Anti-Snore Position:** Slightly elevating the head can help open airways and reduce snoring. Experiment with minor head adjustments to find the optimal position.
- **USB Charging Ports:** The bed frame includes two USB ports (1 USB-A, 1 USB-B) located near the head area for convenient charging of your electronic devices.

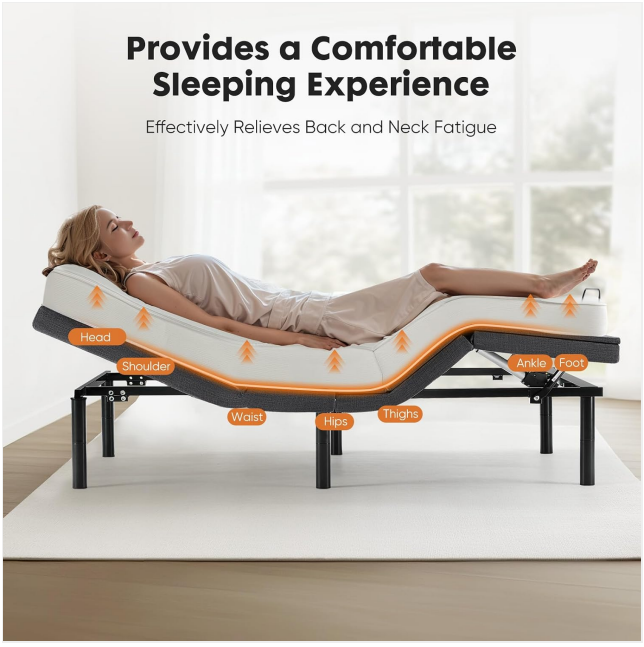

Image: USB charging ports on the bed frame.

Maintenance

- **Cleaning:** Unplug the bed frame before cleaning. Wipe the frame with a damp cloth and mild detergent. Avoid harsh chemicals or abrasive cleaners.
- **Motor Care:** The motors are designed for long-term use and generally require no maintenance. Do not attempt to open or service the motor units.
- **Fabric Care:** The non-slip bedding fabric can be spot cleaned as needed.
- **Regular Inspection:** Periodically check all bolts and connections to ensure they remain tight.

Troubleshooting

Problem	Possible Cause	Solution
Bed frame does not respond to remote.	No power to the bed frame. Remote batteries are dead or incorrectly inserted. Remote is not paired with the bed frame.	Check if the power cord is securely plugged into the outlet and the bed frame. Replace remote batteries and ensure correct polarity. Refer to the remote control pairing instructions (if applicable, usually in a separate guide or on the remote itself).
Motor makes unusual noise.	Obstruction under the bed. Loose connection.	Inspect under the bed for any objects interfering with the motor or moving parts. Ensure all assembly connections are tight.
USB ports are not charging devices.	Bed frame is not powered. Device cable is faulty.	Ensure the bed frame is plugged in and receiving power. Try a different USB cable or device to confirm functionality.

If you encounter issues not listed here, or if solutions do not resolve the problem, please contact Sweetcrispy customer support.

Specifications

Feature	Detail
Model Number	DDCTXLHJ2
Size	Twin XL
Product Dimensions (L x W x H)	79 x 37 x 13.7 inches
Item Weight	96.8 pounds
Material	Metal, Polyester
Head Incline Range	0 to 60 degrees
Foot Incline Range	0 to 40 degrees
Weight Capacity	Up to 750 lbs
Special Features	Adjustable, Ergonomic, Wireless Remote Control, 2 USB Ports, Zero Gravity Mode, Anti-Snore
Compatible Mattresses	Latex, Hybrid Foam, Gel Foam, Memory Foam (recommended under 14 inches)

Warranty and Support

For warranty information, please refer to the documentation included with your purchase or contact Sweetcrispy customer support. This product typically includes a 30-day return policy.
For assistance with assembly, operation, or troubleshooting, please visit theSweetcrispy Store on Amazon or contact their customer service directly.

© 2025 Sweetcrispy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FPP41RGW

More documents and user manuals: **https://manuals.plus/**