Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sweetcrispy CDDR01

Sweetcrispy Heated Mattress Pad Twin Size

Model: CDDR01

Important Safety Information

Please read all instructions carefully before using your Sweetcrispy Heated Mattress Pad. Retain this manual for future reference. Failure to follow these instructions may result in fire, electric shock, or injury.

- Do not use with infants, individuals who are weak, diabetic, have limited mobility, or are insensitive to heat.
- Ensure the mattress pad is used only with the provided controller.
- Do not use if the mattress pad or cord is damaged.
- Avoid pinching the heating wires or placing heavy objects on the pad.
- Do not dry clean, iron, or bleach the mattress pad.
- Always unplug the controller from the wall outlet when not in use or before cleaning.
- This product is ETL certified, ensuring compliance with safety standards.



Image: Sweetcrispy Heated Mattress Pad on a bed, showcasing its quilted design and the digital controller.

Setup Instructions

1. **Unpack the Mattress Pad:** Carefully remove the heated mattress pad from its packaging. Unroll it and allow it to lie flat for a few minutes to remove any creases.
2. **Position on Mattress:** Place the mattress pad directly on top of your mattress. Ensure it is centered and covers the entire sleeping surface.
3. **Secure with Deep Pockets:** The mattress pad features deep pockets designed to fit mattresses up to 21 inches thick. Stretch the elasticized skirt over the corners of your mattress to ensure a snug and secure fit. This prevents shifting during use.
4. **Connect Controller:** Locate the connector on the mattress pad. Firmly plug the controller cord into this connector. Ensure the connection is secure.
5. **Plug into Power Outlet:** Plug the controller's power cord into a standard 120V AC electrical outlet. Do not use with extension cords or power strips.



Image: A hand demonstrating the deep pocket feature of the mattress pad, fitting over a thick mattress.

Operating Instructions

Your Sweetcrispy Heated Mattress Pad is equipped with a user-friendly digital controller for personalized comfort.



Image: A detailed view of the digital controller, showing buttons for temperature and timer adjustments.

1. **Power On/Off:** Press the 'Power' button located in the center of the controller to turn the mattress pad on or off. The digital display will illuminate when the unit is active.
2. **Adjust Heat Settings:** Use the 'Temp +' and 'Temp -' buttons to select your desired heat level. The pad offers up to 12 heat settings, ranging from gentle warmth to higher temperatures for colder nights. The current heat setting will be displayed.
3. **Set Auto Shut-Off Timer:** Press the 'Timer +' or 'Timer -' buttons to set the automatic shut-off time. You can choose a duration between 1 and 12 hours. The pad will automatically turn off after the selected time, providing enhanced safety and energy efficiency. The remaining time will be displayed.
4. **Pre-heating:** For optimal warmth, it is recommended to turn on the mattress pad 15-30 minutes before bedtime to allow it to pre-heat your bed.

Maintenance and Care

Proper care ensures the longevity and performance of your heated mattress pad. Always follow these instructions carefully.



Image: The detachable controller being unplugged from the mattress pad, indicating it is ready for washing.

- **Before Washing:** Always unplug the power cord from the wall outlet and detach the controller(s) from the mattress pad. Ensure all cords are completely disconnected.
- **Machine Washing:** The mattress pad is machine washable. Wash on a gentle cycle with cold water. Do not use bleach.
- **Drying:** Tumble dry on low heat. Ensure the mattress pad is completely dry before reconnecting the controller and using it. Do not iron.
- **Storage:** When not in use, store the mattress pad in its original packaging or a breathable bag in a cool, dry place. Avoid folding tightly or placing heavy objects on it, which could damage the heating elements.

Troubleshooting

If you experience issues with your heated mattress pad, please refer to the following common solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Mattress pad is not heating.	Power cord not securely plugged in. Controller not properly connected to pad. Power outlet not functioning.	Ensure all connections are firm. Test the outlet with another appliance.
Controller display is off or flashing.	Loose connection. Internal safety feature activated.	Unplug the unit from the wall, disconnect the controller from the pad, wait 5 minutes, then reconnect everything securely. Plug back into the wall.
Pad heats unevenly.	Pad is folded or bunched.	Ensure the mattress pad is spread flat and smooth on the mattress.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

- **Model:** CDDR01
- **Size:** Twin (75" x 39")
- **Material:** 100% Polyester
- **Heat Settings:** Up to 12 levels
- **Auto Shut-Off:** 10-12 hours
- **Power:** 120V AC (Standard Household Outlet)
- **Certifications:** ETL Certified
- **Product Dimensions:** 75 x 39 x 0.39 inches
- **Item Weight:** 3.66 pounds

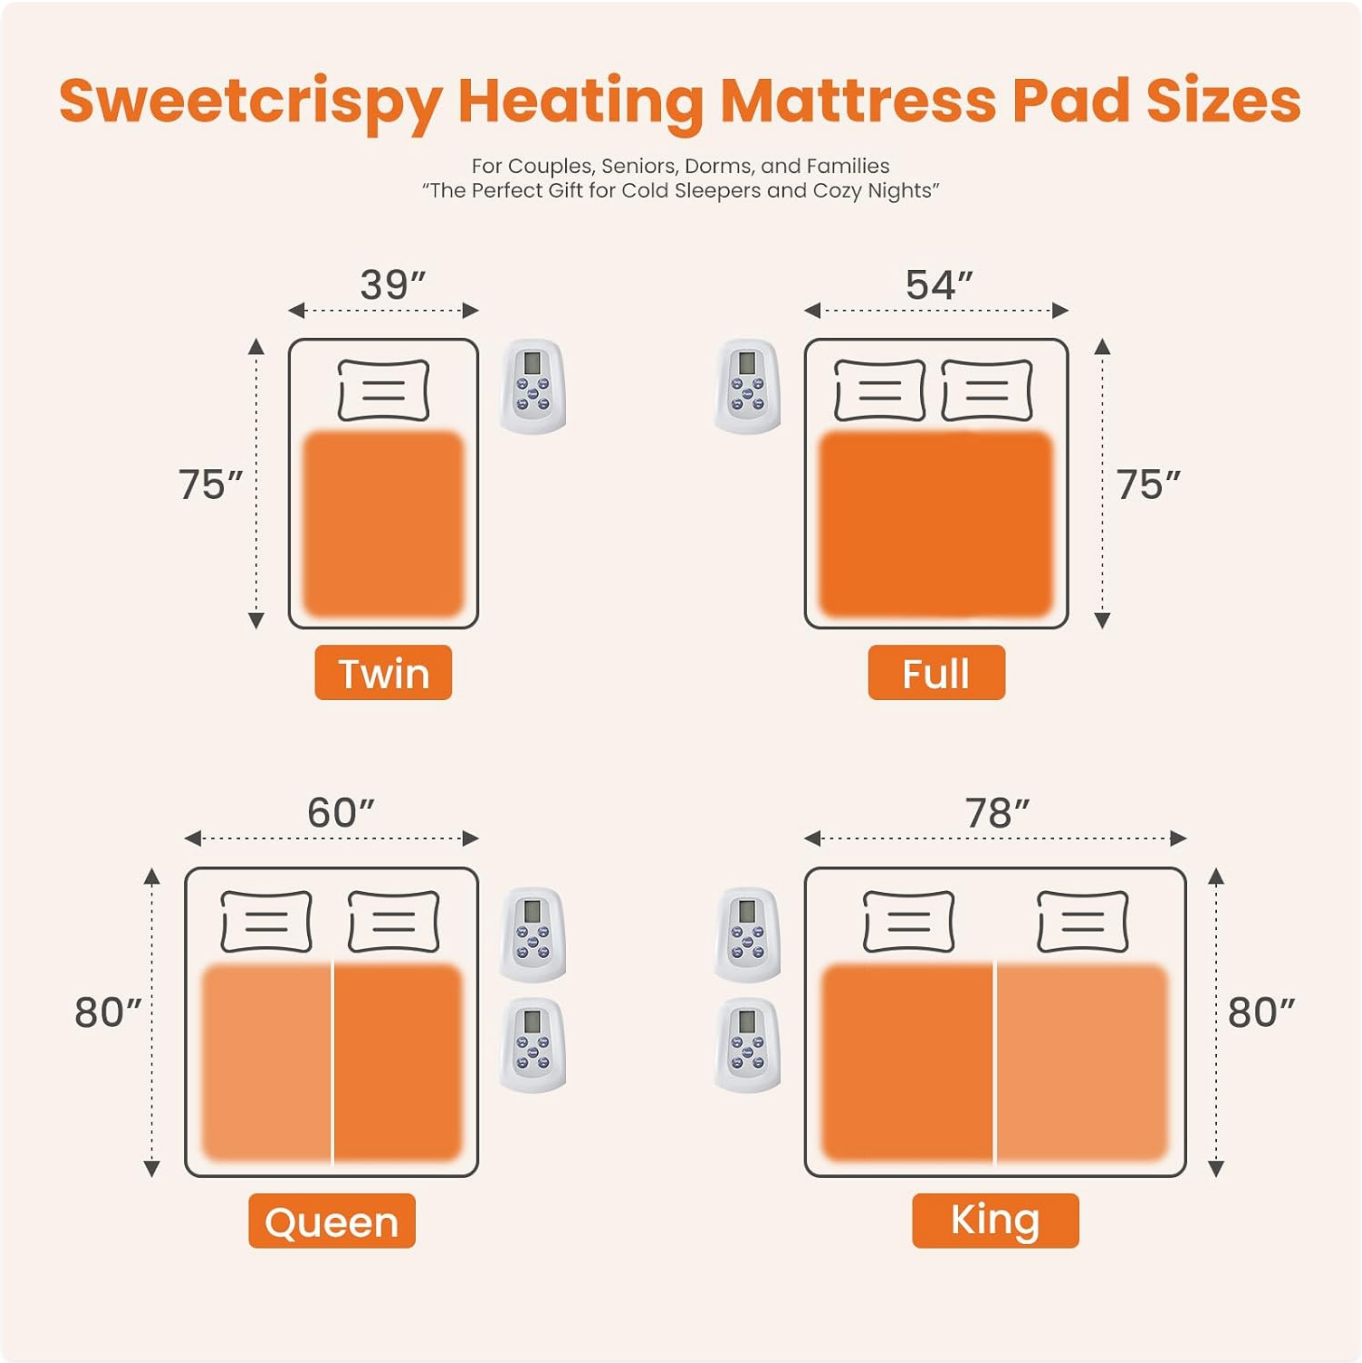


Image: A size chart illustrating the dimensions of various Sweetcrispy Heated Mattress Pad sizes, including Twin.

Warranty Information

This Sweetcrispy Heated Mattress Pad is covered by a standard manufacturer's warranty. Please refer to the product packaging or contact Sweetcrispy customer support for specific warranty terms and conditions.

Customer Support

For any questions, concerns, or assistance with your Sweetcrispy Heated Mattress Pad, please contact our customer support team.

Website: Visit the Sweetcrispy Store on Amazon

Please have your model number (CDDR01) and purchase information ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FRZYP3VM

More documents and user manuals: **https://manuals.plus/**