Manuals+
Q & A | Deep Search | Upload

EPOMAKER AULA-HEADSET-G7PRO

EPOMAKER X Aula G7 Pro Wireless Gaming Headset Instruction Manual

Model: AULA-HEADSET-G7PRO

1. Introduction

Thank you for purchasing the EPOMAKER X Aula G7 Pro Wireless Gaming Headset. This headset offers versatile connectivity, immersive 7.1 surround sound, and a comfortable design for extended gaming sessions. Please read this manual carefully to ensure proper setup and optimal performance.

Image: The EPOMAKER X Aula G7 Pro Wireless Gaming Headset, showcasing its design and key features.

2. Package Contents

Verify that all items are present in your package:

- EPOMAKER X Aula G7 Pro Wireless Gaming Headset
- USB Wireless Dongle (2.4GHz)
- USB Charging Cable
- User Manual (this document)

3. Product Overview

3.1 Headset Features

The G7 Pro headset integrates advanced audio technology and user-friendly controls.

Image: Overview of the headset's core features, including its C-Media chip, FPS sound effects, EQ adjustment, 7.1 surround sound, noise cancellation, and low-latency wireless performance.

3.2 Controls and Ports

Familiarize yourself with the headset's controls and connection points:

- **Power/Mode Switch:** Used to turn the headset on/off and switch between 2.4GHz, Bluetooth, and Wired modes.
- **Volume Wheel:** Adjusts the audio output level.
- **Microphone Port:** For connecting the detachable noise-canceling microphone.
- **USB-C Charging Port:** For charging the headset battery.

- **3.5mm Audio Jack:** For wired connection to compatible devices.

Image: Detailed view of the headset's intuitive controls, including the power switch, detachable microphone connection, and USB-C port for charging and wired audio.

3.3 Comfort and Design

The G7 Pro is designed for comfort during long gaming sessions.

Image: Features contributing to all-day comfort, such as friendly and breathable earcups, 360-degree suspended earmuffs, a high-elasticity alloy headband, and high-breathability fiber earmuffs.

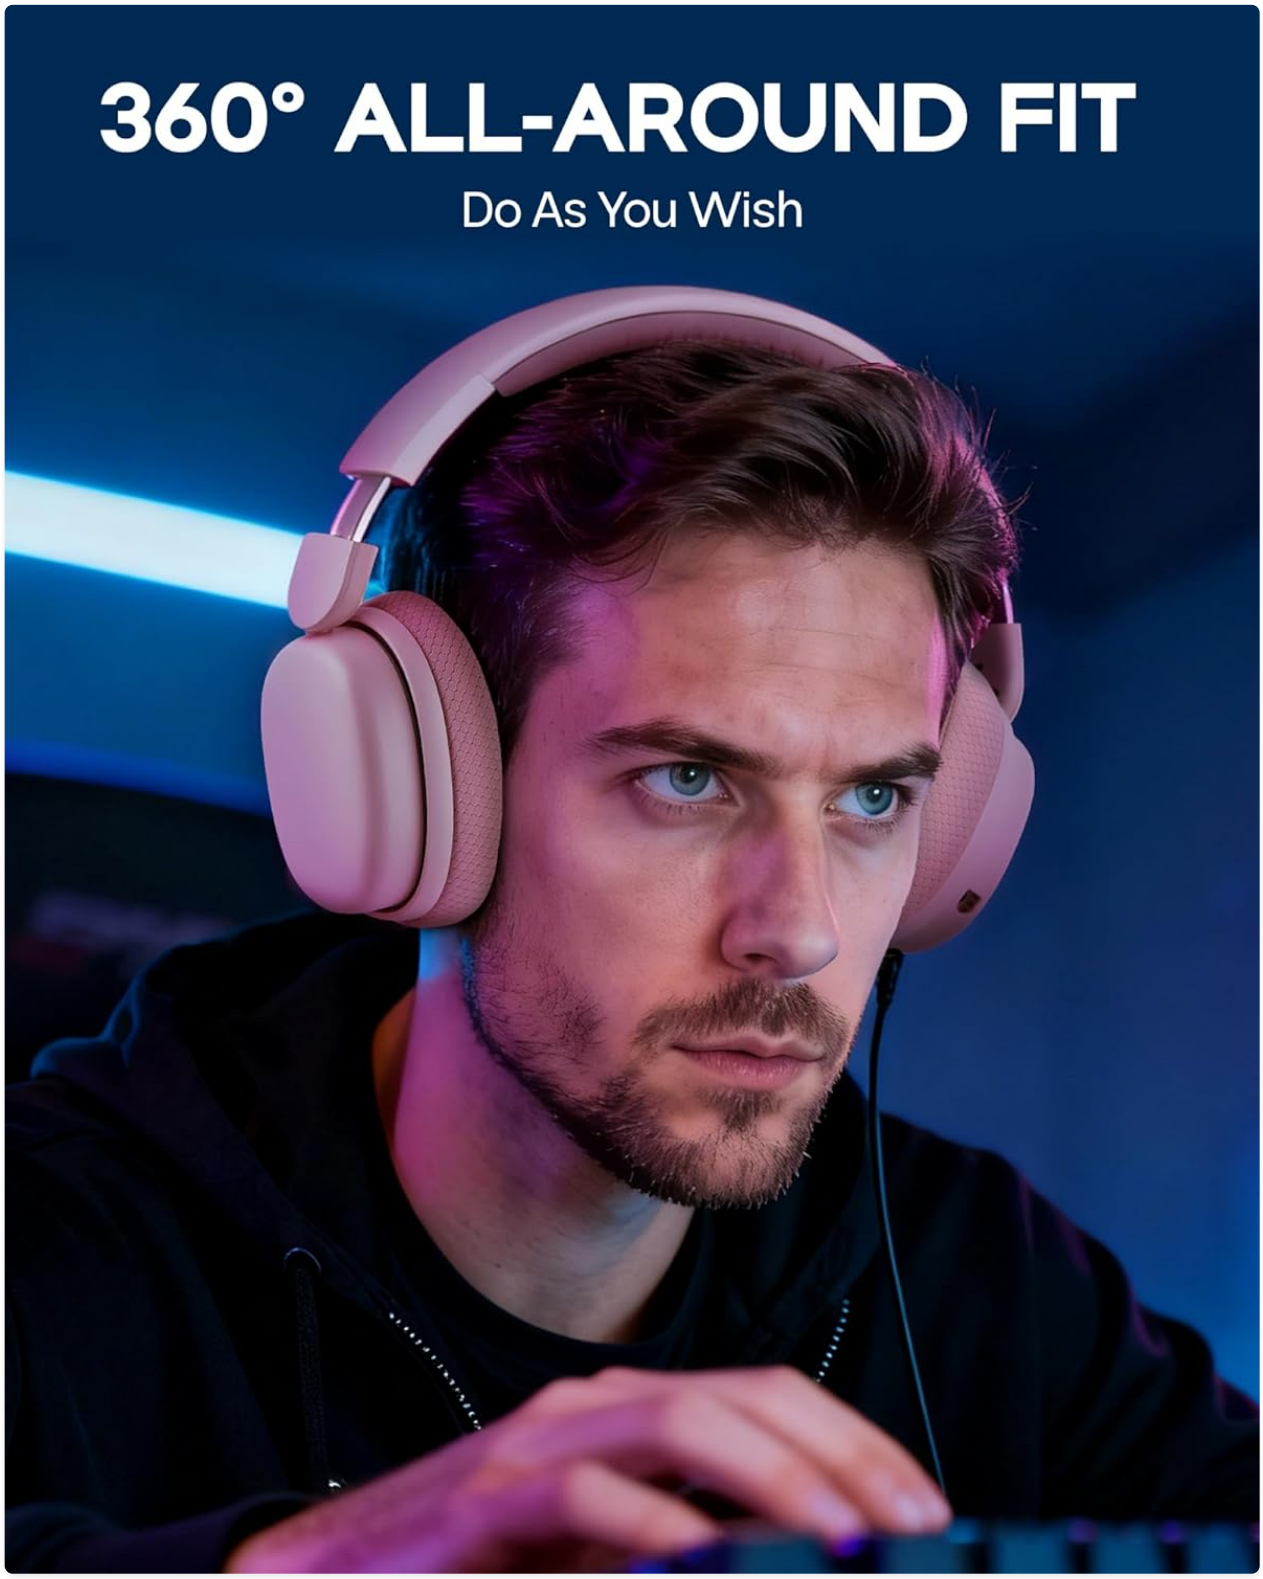

Image: A user wearing the headset, illustrating its adaptive ergonomics and comfortable fit for various head shapes.

4. Setup and Connectivity

The G7 Pro supports three connection modes: 2.4GHz wireless, Bluetooth 5.3, and 3.5mm wired.

Image: A visual guide to the headset's tri-mode connection capabilities, showing how to connect via Bluetooth, 2.4GHz USB dongle, and 3.5mm audio cable to various devices like PCs, consoles, and mobile phones.

4.1 2.4GHz Wireless Connection (PC, PS4, PS5, Switch Docked)

1. Insert the USB Wireless Dongle into an available USB port on your device.
2. Turn on the headset by sliding the Power/Mode switch to the **2.4GHz** position.
3. The headset will automatically pair with the dongle. A solid indicator light on the headset confirms a successful connection.
4. On your device, ensure the G7 Pro is selected as the audio input and output device.

4.2 Bluetooth 5.3 Connection (PC, Mobile Devices, Switch Handheld)

1. Turn on the headset by sliding the Power/Mode switch to the **BT** position.
2. The headset will enter pairing mode, indicated by a flashing indicator light.
3. On your device, enable Bluetooth and search for "G7 Pro".
4. Select "G7 Pro" to connect. The indicator light will become solid upon successful pairing.

4.3 3.5mm Wired Connection (PC, PS4, PS5, Switch, Xbox, Mobile Devices)

1. Ensure the headset is turned off or in 3.5mm wired mode (if applicable).
2. Connect one end of a 3.5mm audio cable (not included) to the headset's 3.5mm audio jack.
3. Connect the other end to the 3.5mm audio port on your device.
4. Note: In wired mode, some features like RGB lighting and wireless microphone functionality may be unavailable or require the headset to be powered on.

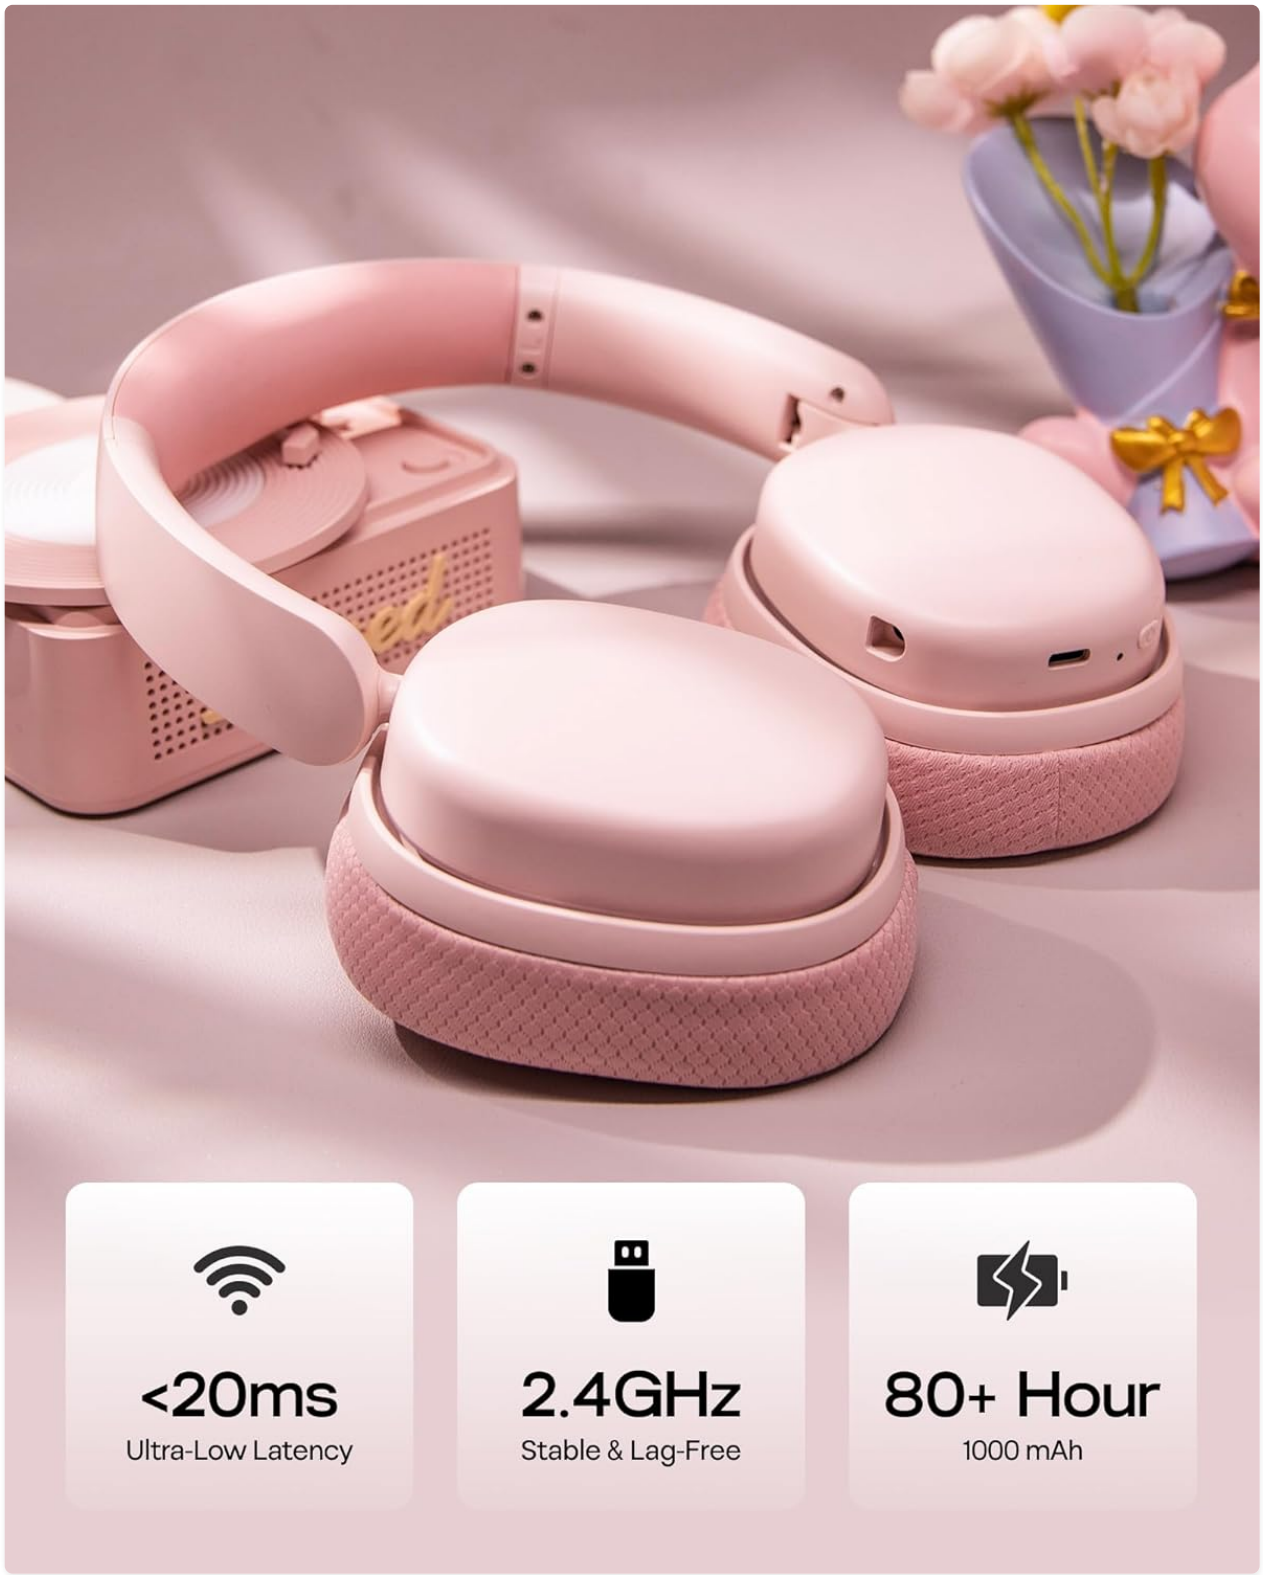

Image: Key performance indicators of the headset, highlighting its ultra-low latency, stable 2.4GHz wireless connection, and extended 80+ hour battery life.

5. Operating Instructions

5.1 Power On/Off

Slide the Power/Mode switch to the desired position (2.4GHz or BT) to turn on the headset. Slide to the 'OFF' position to power off.

5.2 Volume Adjustment

Rotate the volume wheel located on the earcup to increase or decrease the audio volume.

5.3 Microphone Usage

Attach the detachable microphone to the designated port. Ensure it is securely connected. The noise-canceling feature helps filter out background noise for clear communication.

5.4 7.1 Surround Sound

The headset features 7.1 surround sound for immersive audio. This feature is typically enabled automatically in 2.4GHz and Bluetooth modes on compatible systems (e.g., PC with appropriate drivers/software). For optimal experience, ensure your device's audio settings are configured for surround sound output.

Image: An exploded view of the 40mm dynamic driver unit, emphasizing its role in delivering accurate audio positioning and

high-quality sound.

5.5 RGB Lighting

The headset features RGB lighting. Specific controls for RGB effects may be integrated into the headset's buttons or require companion software on a PC. Refer to the product's official website for any available software.

5.6 Charging

Connect the USB Charging Cable to the headset's USB-C port and the other end to a USB power source. The indicator light will show charging status and turn off or change color when fully charged. The headset provides over 80 hours of battery life on a full charge.

6. Maintenance

To ensure the longevity and performance of your headset, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the headset. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the headset in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery health, avoid fully discharging the battery frequently. Charge the headset regularly, even if not in use for extended periods.
- **Microphone:** Handle the detachable microphone carefully. Avoid bending it excessively.

7. Troubleshooting

Issue	Possible Cause	Solution
No sound from headset	Headset off, low battery, incorrect connection mode, device volume low, incorrect audio output selected.	Ensure headset is on and charged. Verify correct connection mode (2.4GHz/BT/Wired). Check device volume and audio output settings.
Microphone not working	Microphone detached, muted, incorrect audio input selected.	Ensure microphone is securely attached. Check if microphone is muted (if applicable). Verify correct audio input device selected on your system.
Cannot connect wirelessly	Headset not in pairing mode, dongle not inserted, Bluetooth off on device, interference.	Ensure headset is in the correct pairing mode (2.4GHz or BT). Reinsert USB dongle. Enable Bluetooth on your device. Move closer to the device to reduce interference.
RGB lighting not working	Headset off, specific mode requirement, software issue.	Ensure headset is powered on. Check if RGB is disabled or requires specific software.

8. Specifications

Feature	Detail

Feature	Detail
Model Name	G7 Pro
Connectivity Technology	BT 5.3, 2.4GHz Wireless
Audio Driver Type	Dynamic Driver (40mm)
Battery Life	80+ Hours
Noise Control	Passive Noise Cancellation
Microphone	Noise Canceling
Special Features	7.1 Surround Sound, RGB Lighting, Dual Mode Connectivity
Compatible Devices	PC, PlayStation 4, PlayStation 5, Switch
Headphones Jack	3.5 mm Jack
Sensitivity	108 dB
Impedance	32 Ohms
Item Weight	12 Ounces
Material	Fiber, Memory Foam, Plastic

9. Warranty and Support

For warranty information and technical support, please refer to the warranty card included with your product or visit the official EPOMAKER website. You may also contact EPOMAKER customer service for assistance with product issues or inquiries.