Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

unho FRFU-Z1968-WT

unho Rolling TV Stand with Mount Instruction Manual

Model: FRFU-Z1968-WT | Brand: unho

1. Safety Information

WARNING: Failure to read and follow these instructions can result in serious personal injury, property damage, or voiding of warranty.

- Ensure all components are present and undamaged before assembly. Do not use damaged parts.
- This TV stand is designed for televisions between 40-75 inches and a maximum weight of 60kg (132lb). Do not exceed these limits.
- Always use appropriate lifting techniques when handling the TV and stand components. Two people are recommended for lifting the TV.
- Verify your TV's VESA pattern is compatible with the stand (200x200 to 600x400mm).
- Ensure all screws are securely tightened during assembly. Do not overtighten.
- Keep children and pets away from the assembly area.
- Regularly check all connections and fasteners to ensure they remain secure.
- Do not modify the product or use accessories not specified by the manufacturer.

2. Package Contents

Before proceeding with assembly, please verify that all parts listed below are included in your package. If any parts are missing or damaged, please contact customer support.



Image: Overview of the unho Rolling TV Stand with Mount, showing the complete product with a TV mounted.

Components:

- Base Plate (MDF)
- Support Rods (Steel, 50mm diameter)
- TV Mounting Bracket
- Mid-level Shelf
- Hidden Casters (6 units)
- Assembly Hardware (Screws, washers, Allen key, wrench)
- Cable Management Clips

Refer to the detailed parts diagram in the assembly section for specific hardware identification.

3. Setup and Assembly

Follow these steps carefully to assemble your unho Rolling TV Stand. It is recommended to have a second person assist during certain stages, especially when mounting the television.

3.1. Base Assembly

1. Attach the support rods to the base plate using the provided screws and Allen key. Ensure they are securely fastened.
2. Install the hidden casters into the designated holes on the underside of the base plate. Use the wrench to tighten

them.

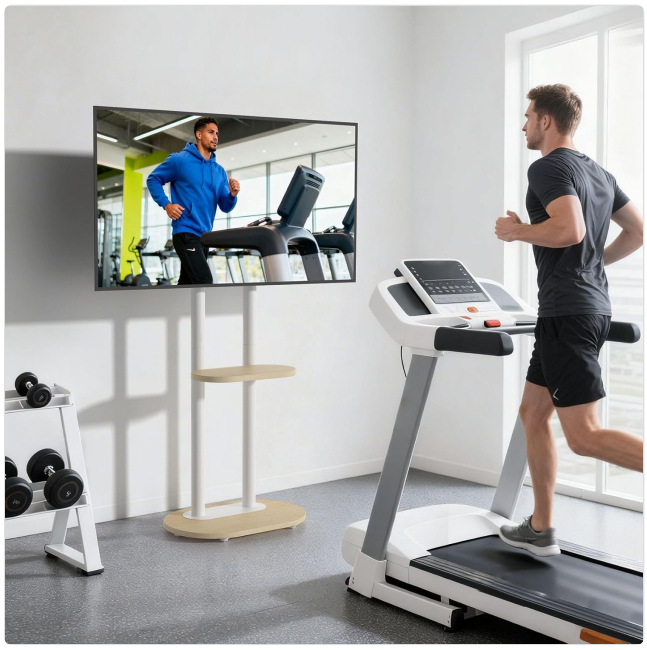


Image: Close-up view of the base assembly, showing the attachment of support rods and hidden wheels.

3.2. Shelf Installation

3. Secure the mid-level shelf to the support rods at your desired height using the appropriate hardware.



Image: The mid-level shelf attached to the support rods, providing storage space.

3.3. TV Mounting Bracket Assembly

4. Assemble the TV mounting bracket components according to the provided diagram. Ensure all screws are tightened.
5. Attach the assembled bracket to the top of the support rods.



Image: Detailed view of the TV mounting bracket attached to the top of the stand's support poles.

3.4. Attaching the TV

6. Carefully attach your television to the mounting bracket. Ensure the VESA holes align and use the correct screws and spacers for your TV model.
7. Secure the TV to the bracket using the safety screws to prevent accidental dislodgement.

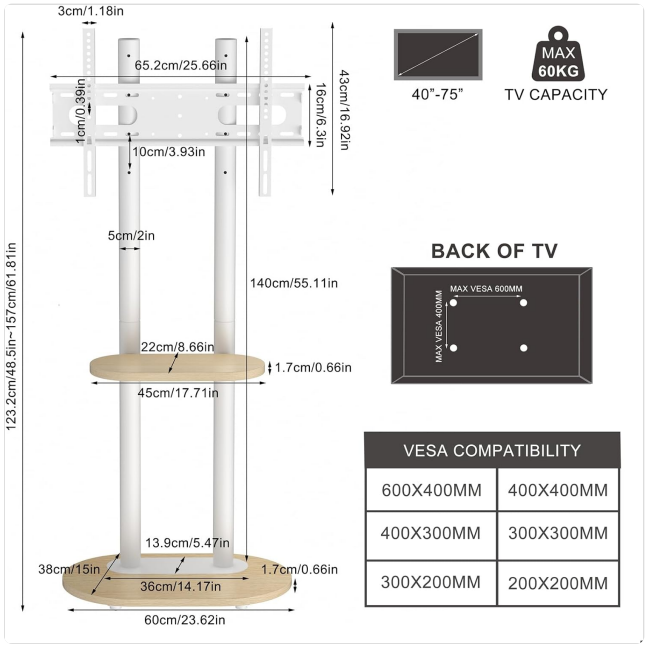


Image: A television securely mounted onto the unho TV stand, ready for use.

Assembly Video Guide:

▶ **Watch video online**

A video of assembling a TV stand

Video: A detailed assembly guide for the unho Rolling TV Stand, demonstrating each step of the installation process.

4. Operating Instructions

4.1. Height Adjustment

The TV stand offers smooth height adjustment from 48.5 inches to 61.42 inches across three customizable positions. To adjust the height:

1. Loosen the height adjustment screws on the support rods.
2. Carefully raise or lower the TV to the desired viewing height.
3. Securely tighten the height adjustment screws to lock the TV in place.



Image: The TV stand demonstrating its height adjustment capability, showing different possible viewing heights.

4.2. Mobility and Swivel

The stand is equipped with 6 hidden casters for effortless movement across various floor surfaces. The TV mount also allows for swivel functionality.

- To move the stand, gently push it to the desired location. Ensure the path is clear of obstacles.
- To swivel the TV, carefully rotate the television left or right on its mount to achieve the optimal viewing angle.

▶ **Watch video online**
TV stand display video

Video: A demonstration of the unho TV stand's mobility and swivel features, showcasing its flexibility in different room settings.

4.3. Cable Management

Utilize the provided cable management clips to keep cables organized and out of sight, contributing to a clean and tidy appearance.

- Attach the cable clips to the back of the support rods.
- Route your TV and device cables through the clips to keep them neatly bundled.

5. Maintenance

- **Cleaning:** Wipe the stand with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners that could damage the finish.
- **Fastener Check:** Periodically inspect all screws and bolts to ensure they are tight. Retighten if necessary to maintain stability and safety.
- **Caster Care:** Keep the hidden casters free of dust and debris to ensure smooth movement.

6. Troubleshooting

Problem	Possible Cause	Solution
Stand is unstable or wobbly.	Loose fasteners; uneven floor surface.	Check and tighten all screws and bolts. Move the stand to a level surface.
Difficulty moving the stand.	Casters are dirty or obstructed.	Clean debris from casters. Ensure casters are not locked (if applicable).
TV does not fit the mount.	Incompatible VESA pattern or TV size/weight.	Verify your TV's VESA pattern, size, and weight against the product specifications.
Height adjustment is difficult.	Adjustment screws are too tight or mechanism is stiff.	Loosen adjustment screws sufficiently. Apply a small amount of silicone lubricant if mechanism is stiff.

7. Specifications

Feature	Detail
Brand	unho
Model Number	FRFU-Z1968-WT
Compatible TV Sizes	40-75 inches
Maximum Load Capacity	60kg (132lb)
VESA Compatibility	200x200 / 300x200 / 400x200 / 400x300 / 400x400 / 600x400mm

Feature	Detail
Height Adjustment Range	48.5" to 61.42" (3 positions)
Movement Type	Manual movement (Rolling casters, Swivel)
Material	Iron + Wood (MDF base, steel support rods)
Product Dimensions	24 x 15 x 62 inches (approximate, varies with height adjustment)
Item Weight	19 pounds



Image: Technical drawing showing dimensions, VESA compatibility, and maximum TV capacity.

8. Warranty Information

This unho product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation or contact customer support for specific warranty terms and conditions applicable to your region.
Keep your proof of purchase for warranty claims.

9. Customer Support

If you have any questions, require assistance with assembly, or encounter any issues with your unho Rolling TV Stand, please contact our customer support team.

- For the fastest service, please have your model number (FRFU-Z1968-WT) and purchase details ready.
- You may also visit the official unho store on Amazon for additional product information and FAQs: unho Store

© 2025 unho. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FVKN8X5K

More documents and user manuals: **https://manuals.plus/**