Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HAMTOD T8

HAMTOD T8 4G Senior Flip Phone User Manual

Model: T8 (H3 Series) | Brand: HAMTOD

Introduction

This manual provides essential instructions for setting up, operating, and maintaining your HAMTOD T8 4G Senior Flip Phone. Please read this guide carefully to ensure proper use and to maximize the device's features.



Image: The HAMTOD T8 flip phone, showcasing its elegant design and external display.

1. Setup

1.1 Package Contents

Ensure your package contains the following items:

- HAMTOD T8 Flip Phone
- Power Adapter
- User Manual (this document)

1.2 Battery Installation

The HAMTOD T8 features a removable 1500mAh battery. Follow these steps to install it:

1. Gently remove the back cover of the phone.
2. Align the battery contacts with the terminals inside the phone.
3. Press the battery down firmly until it is securely in place.
4. Replace the back cover, ensuring it clicks into position.



Image: Illustration of the HAMTOD T8's removable battery for easy installation.

1.3 SIM Card and TF Card Installation

The phone supports Dual SIM cards and a TF (MicroSD) card for expandable storage.

1. With the back cover and battery removed, locate the SIM card slots.
2. Insert your Nano SIM card(s) into the designated slots, ensuring the gold contacts face downwards.
3. If using a TF card, insert it into the TF card slot.
4. Reinstall the battery and back cover.

1.4 Charging the Battery

Before first use, fully charge the phone's battery.

1. Connect the power adapter to the USB Type-C port on the phone.
2. Plug the power adapter into a wall outlet.
3. The charging indicator will show the charging status.
4. A full charge typically takes approximately 2.5 hours.



Image: The HAMTOD T8 highlighting its 1500mAh battery and long-lasting performance.

1.5 Powering On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen lights up.
- **To Power Off:** Press and hold the Power/End Call button, then confirm "Power Off" on the screen.

2. Operating Instructions

2.1 Making and Receiving Calls

- **Making a Call:**
  1. Open the flip phone.
  2. Enter the phone number using the keypad.
  3. Press the Green Call button to initiate the call.
- **Answering a Call:**
  1. When the phone rings, open the flip to answer automatically, or press the Green Call button.
- **Ending a Call:** Press the Red End Call button or close the flip.

2.2 Sending and Receiving Messages

1. Navigate to the "Messages" menu.

2. Select "New Message" or "Create Message".
3. Enter the recipient's number and type your message using the keypad.
4. Press "Send".

2.3 Dual Screen Functionality

The HAMTOD T8 features a 2.8-inch internal display and a 1.77-inch external display.

- The **external screen** displays time, date, incoming calls, and notifications without needing to open the phone.
- The **internal screen** is used for all primary operations, offering a clear and large display with large fonts and icons for easy readability.

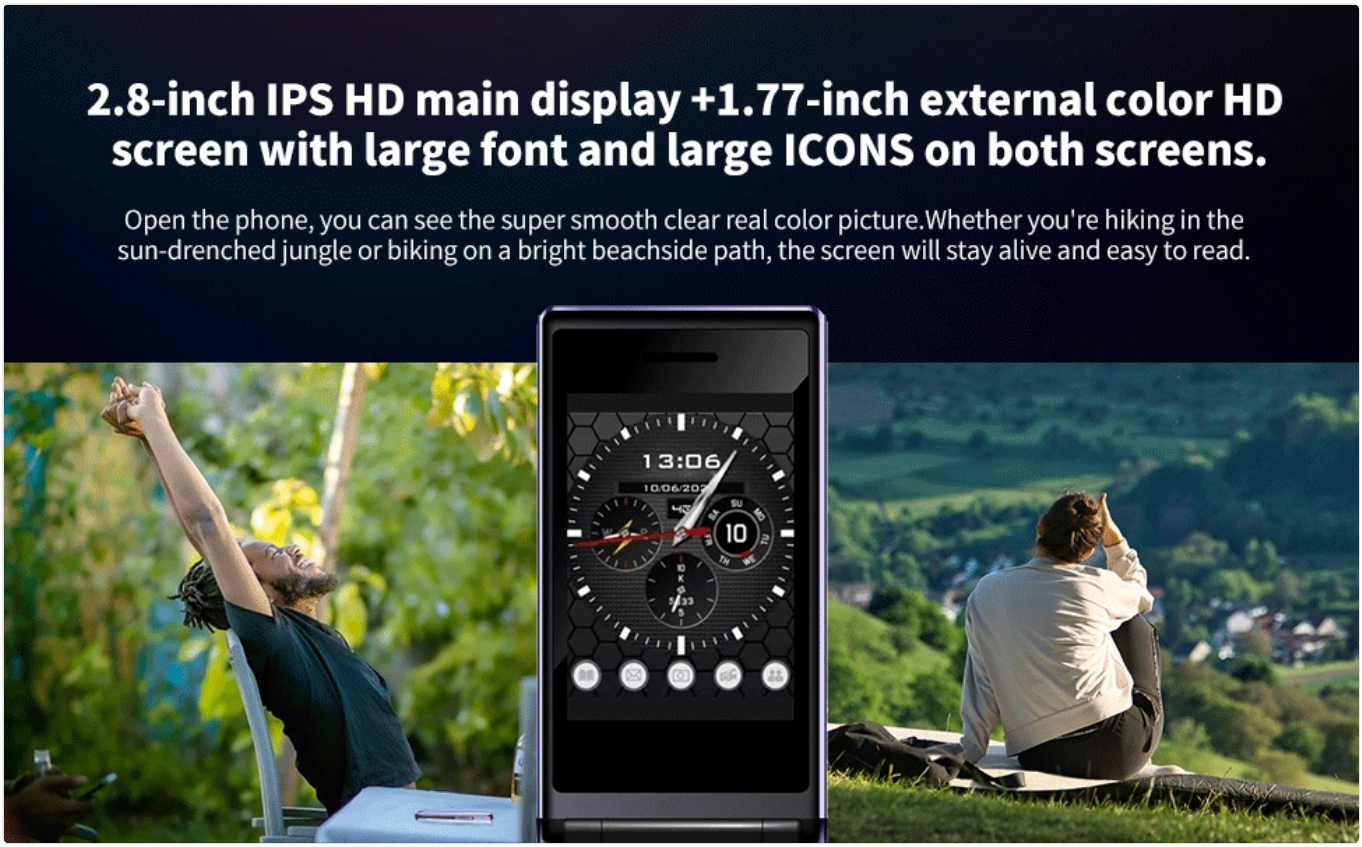

Image: The HAMTOD T8's dual screen feature, emphasizing large fonts and icons for user convenience.

2.4 SOS Emergency Function

The phone is equipped with a dedicated SOS button for emergencies.

1. **Setting up SOS Contacts:** Access the SOS settings in the phone's menu to add up to 5 emergency contact numbers.
2. **Using the SOS Function:** In an emergency, press and hold the SOS button on the back of the phone. The phone will automatically call and send an emergency SMS to the pre-set contacts until one answers.



Image: The HAMTOD T8's SOS button, designed for quick access in emergencies.

2.5 FM Radio

The integrated FM radio works without headphones.

1. Navigate to the "FM Radio" application in the menu.
2. Use the navigation keys to scan for stations or manually tune to a frequency.
3. Adjust the volume using the side volume buttons.

3. Maintenance

3.1 Cleaning Your Phone

- Use a soft, dry, lint-free cloth to clean the phone's screen and body.
- Avoid using harsh chemicals, cleaning solvents, or abrasive materials.

3.2 Battery Care

- Do not expose the battery to extreme temperatures.
- Avoid fully discharging the battery frequently.
- If the phone will not be used for an extended period, charge it to about 50% before storing.

3.3 Storage

Store the phone in a cool, dry place away from direct sunlight and moisture.

4. Troubleshooting

4.1 Phone Does Not Turn On

- Ensure the battery is correctly installed and charged.
- Connect the phone to the charger and wait a few minutes before attempting to power on again.

4.2 No Network Signal

- Check if the SIM card is correctly inserted.
- Ensure you are in an area with network coverage.
- Restart the phone.

4.3 Cannot Make or Receive Calls

- Verify that you have sufficient credit or an active plan with your network provider.
- Check network signal strength.
- Ensure the phone is not in Airplane Mode.

4.4 Screen is Unresponsive

- Restart the phone.
- Ensure the screen is clean and free from debris.

5. Specifications

Feature	Detail
Brand	HAMTOD
Model Name	T8 (H3 Series)
Operating System	Chipset Model (RTOS)
RAM	128 MB
CPU Model	A33 ARM Cortex A7 Quad Core
CPU Speed	1 GHz
Main Screen Size	2.8 inches (LCD)
External Screen Size	1.77 inches
Refresh Rate	60 Hz
Wireless Carrier	Unlocked
Cellular Technology	4G (LTE)
SIM Card Slots	Dual SIM
SIM Card Size	Nano
Connectivity	USB Type-C
Form Factor	Flip (Clamshell)
Water Resistance Level	Waterproof

Feature	Detail
Headphone Jack	3.5 mm
Compatible Devices	SIM Cards, TF Cards
Special Features	SOS Function
Rear Cameras	1
Battery Capacity	1500 mAh
Charging Time	2.5 hours
Talk Time	6-8 Hours
Standby Time	2 Weeks
Item Weight	180 Grams
Item Dimensions	15.5 x 6.5 x 2 cm
Model Year	2025

6. Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for warranty claims.
For further assistance, you may also visit the official HAMTOD website or contact their customer service department.

© 2025 HAMTOD. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I delete received voice messages on my HAMTOD T8 4G Senior Flip Phone when some messages refuse to be erased?

While the HAMTOD T8 manual provides basic instructions for navigating the Messages menu, it does not explicitly detail a separate process for deleting "vocal messaging" or voicemail notifications that may be stuck. If you...

Read full answer

Open the live page

https://manuals.plus/asin/B0FVSK7R5N

More documents and user manuals: **https://manuals.plus/**