Devoko 110 x 60 cm

Devoko Electric Height Adjustable Desk User Manual

Model: 110 x 60 cm

INTRODUCTION

Thank you for choosing the Devoko Electric Height Adjustable Desk. This desk is designed to provide a versatile and ergonomic workspace, allowing you to switch between sitting and standing positions effortlessly. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read it thoroughly before use and retain it for future reference.

Image: The Devoko Electric Height Adjustable Desk in a typical office environment, showcasing its design and functionality.

Safety Instructions

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Keep children and pets away from the desk during operation to prevent injury.
- Do not overload the desk. The maximum weight capacity is 80 kg (176 lbs).
- Ensure there are no obstructions in the desk's path during height adjustment to avoid damage or injury. The desk features anti-collision technology to help prevent this.
- Only use the provided power adapter.
- Do not disassemble or modify the desk's electrical components. Contact customer support for repairs.
- Keep liquids away from electrical components.

Package Contents

Please verify that all the following components are included in your package:

- Desktop (1 piece)
- Leg Columns (2 pieces)
- Feet (2 pieces)
- Control Panel (1 piece)
- Power Adapter and Cable (1 set)
- Cable Management Tray/Hooks (1 set)
- Hardware Kit (screws, Allen keys, etc.)
- Instruction Manual (this document)

Setup (Assembly)

Assembly of the Devoko Electric Height Adjustable Desk is designed to be straightforward, typically taking less than 30 minutes with the provided clear instructions and pre-drilled holes.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Feet to Leg Columns:** Secure the feet to the bottom of each leg column using the provided screws.
3. **Assemble Frame:** Connect the leg columns to the crossbar/frame components. Ensure all connections are tight.
4. **Attach Desktop:** Carefully place the desktop upside down on a soft surface. Position the assembled frame onto the desktop, aligning the pre-drilled holes. Secure the frame to the desktop using the provided screws.
5. **Install Control Panel:** Mount the control panel to the underside of the desktop in the desired location using the small screws.
6. **Connect Cables:** Connect the motor cables from the leg columns to the control box, and then connect the control panel cable to the control box. Finally, connect the power adapter to the control box.
7. **Cable Management:** Use the included cable management accessories (e.g., hooks) to organize and secure cables neatly.
8. **Initial Power-Up:** Carefully flip the desk upright. Plug the power adapter into a wall outlet.

Image: This illustration highlights the desk's robust stability, its anti-collision technology for safety, and a convenient hook for headphones or bags.

Operating Instructions

Your Devoko Electric Height Adjustable Desk offers easy and quiet height adjustments with memory presets.

Control Panel Functions:

Image: A detailed view of the control panel, featuring an LED display, three memory preset buttons, and up/down adjustment arrows.

- **Up/Down Arrows (▲ / ▼):** Press and hold these buttons to manually adjust the desk height. Release to stop at your desired position.
- **Memory Presets (1, 2, 3):** Your desk has three programmable memory settings.

a. Adjust the desk to your desired height using the up/down arrows.
b. Press the 'M' button. The display will show 'S-'.
c. Within 3 seconds, press the desired memory button (1, 2, or 3). The display will show 'S-1', 'S-2', or 'S-3' to confirm the setting is saved.
d. To recall a saved height, simply press the corresponding memory button (1, 2, or 3). The desk will automatically move to that height.

- **Anti-Collision Feature:** The desk is equipped with an anti-collision system. If the desk encounters an obstruction during adjustment, it will stop and reverse slightly to prevent damage.

Height Range and Noise Level:

The desk offers a height adjustment range from 71 cm to 119 cm. The lifting mechanism operates quietly, typically

below 50 decibels, ensuring a peaceful work environment.

Image: This image illustrates the ergonomic benefits, showing users comfortably working at both the minimum (71 cm) and maximum (108 cm) adjustable heights.

Image: A visual representation of the desk's ultra-quiet operation, indicating a noise level of approximately 50 dB, significantly lower than typical motor noise.

Maintenance

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cable Management:** Periodically check that all cables are securely connected and not pinched or tangled.
- **Fasteners:** Occasionally check and tighten any loose screws or bolts to ensure stability.
- **Motor Care:** The electric motor is maintenance-free. Do not attempt to lubricate or open it.

Troubleshooting

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected; Overload; Motor error.	Check power connection. Reduce weight on desk. Unplug for 10 seconds, then plug back in to reset.
Desk moves unevenly.	Uneven weight distribution; Loose connections.	Distribute weight evenly. Check and tighten all assembly screws.
Display shows an error code (e.g., E01, E02).	Specific motor or sensor error.	Refer to the full manual for specific error codes or contact customer support. Often, a power cycle (unplug, wait 10s, plug in) can resolve temporary errors.
Anti-collision feature is too sensitive/not sensitive enough.	Sensor sensitivity setting.	Consult the full manual for instructions on adjusting anti-collision sensitivity, if available.

Specifications

- **Model:** Devoko Electric Height Adjustable Desk
- **Desktop Dimensions:** 110 cm (Length) x 60 cm (Width)
- **Height Adjustment Range:** 71 cm - 119 cm
- **Maximum Weight Capacity:** 80 kg (176 lbs)
- **Material:** Steel frame, Wood desktop
- **Noise Level:** < 50 dB
- **Special Features:** Electric height adjustment, 3 memory presets, Anti-collision technology, Headphone/bag hooks

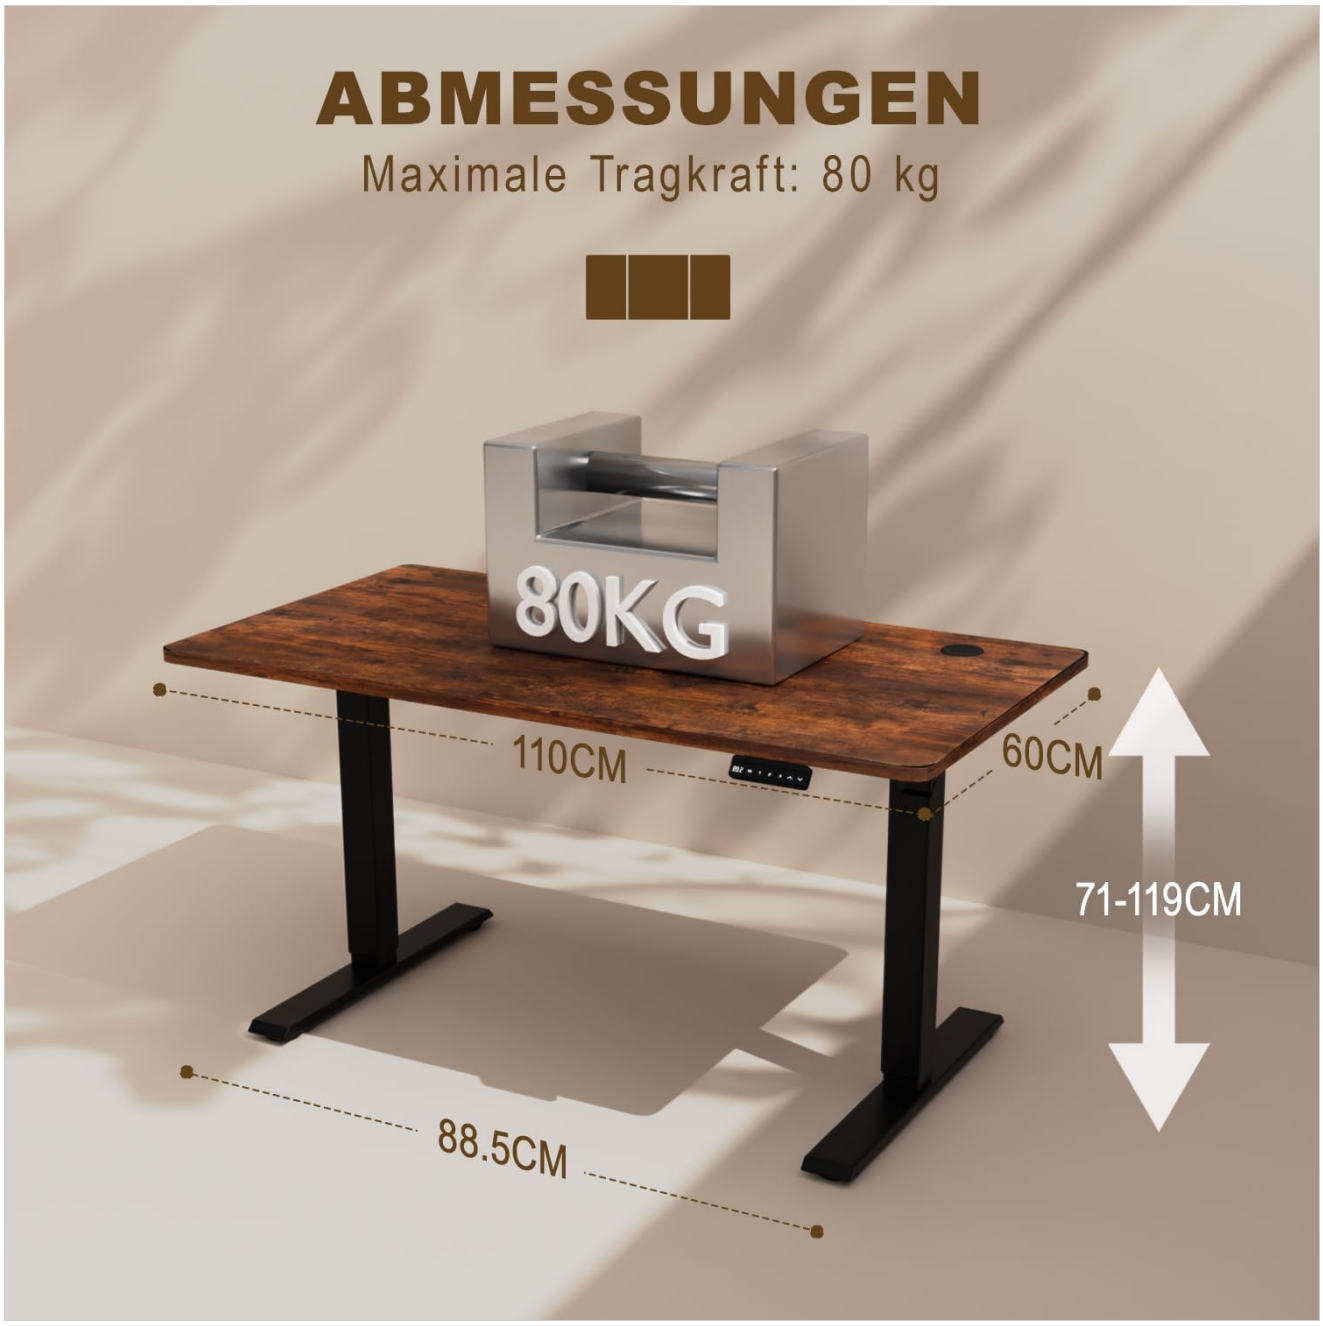

Image: A clear diagram illustrating the desk's key dimensions, including desktop size (110x60 cm), height range (71-119 cm), and maximum load capacity (80 kg).

Warranty Information

Devoko products are manufactured to high-quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your purchase or visit the official Devoko website. Please retain your proof of purchase for warranty claims.

Customer Support

If you have any questions, require assistance with assembly, or encounter any issues not covered in this manual, please do not hesitate to contact Devoko customer support. Our team is available to help you.
Contact Information:

Website: Visit the Devoko Store on Amazon

Email: [Please refer to your product packaging or warranty card for specific email address]

Phone: [Please refer to your product packaging or warranty card for specific phone number]