Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JOYDEEM DFB-C120

JOYDEEM Mini Ceramic Rice Cooker

Model: DFB-C120

User Instruction Manual

1. Important Safety Precautions

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

2. Product Overview and Components

Familiarize yourself with the parts of your JOYDEEM Mini Ceramic Rice Cooker.



Image: The JOYDEEM Mini Ceramic Rice Cooker with its included accessories laid out, showing the main unit, ceramic inner pot, spoon holder, measuring cup, soup spoon, rice spoon, power cord, and instruction manual. Dimensions are also indicated.

Included Components:

- Main Rice Cooker Unit
- Pure Ceramic Inner Pot
- Measuring Cup
- Rice Scoop
- Soup Spoon
- Power Cord

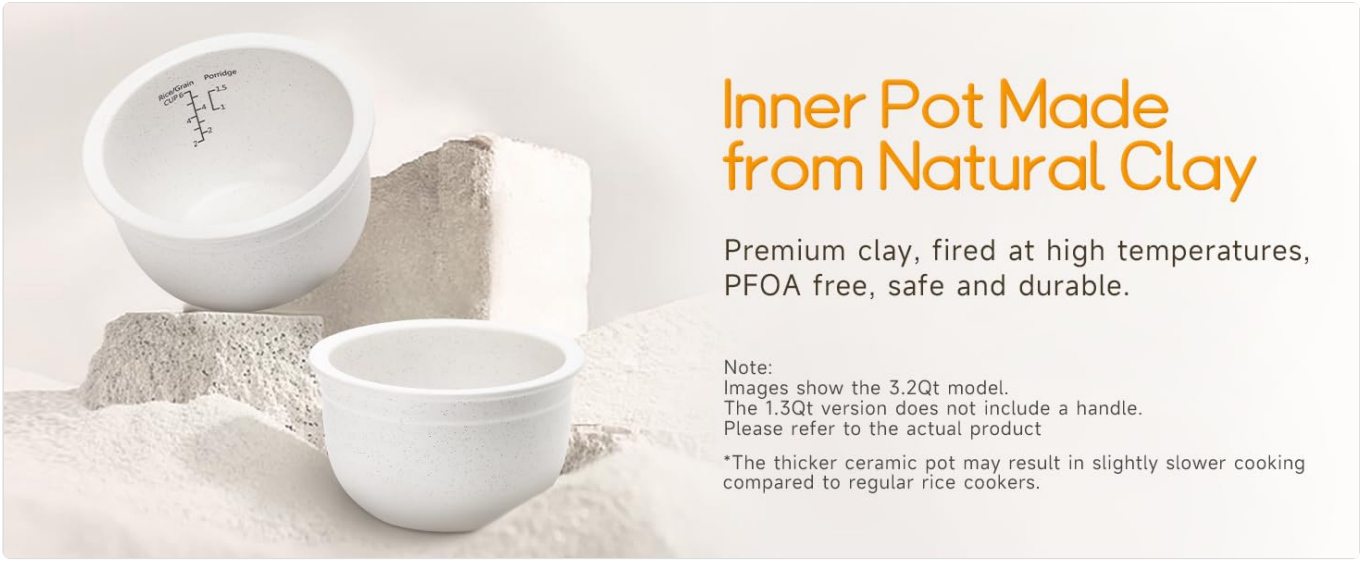

Image: Close-up of the pure ceramic inner pot, highlighting its natural clay material and durable construction.

3. Setup and First Use

1. **Unpack:** Carefully remove all packaging materials and any promotional labels from the rice cooker.
2. **Clean Components:** Wash the ceramic inner pot, measuring cup, and rice scoop with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.
4. **Insert Inner Pot:** Place the clean, dry ceramic inner pot into the main rice cooker unit, ensuring it sits properly on the heating element.
5. **Connect Power:** Plug the power cord into the rice cooker's power inlet, then plug the other end into a grounded electrical outlet (120V AC).

4. Operating Instructions

Your JOYDEEM Mini Ceramic Rice Cooker features 5 preset cooking functions for various needs.

Product	Capacity	Inner Pot Size	Inner Pot Material	Recommended Serving Size	Maximum Uncooked Rice Capacity	Cooked Rice Yield
 DFB-C120	1.2L (1.3Qt)	17×9.5cm	Full Ceramic Inner Pot	1–2 people	2.5 cups	About 5 bowls
 DFB-C300	3.0L (3.2Qt)	22×12.5cm	Full Ceramic Inner Pot	2–5 people	6 cups	About 9 bowls

Image: Close-up of the control panel with buttons for White Rice, Congee, Soup, Brown Rice, Claypot Rice, Keep Warm/Cancel, Start, Hour, Preset, and Minute.

4.1 Basic Rice Cooking (White Rice)

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. One cup of uncooked rice typically yields about 2-3 servings. The maximum capacity is 2.5 cups of uncooked rice.
2. **Rinse Rice:** Rinse the rice under cold running water until the water runs clear.
3. **Add Rice and Water:** Place the rinsed rice into the ceramic inner pot. Add the appropriate amount of water. A general guideline for white rice is a 1:1 ratio (1 cup rice to 1 cup water), or follow the water level markings inside the inner pot.
4. **Close Lid:** Ensure the inner pot is properly seated and close the lid securely.
5. **Select Function:** Press the "White Rice" button. The indicator light for "White Rice" will illuminate.
6. **Start Cooking:** Press the "Start" button. The cooker will begin the cooking cycle.
7. **Keep Warm:** Once cooking is complete, the cooker will automatically switch to "Keep Warm" mode. The "Keep Warm" indicator will light up. For best taste, serve rice shortly after cooking.

4.2 Using Preset Cooking Functions

The rice cooker offers dedicated buttons for various dishes:

- **White Rice:** For regular white rice.
- **Congee:** For porridge. Adjustable timing: 50 minutes – 2 hours.
- **Soup:** For various soups. Adjustable timing: 1.5 – 4 hours.
- **Brown Rice:** For brown rice, which requires a longer cooking time.
- **Claypot Rice:** For rice with a crispy bottom layer.

Steps for Preset Functions:

1. Prepare ingredients (rice, water, other ingredients for soup/congee) and place them in the inner pot.
2. Close the lid securely.
3. Press the desired function button (e.g., "Congee", "Soup", "Brown Rice", "Claypot Rice").
4. For "Congee" and "Soup", you can adjust the cooking time using the "Hour" and "Minute" buttons after selecting the function and before pressing "Start".
5. Press the "Start" button to begin cooking.
6. The cooker will automatically switch to "Keep Warm" when done.

4.3 Delay Start Function (Preset Timer)

You can set a timer for the cooking to finish at a later time, up to 24 hours.

Product	Heating Plate	Cooking Functions	Control Panel	Power	Accessories	Handle Design
 DFB-C120	3D Floating Heating Plate	White Rice Congee Soup Brown Rice Claypot Rice	Smart Touch Panel	300W	Soup Spoon + Rice Paddle + Measuring Cup	No Handle
 DFB-C300	3D Floating Heating Plate	Reheat White Rice Congee Soup Brown Rice Claypot Rice	Smart Touch Panel	500W	Soup Spoon + Rice Paddle + Measuring Cup	With Handle

Image: An illustration showing the 24-hour delay start function, where ingredients are added at PM 22:00 and cooking finishes at AM 07:00.

1. Prepare ingredients and place them in the inner pot. Close the lid.
2. Select your desired cooking function (e.g., "White Rice").
3. Press the "Preset" button. The display will show a default delay time.
4. Use the "Hour" and "Minute" buttons to adjust the desired delay time (when you want the cooking to be finished).
5. Press the "Start" button. The timer will begin counting down, and cooking will start automatically when the delay time is reached.

4.4 Keep Warm Function

After cooking is complete, the rice cooker automatically switches to "Keep Warm" mode for up to 8 hours. This function keeps your food warm without overcooking or sticking. To manually activate or deactivate "Keep Warm", press the "Keep Warm/Cancel" button when the cooker is not in a cooking cycle.

4.5 Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and operation of the Joydeem Ceramic Rice Cooker DFB-C120, showcasing its various cooking programs and ease of use.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your rice cooker.

1. **Unplug:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Ceramic Inner Pot:** The pure ceramic inner pot is naturally non-stick and easy to clean. Wash it with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or metal scrubbers that could damage the surface. Rinse thoroughly and dry completely.
3. **Inner Lid and Steam Vent Cap:** The inner lid and steam vent cap are removable for easy cleaning. Detach them and wash with warm, soapy water. Rinse and dry thoroughly before reattaching.
4. **Main Unit Exterior:** Wipe the exterior of the rice cooker with a soft, damp cloth. Do not use abrasive cleaners. Never immerse the main unit in water or any other liquid.
5. **Condensation Collector (if applicable):** If your model has a condensation collector, remove it, empty any water, wash it, and dry it before reattaching.

6. **Storage:** Ensure all parts are clean and dry before storing the rice cooker. Store it in a cool, dry place.



Image: Hands washing the pure ceramic inner pot under running water, demonstrating its easy-to-clean nature.

6. Troubleshooting

If you encounter any issues, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged into both the cooker and a working outlet. Check household circuit breaker.
Rice is undercooked or too hard.	Insufficient water; incorrect rice-to-water ratio; lid not closed properly.	Add correct amount of water. Ensure lid is securely closed. Do not open lid during cooking.
Rice is overcooked or mushy.	Too much water; incorrect rice-to-water ratio.	Reduce water amount for next cooking cycle.
Rice sticks to the bottom.	Not enough water; rice left on "Keep Warm" for too long.	Ensure proper water ratio. Serve rice promptly after cooking. Stir rice after cooking to release steam.
"E1" error displayed.	Inner pot not placed correctly; sensor issue.	Ensure the inner pot is properly seated and making full contact with the heating plate. If the error persists, unplug the unit, wait a few minutes, and plug it back in. If the issue continues, contact customer support.

7. Specifications

Feature	Detail
Model Number	DFB-C120
Brand	JOYDEEM

Feature	Detail
Capacity	1.2 Liters (1.3 Quarts) / 2.5 Cups Uncooked Rice
Power Source	Corded Electric
Voltage	120 Volts
Wattage	300 Watts
Product Dimensions (D x W x H)	12.6"D x 10.6"W x 11.4"H
Inner Pot Material	Pure Ceramic
Product Care Instructions	Hand Wash
Special Features	5 Preset Cooking Functions, Delay Start, Keep Warm, PFOA-Free

8. Warranty and Support

JOYDEEM products are manufactured to the highest quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official JOYDEEM website.

If you have any questions, concerns, or require technical assistance, please contact JOYDEEM customer support through their official website or the retailer where the product was purchased.

Website: Visit the JOYDEEM Store on Amazon

© 2023 JOYDEEM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FX9XRNYC

More documents and user manuals: **https://manuals.plus/**