MINISO MS188

MINISO MS188 AI Language Translator Earbuds User Manual

Model: MS188 | Brand: MINISO

Introduction

Welcome to the MINISO MS188 AI Language Translator Earbuds user manual. This guide provides detailed instructions for setting up, operating, and maintaining your device. These earbuds offer real-time two-way translation in 135 languages, high-definition sound, and a smart touchscreen charging case for enhanced communication and audio experience.

What's in the Box

- MINISO MS188 AI Language Translator Earbuds
- Charging Case with Touchscreen
- USB Charging Cable
- User Manual



Image: The MINISO MS188 AI Language Translator Earbuds and their touchscreen charging case.

Product Overview

The MINISO MS188 earbuds are designed for real-time language translation, music playback, and call management. They feature an OWS (Open-Wearable Stereo) design for comfortable wear and come with a 2.64-inch touchscreen

charging case that offers various controls and displays.



Image: The MINISO MS188 AI Translator Earbuds and their charging case, highlighting their multi-language translation capability with various greetings in different languages.

Setup and Pairing

Charging the Device

The earbuds and charging case come with included batteries. Ensure the device is fully charged before first use. Connect the provided USB cable to the charging case and a compatible power source. A full charge takes approximately 1.5 hours, providing up to 14 hours of earphone battery life and 54 hours with the charging compartment.

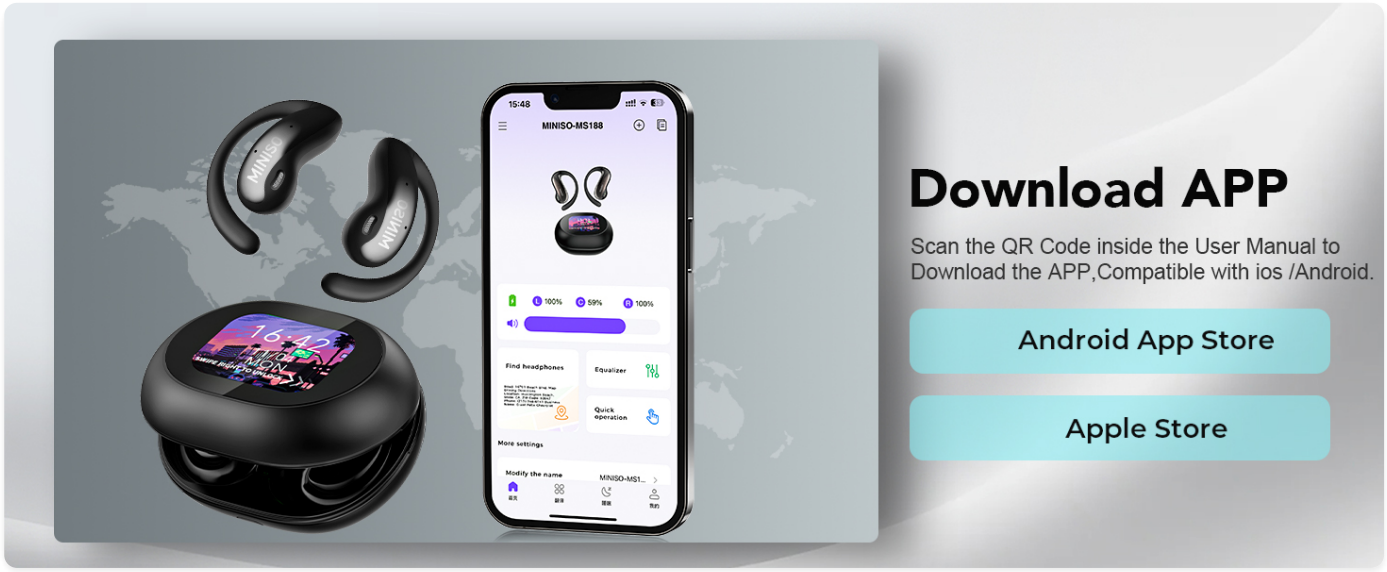

Image: The MINISO MS188 charging case connected via a USB-C cable, demonstrating the charging process and highlighting battery life.

Bluetooth Pairing

1. Open the earphone charging case.
2. On your smartphone, navigate to the Bluetooth settings and ensure Bluetooth is enabled.
3. Find "MINISO-MS188" in the list of available devices and select it to connect.
4. A "Connected" status in your phone's Bluetooth list indicates a successful connection.

Video: This video demonstrates the process of connecting the MINISO MS188 earbuds to a mobile device via Bluetooth (0:04 - 0:14), along with other functional instructions.

Operating Instructions

Earbuds Controls (Music Playback)

- **Play/Pause:** Click the left or right earbud once.
- **Volume Up:** Double-click the right earbud.
- **Volume Down:** Double-click the left earbud.
- **Next Song:** Triple-tap the right earbud.
- **Previous Song:** Triple-tap the left earbud.
- **Voice Assistant:** Press and hold the left earbud for 2 seconds.

Video: This video segment illustrates how to control music playback, adjust volume, and activate the voice assistant using the earbud touch controls (0:15 - 0:31).

Call Management

- **Answer/End Call:** Click the left or right earbud once.
- **Reject Call:** Long press the left or right earbud.

Video: This video segment demonstrates how to answer, end, or reject incoming calls using the earbud touch controls (0:32 - 0:49).

Translation Modes (via EarJoy APP)

The translation function requires the "EarJoy" APP. Download the app by scanning the QR code in the physical manual or searching in your device's app store. The app supports permanent free translation without subscription.

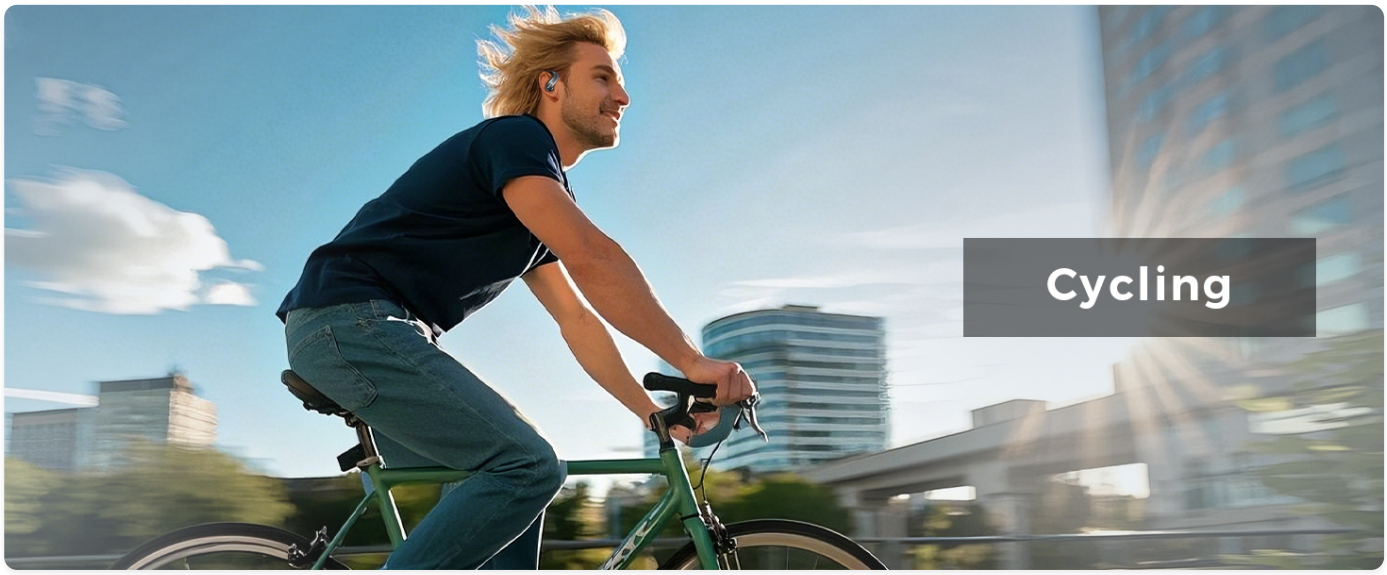

Image: A smartphone displaying the EarJoy app interface with the MINISO MS188 earbuds, indicating where to download the application.

Free Talk Mode

In Free Talk Mode, speak directly into the headset. The app will translate your speech into the selected target language and display it on the screen. This mode is ideal for one-on-one conversations where both parties can see the translated text.

Video: This video segment demonstrates the "Free Talk Mode" within the EarJoy app, showing real-time translation of spoken language (0:50 - 1:00).

AI Dialogue Mode

Engage in AI Dialogue Mode by asking the headset a question. The app will process your query and provide an answer, functioning as an intelligent assistant for real-time information query and personalized suggestions.

Video: This video segment illustrates the "AI Dialogue Mode," where users can ask questions and receive AI-generated responses through the earbuds (1:01 - 1:15).

Other Functions (via Touchscreen Charging Case)

The 2.64-inch touchscreen on the charging case provides additional controls and features:

- Language Switch
- Screen Lock
- Volume Adjustment
- Alarm Clock
- Screensaver
- Equalizer
- Light Level
- Spatial Sound
- Flashlight
- Phone Music
- Remote Camera Control (Photograph)



Image: This image displays the touchscreen interface of the MINISO MS188 charging case, showing various functions like language switch, volume control, and camera remote.

Maintenance and Care

- Keep the earbuds and charging case clean and dry.
- Avoid exposure to extreme temperatures and direct sunlight.
- Use a soft, dry cloth for cleaning. Do not use abrasive cleaners or solvents.
- Store the device in a cool, dry place when not in use.

Troubleshooting

Common Issues and Solutions

- **Earbuds not pairing:** Ensure both earbuds are in the charging case, the case is open, and Bluetooth is enabled on your device. Try forgetting the device in your phone's Bluetooth settings and attempting to pair again.
- **No sound:** Check volume levels on both the earbuds and your connected device. Ensure earbuds are properly seated in your ears.
- **Translation not working:** Verify the EarJoy APP is installed and updated. An internet connection is required for online translation. Ensure correct source and target languages are selected within the app.
- **Charging issues:** Confirm the charging cable is securely connected to both the case and a functional power source. Check for any debris in the charging port that might obstruct the connection.

Specifications

Feature	Detail
Model Number	MS188
Brand	MINISO
Package Dimensions	5.71 x 4.09 x 1.57 inches
Item Weight	7.4 ounces
Batteries	3 9V batteries (included)
Bluetooth Version	5.4
Earphone Single Battery Life	14 Hours
Total Battery Life (with case)	54 Hours
Charging Time	1.5 Hours

Warranty and Support

For detailed warranty information and technical support, please refer to the documentation included in your product packaging. You may also contact MINISO customer service directly for assistance.

If you have any questions or require further support, please feel free to contact us. We are committed to providing a response within 24 hours.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

The screen display on my MINISO MS188 charging case has gone blank and will not turn on even when charging. How can I fix this?

If the touchscreen on your MINISO MS188 charging case is not turning on even when connected to power, please try the following troubleshooting steps:Check the Power Source: Ensure the USB charging cable is securely...

Read full answer