Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Garvee 27" Wide Washer and Dryer Pedestals with Pullout-Shelf

Garvee 27-inch Washer and Dryer Pedestal User Manual

Model: 27" Wide Washer and Dryer Pedestals with Pullout-Shelf

1. Introduction

This manual provides essential instructions for the safe and efficient installation, operation, and maintenance of your Garvee 27-inch Washer and Dryer Pedestal. Please read this manual thoroughly before use and retain it for future reference.

The Garvee laundry pedestal is designed to elevate your washing machine or dryer by 16 inches, reducing the need for bending and improving ergonomic comfort during laundry tasks. It features a robust alloy steel construction, a retractable pull-out shelf, adjustable anti-vibration pads, and an integrated drain pan with a hose for leak protection.



Image 1.1: Product highlights including connectable rigidity, drain outlet, built-in drain pan, closed storage, extendable shelf, and waterproof surface.

Safety Information

- Ensure the pedestal is placed on a stable, level surface before placing any appliance on it.
- Do not exceed the maximum weight capacity of 1000 lbs.
- Always have two or more people when lifting and placing heavy appliances onto the pedestal.
- Keep children and pets away from the pedestal during installation and operation.

2. Product Components

Verify that all components are present before beginning assembly and installation:

- Product frame (main pedestal unit)
- Adjustable anti-slip feet (pre-installed or separate)
- Partition (for internal storage)

- Anti-slip stickers (for appliance placement)
- Drain hose (for drain pan)
- Pull-out shelf



Image 2.1: Detailed view of the pedestal components, including the drain outlet, drain pan, extendable shelf, and waterproof surface.

3. Setup Instructions

3.1 Unpacking and Inspection

1. Carefully remove all packaging materials.
2. Inspect the pedestal for any signs of damage. Contact customer support if any damage is found.
3. Ensure all components listed in Section 2 are present.

3.2 Determining Fit for Your Appliance

Before placing your appliance, measure its base dimensions to ensure it fits within the pedestal's top surface. The pedestal is 27 inches wide.



Image 3.1: Product dimensions showing the 27-inch width and 16.33-inch height. The top surface is 27x27 inches.



Image 3.2: Guide on how to measure your washer and dryer base dimensions to ensure proper fit on the pedestal. Note: If your machines are wider than the pedestal, they can still fit as long as the feet of the machine fit within 27 inches. You may need to adjust the

height of the feet to clear the raised edges of the pedestal shelf.

3.3 Leveling the Pedestal

1. Place the pedestal in its desired location.
2. Use a level to check the top surface of the pedestal.
3. Adjust the anti-slip feet by rotating them clockwise or counter-clockwise until the pedestal is perfectly level and stable.



Image 3.3: Close-up view of the anti-slip vibration pads on the top surface and the adjustable feet at the base, designed to reduce vibrations and ensure stability.

3.4 Installing the Drain Pan and Hose

1. Locate the built-in drain pan within the pedestal structure.
2. Connect the provided drain hose to the drain outlet on the pan.
3. Route the drain hose to a suitable floor drain or collection point to manage any potential leaks from the appliance.

3.5 Placing the Appliance

1. With assistance, carefully lift your washer or dryer onto the top surface of the leveled pedestal.
2. Ensure the appliance is centered and stable on the pedestal.
3. Apply the anti-slip stickers to the top surface of the pedestal before placing the appliance, if not already applied, to further secure the appliance and reduce movement during operation.

4. Operating Instructions

4.1 Using the Pull-out Shelf

The pedestal features a retractable pull-out shelf designed to hold a laundry basket, providing a convenient surface for loading and unloading laundry. To use:

1. Gently pull the shelf handle to extend it forward.
2. Place your laundry basket on the extended shelf.
3. After use, push the shelf back into the pedestal until it is fully retracted.



Image 4.1: A washing machine placed on the pedestal, with the pull-out shelf extended to hold a laundry basket, demonstrating ergonomic loading.



Image 4.2: The pull-out shelf also functions as a large capacity drawer, providing easy access storage for detergents, softeners, and other laundry accessories.

4.2 Utilizing Elevated Height

The 16-inch elevation of the pedestal reduces the need to bend down when accessing your washer or dryer, promoting better posture and reducing strain on your back and knees.

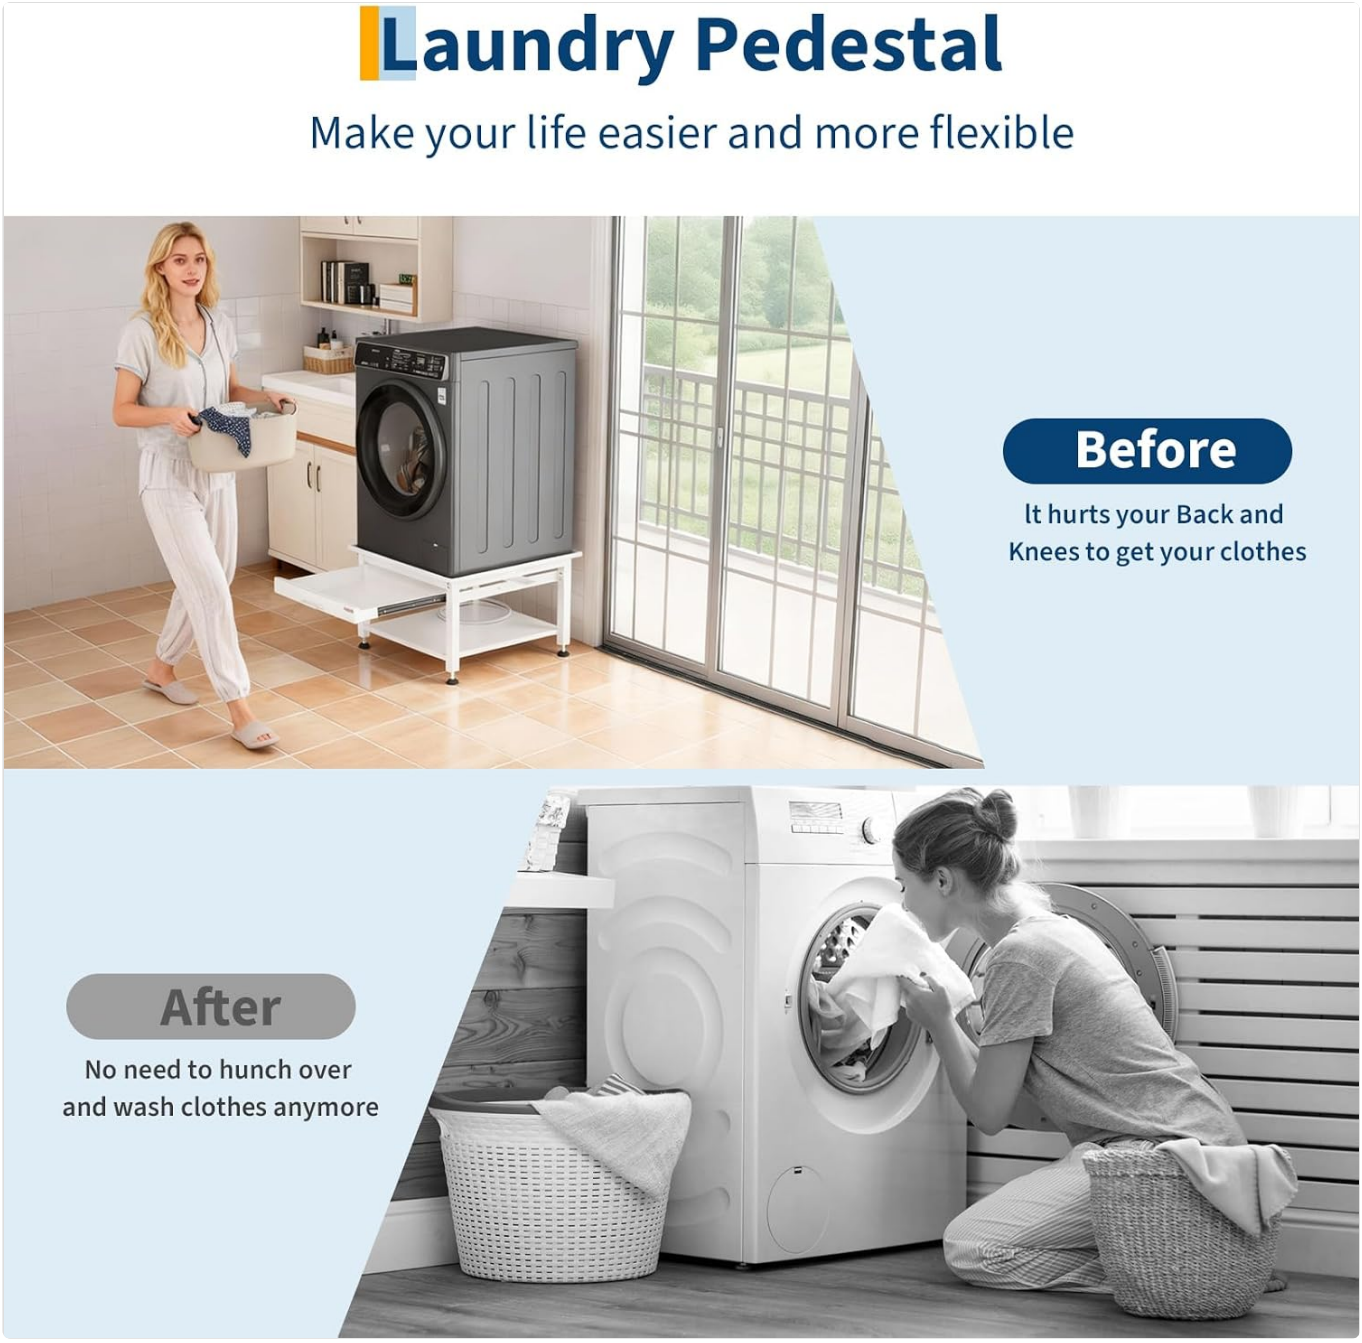


Image 4.3: Comparison showing the ergonomic benefit of using the laundry pedestal, reducing bending and back strain during laundry tasks.

5. Maintenance

5.1 Cleaning

The pedestal's surface is waterproof and easy to clean. Use a soft, damp cloth and mild detergent to wipe down the surfaces as needed. Avoid abrasive cleaners or harsh chemicals that could damage the finish.



Image 5.1: Detail showing the waterproof and easy-to-clean surface of the pedestal.

5.2 Stability Check

Periodically check the stability of the pedestal and the appliance placed on it. Ensure the adjustable feet remain firmly in place and the pedestal is level. Re-adjust the feet if any wobbling or instability is detected.

6. Troubleshooting

6.1 Pedestal is Unstable or Wobbles

- **Solution:** Re-check the leveling of the pedestal using a spirit level. Adjust the individual anti-slip feet until all four corners are firmly on the ground and the top surface is level. Ensure the appliance is centered on the pedestal.

6.2 Drain Hose is Not Functioning Properly

- **Solution:** Verify that the drain hose is securely connected to the drain pan outlet and is routed correctly to a floor drain or collection container without kinks or obstructions. Ensure the outlet is clear of debris.

6.3 Pull-out Shelf is Stiff or Difficult to Operate

- **Solution:** Check for any obstructions in the sliding mechanism. Ensure the shelf is clean and free of debris. If necessary, apply a small amount of silicone-based lubricant to the sliding tracks.

7. Specifications

Feature	Detail
Material	Alloy Steel
Brand	Garvee
Color	Black
Mounting Type	Floor Mount
Item Weight	41.18 Pounds
Weight Limit	1000 Pounds

Feature	Detail
Size (W x H)	27" x 16"
UPC	199913760009
Included Components	Adjustable anti-slip feet, product frame, partition, anti-slip sticker, drain hose

8. Warranty Information

This Garvee product is covered by a**5-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation included with your purchase or contact Garvee customer support.

9. Customer Support

If you have any questions, require assistance with installation, or need to report an issue, please contact Garvee customer support. Refer to the contact information provided with your product packaging or visit the official Garvee website for support options.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0G2L5XCYQ

More documents and user manuals: **https://manuals.plus/**