Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEVOR SS-1150QRDZ

VEVOR 43.3" Wall Safe (Model SS-1150QRDZ) Instruction Manual

Comprehensive guide for the installation, operation, and maintenance of your VEVOR 43.3" High Wall Safe.

1. Important Safety Information

Please read and understand all safety instructions before installing or operating the VEVOR 43.3" Wall Safe. Failure to follow these instructions may result in injury or damage to the product or property.

- Always keep emergency keys in a secure location away from the safe. Do not store them inside the safe.
- Ensure the safe is securely mounted to a structural element (e.g., wall studs, concrete) to prevent removal.
- Do not attempt to force the safe open if the electronic lock malfunctions. Use the emergency key or external power box.
- Keep children and unauthorized individuals away from the safe and its access codes/keys.
- Regularly check battery levels and replace them as needed to ensure proper electronic lock function.

2. Package Contents

Verify that all items listed below are included in your package:

- 1 x VEVOR 43.3" Wall Safe
- 2 x Keys
- 1 x USB Port External Battery Box
- 3 x Shelves
- 12 x Shelf Clips
- 6 x Expansion Bolts
- 1 x Key Pouch
- 1 x User Manual



Figure 2.1: VEVOR 43.3" Wall Safe with included accessories and dimensions.

3. Specifications

Feature	Detail
Brand	VEVOR

Model Number	SS-1150QRDZ
Product Dimensions (D x W x H)	4"D x 14.57"W x 43.3"H (103 x 370 x 1100 mm)
Wall Cabinet Embedded Dimensions	3.94" x 13.78" x 42.72" (100 x 350 x 1085 mm)
Lock Type	Password + Key
Color	Black
Material	Q235 Cold-Rolled Carbon Steel
Number of Shelves	3 (Adjustable)
Mounting Holes	3 on left, 3 on right, 4 on back
Item Weight	40.01 lbs (17.4 kg)
Special Features	LED Lighting, Anti-Theft Alarm, Key Holders, Anti-Tip Strap

4. Setup and Installation

The VEVOR 43.3" Wall Safe is designed for in-wall installation, fitting seamlessly between standard 16-inch on-center wall studs. Proper installation is crucial for security.

4.1 Site Selection

- Choose a location with sufficient wall depth and width to accommodate the safe's dimensions (3.94"D x 13.78"W x 42.72"H).
- Verify the presence and spacing of wall studs using a stud finder. The safe is designed to fit between studs spaced 16 inches on center.
- Ensure there are no electrical wires, plumbing, or other obstructions within the wall cavity at the chosen location.

4.2 Installation Steps

1. **Prepare the Wall Opening:** Carefully mark and cut an opening in the drywall or other wall material according to the safe's embedded dimensions (3.94"D x 13.78"W x 42.72"H). Ensure the cut is precise for a snug fit.
2. **Insert the Safe:** Gently slide the safe into the prepared wall opening. The front flange of the safe should sit flush against the wall surface.
3. **Secure the Safe:**
    - Open the safe door.
    - Locate the pre-drilled mounting holes on the left (3 holes), right (3 holes), and back (4 holes) of the safe's interior.
    - Using the provided expansion bolts (for concrete/masonry) or appropriate wood screws (for wood studs), secure the safe to the wall studs or structural elements. Tighten all screws/bolts firmly to prevent any movement.
4. **Adjust Shelves:** The safe includes 3 adjustable shelves and 12 shelf clips. Position the shelves at desired heights by inserting the clips into the corresponding slots on the interior walls of the safe.
5. **Install Key Holders and Anti-Tip Strap:** Utilize the integrated key hooks on the inside of the door and the anti-tip strap for organized storage of items like firearms.



Figure 4.1: Wall safe installation process.



Figure 4.2: Interior features including adjustable shelves and key holders.

5. Operating Instructions

Your VEVOR wall safe offers multiple ways to access your valuables, including a digital password and emergency keys.

5.1 Initial Setup of Electronic Lock

1. **Install Batteries:** Open the battery compartment (usually located on the inside of the door or behind the keypad)

and insert 4 AA batteries (not included).

2. **Set Master Password:**
    - With the door open, press the internal "SETTING BUTTON" (often a small green button).
    - Enter your desired 3-8 digit master password on the keypad.
    - Press the "#" or "OK" button to confirm. The safe will emit a confirmation sound.
3. **Set User Password (Optional):** Repeat the steps for setting the master password, but use a different code. Some models allow multiple user codes. Refer to the specific instructions in your included user manual for advanced settings.
4. **Test the Password:** With the door open, enter your new password and press "#" or "OK". The bolt should retract. Close the door and test again.

5.2 Opening the Safe

- **Using Password:**
    a. Touch the keypad to activate it.
    b. Enter your 3-8 digit password.
    c. Press "#" or "OK". The bolt will retract.
    d. Turn the knob clockwise to open the door.
- **Using Emergency Key:**
    a. Locate the keyhole cover on the keypad panel. Slide it to reveal the keyhole.
    b. Insert the emergency key and turn it counter-clockwise.
    c. Turn the knob clockwise to open the door.
- **Using External Power Box (if batteries are dead):**
    a. If the internal batteries are depleted, connect the USB External Battery Box (with 4 AAA batteries installed) to the external power port on the keypad.
    b. Enter your password on the keypad and press "#" or "OK".
    c. Turn the knob clockwise to open the door.



Figure 5.1: Multiple unlocking options for the safe.

5.3 Closing and Locking the Safe

Close the door firmly. The safe will automatically lock after a few seconds, or you can manually turn the knob counter-clockwise to engage the bolts.

5.4 Anti-Theft Alarm System

The safe is equipped with an anti-theft alarm system that triggers under the following conditions:

- **Three Incorrect Password Attempts:** If an incorrect password is entered three consecutive times, the alarm will activate.
- **Forceful Impact or Tampering:** The safe's vibration sensor will detect forceful impacts or attempts to tamper with the safe, triggering the alarm.

To silence the alarm, enter the correct password or use the emergency key to open the safe.

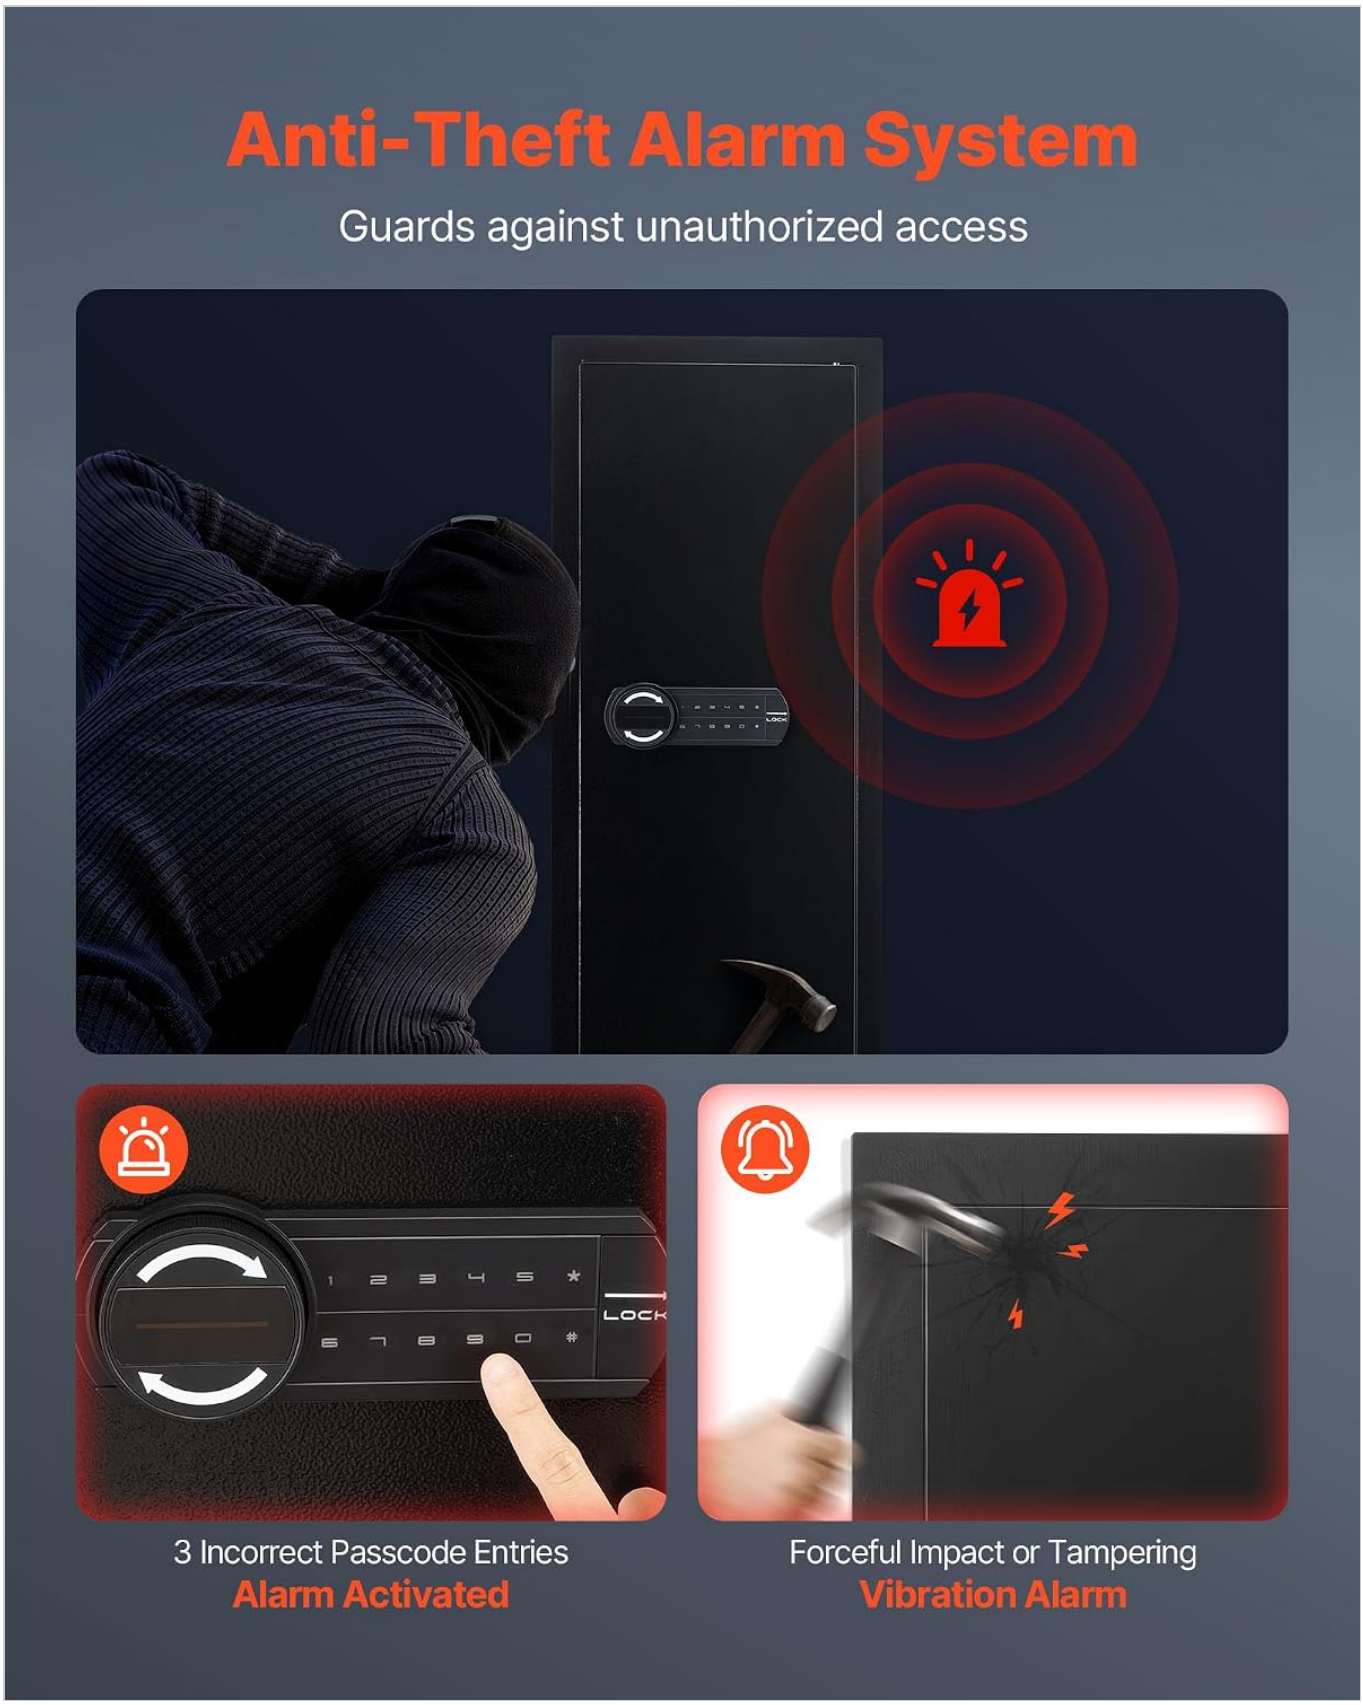


Figure 5.2: Anti-theft alarm system features.

6. Maintenance

- **Battery Replacement:** Replace the 4 AA batteries in the electronic lock unit approximately once a year, or when the low battery indicator appears. Always use new, high-quality alkaline batteries.
- **Cleaning:** Clean the exterior and interior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish or electronic components.
- **Key Storage:** Store emergency keys in a secure, hidden location separate from the safe. Do not store them inside the safe.
- **Check Mounting:** Periodically check the mounting bolts or screws to ensure they remain tight and secure.

7. Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with password.	Incorrect password entered; dead batteries; electronic malfunction.	• Ensure correct password is used. • Replace batteries or use the external power box. • Use the emergency key to open.
Alarm sounds unexpectedly.	Three incorrect password attempts; forceful impact/tampering.	• Enter correct password to silence. • Check for signs of tampering.
Keypad is unresponsive.	Dead batteries; electronic malfunction.	• Replace batteries or use the external power box. • If still unresponsive, use the emergency key.
Door does not close or lock properly.	Obstruction; misaligned door; damaged locking mechanism.	• Check for any items obstructing the door or bolts. • Ensure the safe is securely mounted and not warped. • Contact customer support if mechanism is damaged.

8. Warranty and Support

VEVOR products are designed for durability and performance. For warranty information, technical support, or to report any issues, please refer to the contact information provided in your original purchase documentation or visit the official VEVOR website.
Please have your model number (SS-1150QRDZ) and purchase date available when contacting support.

© 2026 VEVOR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0G2L96W88

More documents and user manuals: **https://manuals.plus/**