Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VASAGLE LTS316BC01

VASAGLE CUSTOS Collection Chest of Drawers LTS316BC01 User Manual

Model: LTS316BC01 | Brand: VASAGLE

1. Introduction

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your VASAGLE CUSTOS Collection Chest of Drawers, model LTS316BC01. Please read these instructions carefully before use to ensure safe and optimal performance of your product. Keep this manual for future reference.

2. Safety Information

To prevent serious injury or property damage, always follow these safety precautions:

- **Anti-Tipping Device:** Always install the included anti-tipping accessory to securely anchor the chest of drawers to the wall. This is crucial to prevent the unit from tipping over, especially in households with children or pets.
- **Weight Capacity:** Do not exceed the maximum weight capacity for the top surface (75 kg) or individual drawers (10 kg). Overloading can compromise stability and structural integrity.
- **Placement:** Place the unit on a flat, stable, and level surface. Uneven surfaces can lead to instability.
- **Electrical Safety:** Ensure the power outlet is connected to a grounded electrical source. Do not overload the integrated power strip. Keep liquids away from electrical components.
- **Assembly:** Follow all assembly steps precisely. Do not skip steps or use unauthorized parts.



Figure 2.1: The anti-tipping kit adds extra stability for maximum peace of mind. Always install the anti-tipping device to prevent accidents.

3. Package Contents

Verify that all components are present before beginning assembly:

- 1 x Chest of Drawers (main unit)

- 1 x Anti-tipping accessory kit
- 1 x Assembly tool bag (includes necessary hardware)
- 1 x Instruction Manual (this document)

4. Setup and Assembly

Assembly is required for this product. Please follow the detailed step-by-step instructions provided in the included assembly manual. Ensure you have adequate space and all tools listed in the manual before starting.

4.1 Assembly Overview

For a quick visual guide on assembly, refer to the following videos:

Quick Assembly Guide

▶ **Watch video online**
Montaggio in 15 minuti—Veloce come riscaldare una pizza!

This video provides a concise overview of the assembly process, highlighting key steps for quick setup.

Detailed Assembly Steps

▶ **Watch video online**
Scatta, clicca, fatto—senza attrezzi, senza stress!

This video demonstrates the full assembly process, ensuring you can follow along for a stress-free setup.

4.2 Dimensions and Capacity

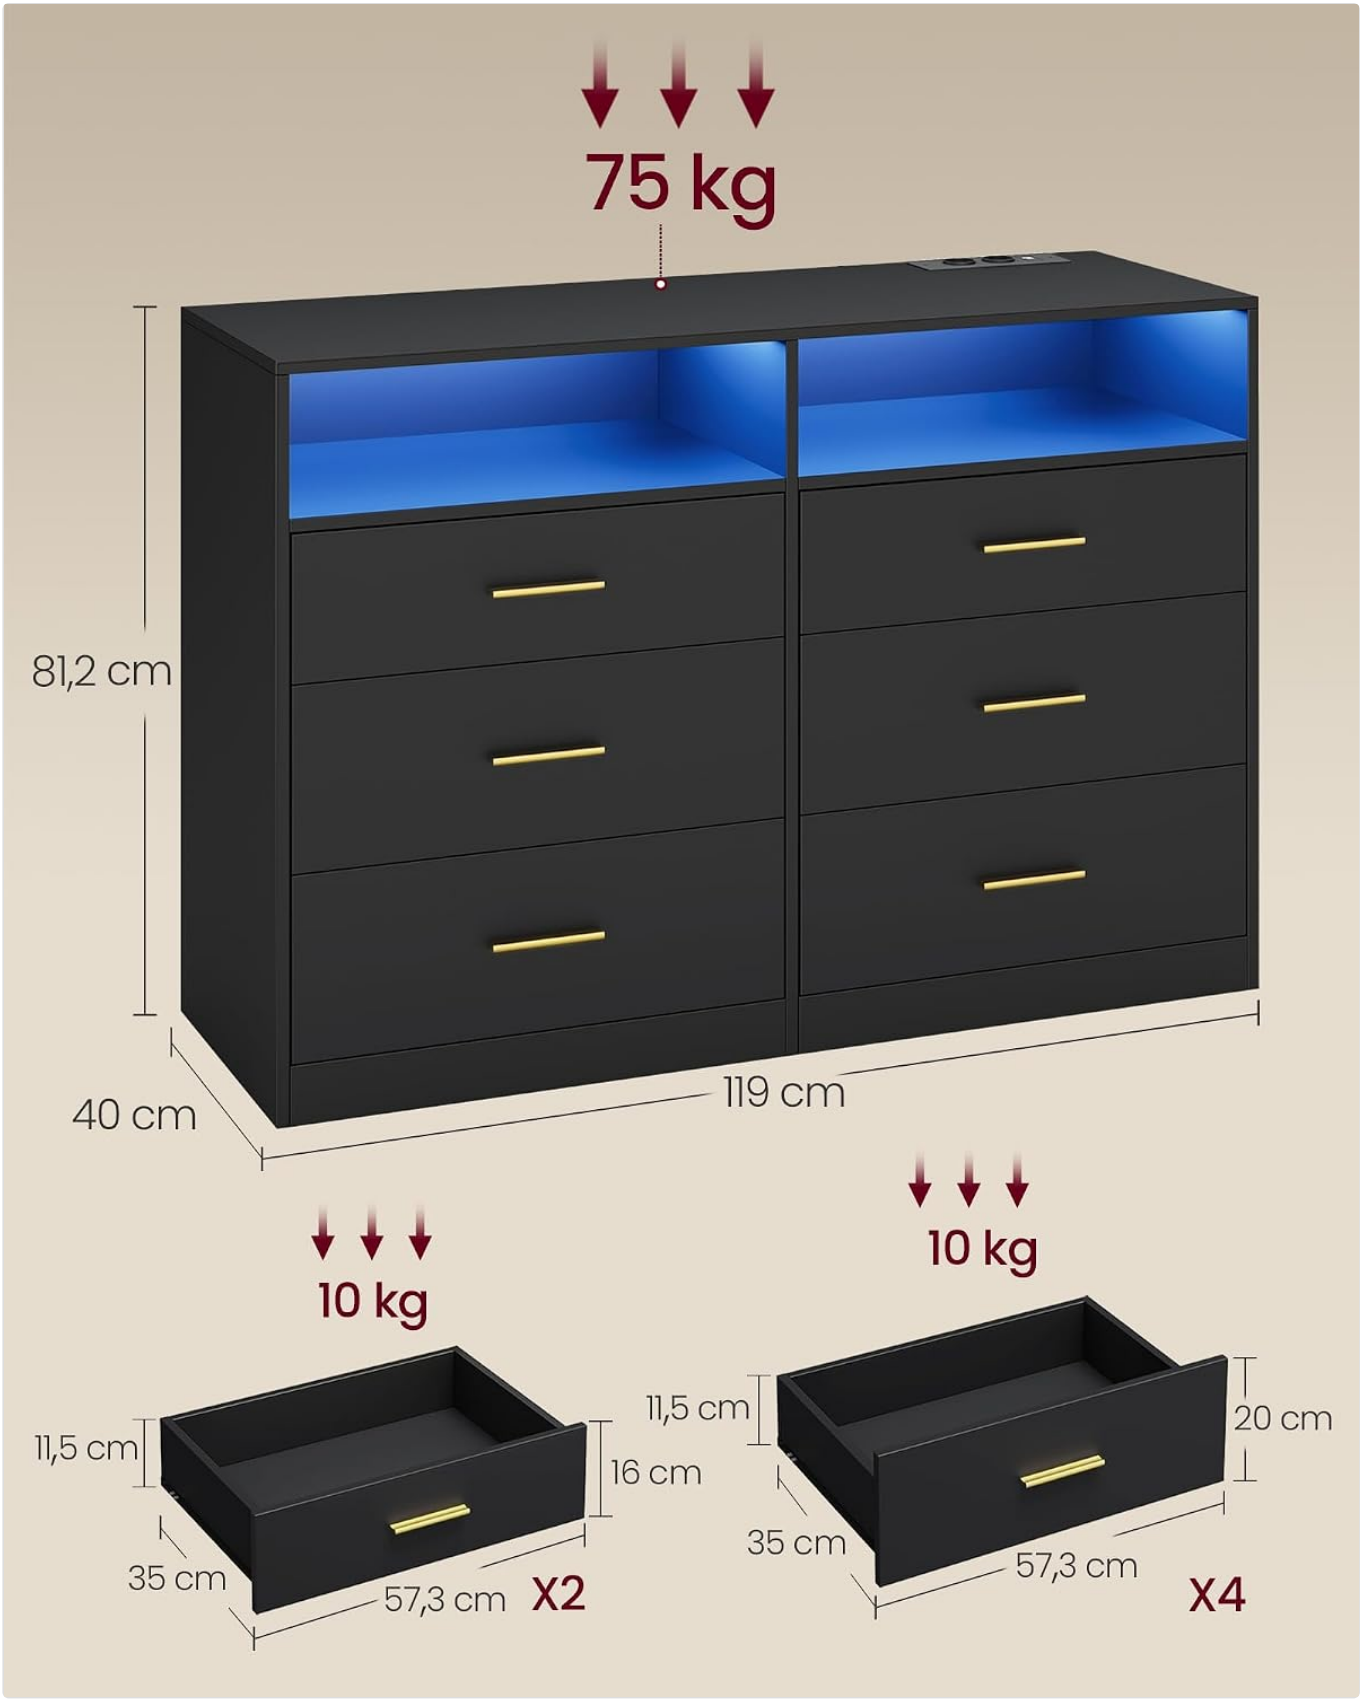


Figure 4.1: Product dimensions and weight capacities for the top surface and individual drawers.

5. Operating Instructions

5.1 Drawer Usage

The chest features six spacious drawers designed for organized storage. Two smaller drawers (11.5 cm height) are ideal for small items, while four larger drawers (20 cm height) accommodate bulkier clothing or seasonal items.

- **Opening/Closing:** Use the elegant metal handles for smooth and effortless drawer operation.
- **Organization:** Utilize the varying drawer depths to organize items by type, keeping everything within easy reach.



Figure 5.1: Drawer organization with varying heights for different item types.



Figure 5.2: Elegant metal handles and quality drawer glides ensure smooth and effortless opening and closing.

Drawer Organization Demonstration

▶ **Watch video online**
TEENFON Cassettiera Camera da Letto

This video demonstrates the practical use and organization capabilities of the drawers.

5.2 LED Lighting

The integrated LED lighting system offers customizable ambient light for various settings.

- **Control:** The LED lights can be controlled via a dedicated mobile application or manually.
- **Features:** Choose from over 29 colors, adjust brightness (dimmable), activate microphone mode for sound synchronization, music mode, set timers, and select dynamic lighting modes.

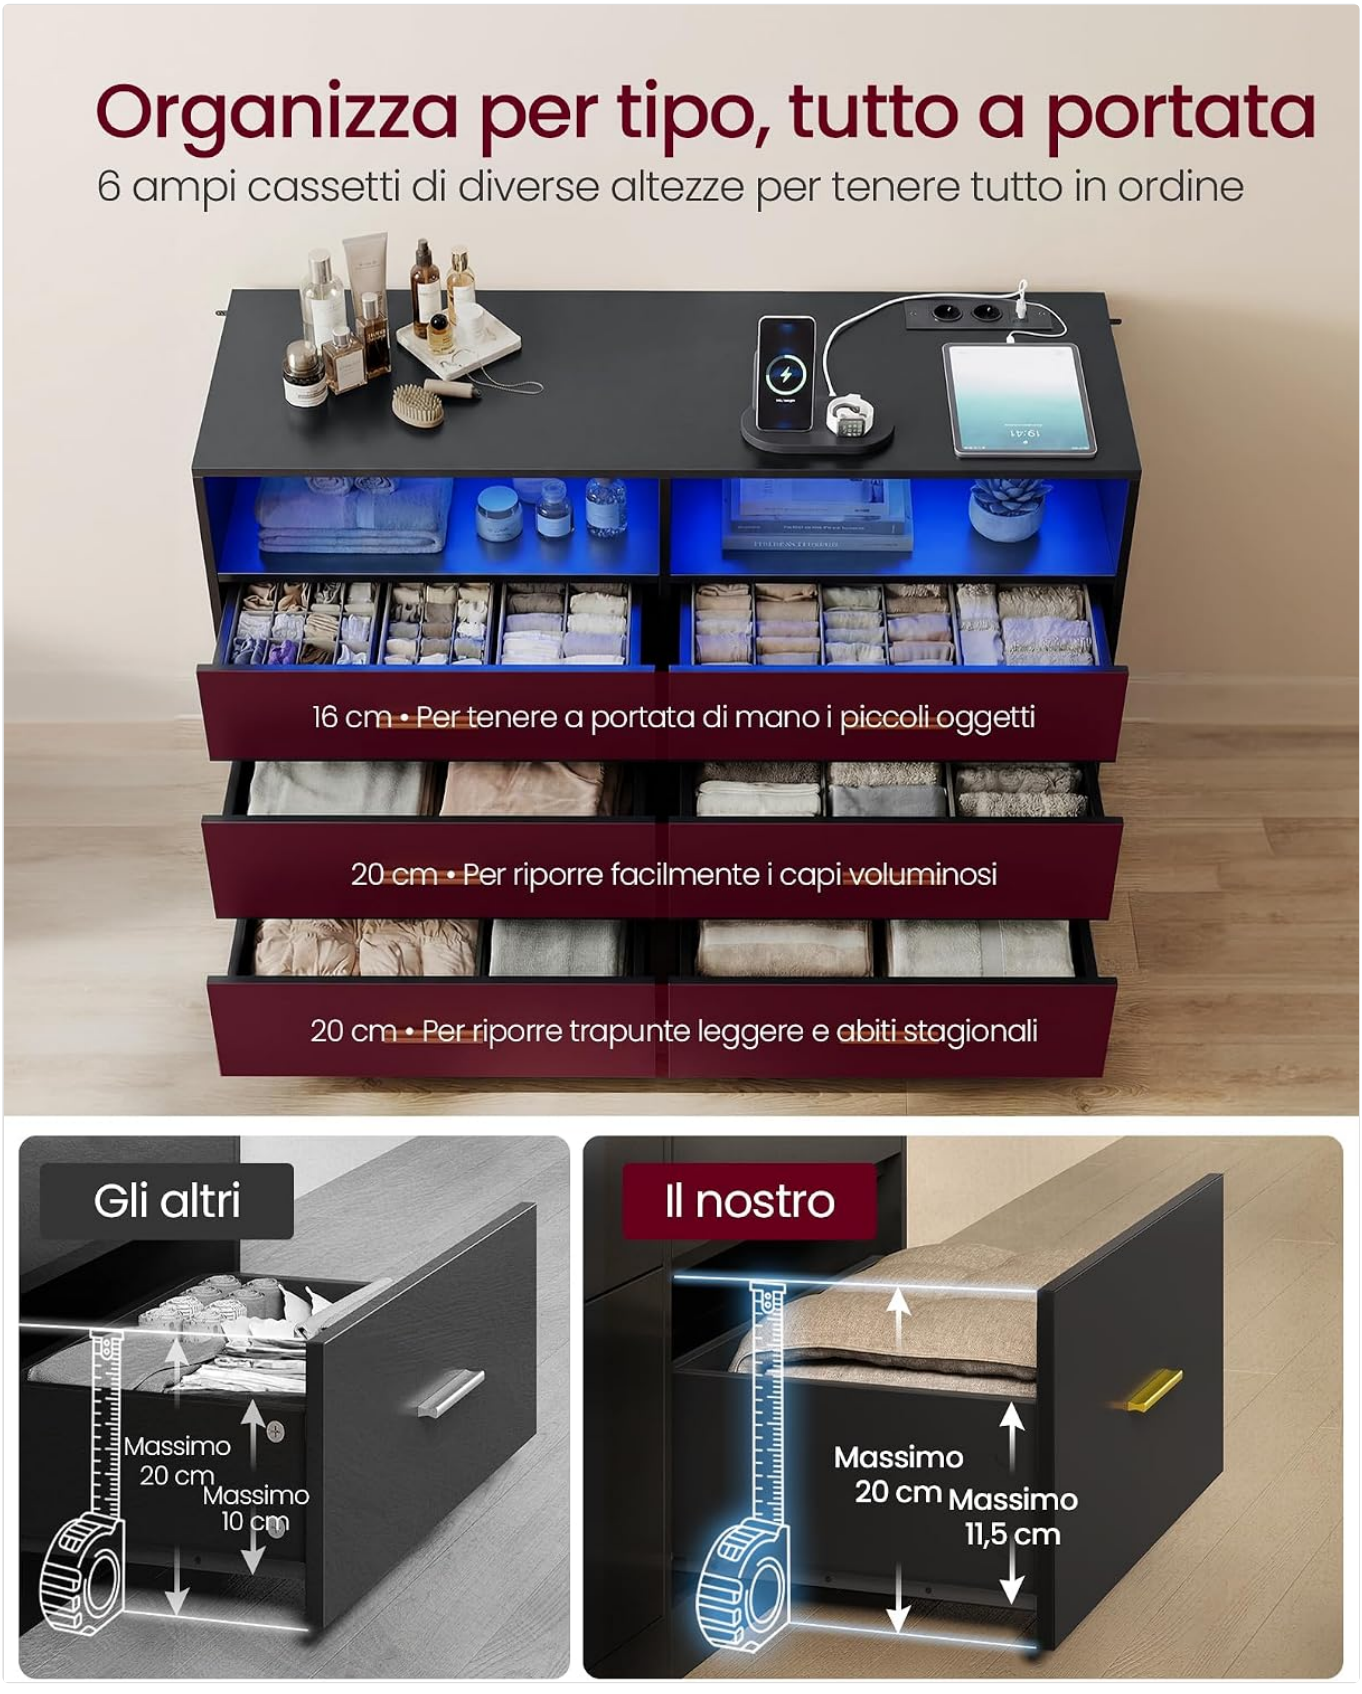


Figure 5.3: Adjustable LED light features and control options via mobile app.



Figure 5.4: The LED lighting creates an ambient atmosphere suitable for various rooms like the living room or dining room.

5.3 Integrated Power Outlet

The chest of drawers includes a built-in power strip for convenient charging and powering of devices.

- **Ports:** Features 2 AC outlets, 2 USB-A ports (one on the rear), and 1 USB-C port.
- **Usage:** Connect and charge mobile phones, gaming consoles, televisions, routers, or other electronic devices simultaneously.



Figure 5.5: The integrated power outlet allows for easy and convenient charging of multiple devices.

6. Maintenance

Proper care will extend the life and appearance of your chest of drawers:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.

- **Spills:** Clean spills immediately to prevent staining or damage to the material.
- **Drawer Glides:** Periodically check drawer glides for smooth operation. If they become stiff, a small amount of silicone lubricant can be applied.
- **Electrical Components:** Ensure the power strip and LED connections are clean and free from dust. Do not attempt to repair electrical components yourself.
- **Anti-Tipping Device:** Regularly check the anti-tipping device to ensure it remains securely fastened to both the unit and the wall.

7. Troubleshooting

If you encounter issues with your chest of drawers, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drawers do not slide smoothly or get stuck.	Misaligned glides, obstruction, or loose screws.	Check that glides are properly aligned and free of debris. Tighten any loose screws on the drawer or cabinet glides. Apply silicone lubricant if needed.
LED lights are not working.	Loose connection, power outage, or faulty LED strip.	Ensure all LED connections are secure. Check if the power outlet is functioning. If the issue persists, contact customer support.
Power outlets/USB ports are not working.	No power to the unit, overloaded circuit, or faulty power strip.	Verify the main power cable is securely plugged into a working wall outlet. Check for tripped circuit breakers. Do not exceed the power strip's maximum load. If the problem continues, discontinue use and contact support.
Unit feels unstable or wobbly.	Uneven floor, loose assembly screws, or anti-tipping device not installed/secured.	Ensure the unit is on a level surface. Tighten all assembly screws. Verify the anti-tipping device is correctly installed and securely fastened to the wall.

8. Specifications

Feature	Detail
Model Number	LTS316BC01
Dimensions (L x W x H)	40 x 119 x 81.2 cm (15.7 x 46.8 x 31.9 inches)
Material	Particleboard, MDF (Medium-Density Fibreboard)
Weight	39.9 kg (87.9 lbs)
Number of Drawers	6

Feature	Detail
Top Surface Weight Capacity	75 kg (165 lbs)
Drawer Weight Capacity (each)	10 kg (22 lbs)
Power Outlet	2 AC outlets, 2 USB-A ports, 1 USB-C port
LED Lighting Features	29+ colors, Dimmable, Microphone Mode, Music Mode, Timer, Dynamic Mode
Assembly Required	Yes

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official VASAGLE website. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0G2Y1X67B

More documents and user manuals: **https://manuals.plus/**