Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

eboboin BS-8012

eboboin BS-8012 Electric Rotary Shaver User Manual

Model: BS-8012

Important Safety Information

Please read all instructions carefully before using this product and retain for future reference.

- This product is intended for adult grooming use only.
- Keep out of reach of children.
- Avoid dropping the unit or exposing it to extreme heat or cold.
- Do not disassemble the shaver. Refer to the maintenance section for cleaning instructions.
- Ensure the charging port is dry before connecting the Type-C USB cable.

Product Overview

The eboboin BS-8012 Electric Rotary Shaver is designed for a comfortable and efficient shaving experience. It features a 3-blade system with 4D floating heads that adapt to facial contours, providing a close shave for both wet and dry use. The shaver is IPX7 waterproof, allowing for easy cleaning and use in the shower. It includes a digital battery display, a cleaning reminder, overvoltage protection, and a travel lock for enhanced convenience and safety.



Image: Overview of the eboboin BS-8012 Electric Rotary Shaver, showcasing its AI technology, 54 blades, auto-sharpening, IPX7 waterproof rating, travel lock, magnetic head, power view display, hyperspeed motor, and 90-day run time.

Package Contents

Verify that all items are present in the package:

- Electric Razor for Men Cordless (BS-8012)
- Charger (Type-C USB cable)
- Cleaning Brush
- Protective Cap
- Attachment (likely referring to the shaving head assembly)



Image: The eboboin BS-8012 Electric Rotary Shaver shown alongside its retail packaging, illustrating the product's appearance.

Setup

Charging the Shaver

1. Ensure the shaver is turned off.
2. Locate the Type-C charging port on the shaver.
3. Connect the provided Type-C USB cable to the shaver and a compatible USB power source (e.g., wall adapter, computer, power bank, car charger).
4. The LED display will show the battery status during charging. A full charge takes approximately 1.5 hours.
5. Once fully charged, the display will indicate 100%. Disconnect the shaver from the power source.

A full charge provides over 90 minutes of shaving time.

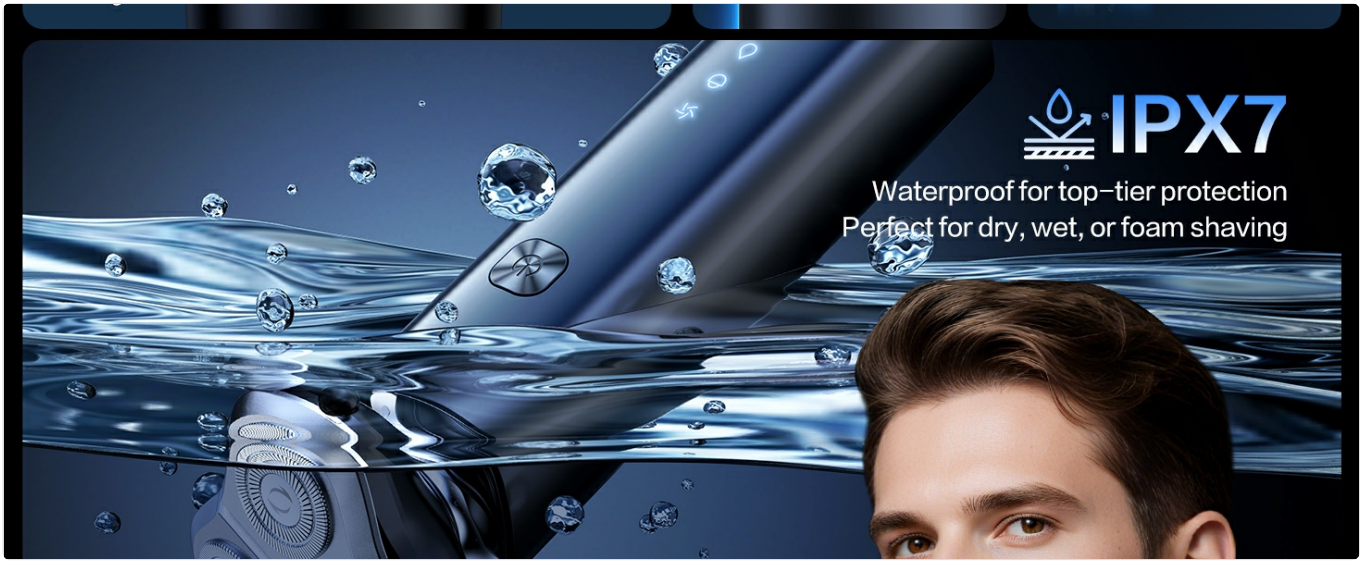


Image: The eboboin BS-8012 Electric Rotary Shaver connected to a USB-C charging cable, illustrating the fast charging capability and various compatible power sources like a wall plug, computer, power bank, and car charger.

Operating Instructions

General Shaving

1. Press the power button to turn on the shaver. The LED display will show the current battery percentage.
2. Hold the shaver at a right angle to your skin and move it in small, circular motions.
3. Apply gentle pressure. The 4D floating heads are designed to adapt to your facial contours for an efficient shave.
4. For best results, shave against the direction of hair growth.
5. After shaving, press the power button to turn off the shaver.

Wet and Dry Shaving

- **Dry Shave:** Use the shaver on dry skin for a quick and convenient shave.
- **Wet Shave:** The shaver is IPX7 waterproof and can be used with shaving foam or gel, or directly in the shower for a refreshing shave. Rinse the shaver head under running water during or after use for optimal performance.

Image: The eboboin BS-8012 Electric Rotary Shaver submerged in water, demonstrating its IPX7 waterproof rating. Insets show a man using the shaver with foam for a wet shave and another man using it for a dry shave.

Travel Lock Function

- To activate the travel lock, press and hold the power button for 3 seconds. The travel lock indicator will appear on the LED display. This prevents accidental activation during travel.
- To deactivate the travel lock, press and hold the power button for 3 seconds again. The indicator will disappear, and the shaver will be ready for use.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your shaver. The shaver features a cleaning reminder on its LED display.

Cleaning the Shaver Head

1. Ensure the shaver is turned off and disconnected from any charging cable.

2. The shaver head is magnetically attached. Gently pull the shaving head assembly upwards to detach it from the shaver body.
3. Rinse the detached shaving head under warm running water to remove hair clippings and residue.
4. Use the provided cleaning brush to remove stubborn hair particles from the blades and inner chamber.
5. Rinse both the shaving head and the shaver body (if necessary) thoroughly.
6. Allow all parts to air dry completely before reattaching the shaving head.
7. Align the shaving head with the shaver body and gently push down until it clicks into place, secured by the magnets.



Image: The eboboin BS-8012 Electric Rotary Shaver with its magnetic shaving head detached, illustrating the ease of cleaning.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Shaver does not turn on.	Low battery or travel lock is active.	Charge the shaver. Deactivate travel lock by pressing and holding the power button for 3 seconds.
Poor shaving performance.	Shaver head is dirty or blades are dull.	Clean the shaver head thoroughly. Consider replacing the shaving head if performance does not improve after cleaning (replacement heads sold separately, if available).
Shaver stops during use.	Battery is depleted.	Recharge the shaver.
Charging indicator not working.	Cable or power source issue.	Ensure the Type-C USB cable is securely connected. Try a different USB power source or cable.

Specifications

- **Model Name:** BS-8012 (Item model number: TXD09)
- **Brand:** eboboin
- **Shaving System:** 3-Blade Rotary with 4D Floating Heads
- **Waterproof Rating:** IPX7 (Wet & Dry Use)
- **Charging Type:** USB Type-C
- **Charging Time:** Approximately 1.5 hours
- **Run Time:** Over 90 minutes on a single charge
- **Special Features:** Digital Battery Display, Cleaning Reminder, Overvoltage Protection, Travel Lock, Magnetic Head
- **Recommended Uses:** Beard, Face, Mustache, Nose, Nose Hair
- **Package Dimensions:** 7.2 x 3.5 x 2.76 inches
- **Item Weight:** 8.78 ounces
- **Manufacturer:** eboboin

Warranty and Support

This eboboin product is manufactured by eboboin. For any product-related inquiries or support, please contact the manufacturer directly or refer to the seller's support channels.

Protection Plans

Extended protection plans may be available for purchase separately:

- **2-Year Protection Plan:** Available for purchase.
- **3-Year Protection Plan:** Available for purchase.
- **Complete Protect:** A monthly plan covering eligible past and future purchases.

For details on purchasing these plans, please refer to the product listing or contact your retailer.

© 2025 eboboin. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My eboboin BS-8012 shaver stopped working after only two months of use; how can I request a warranty replacement?

We are sorry to hear that your eboboin BS-8012 shaver has stopped working. Before proceeding with a warranty claim, please check if the Travel Lock is active, as this is a common reason the...

Read full answer

Open the live page

https://manuals.plus/asin/B0G42DJ78N

More documents and user manuals: **https://manuals.plus/**